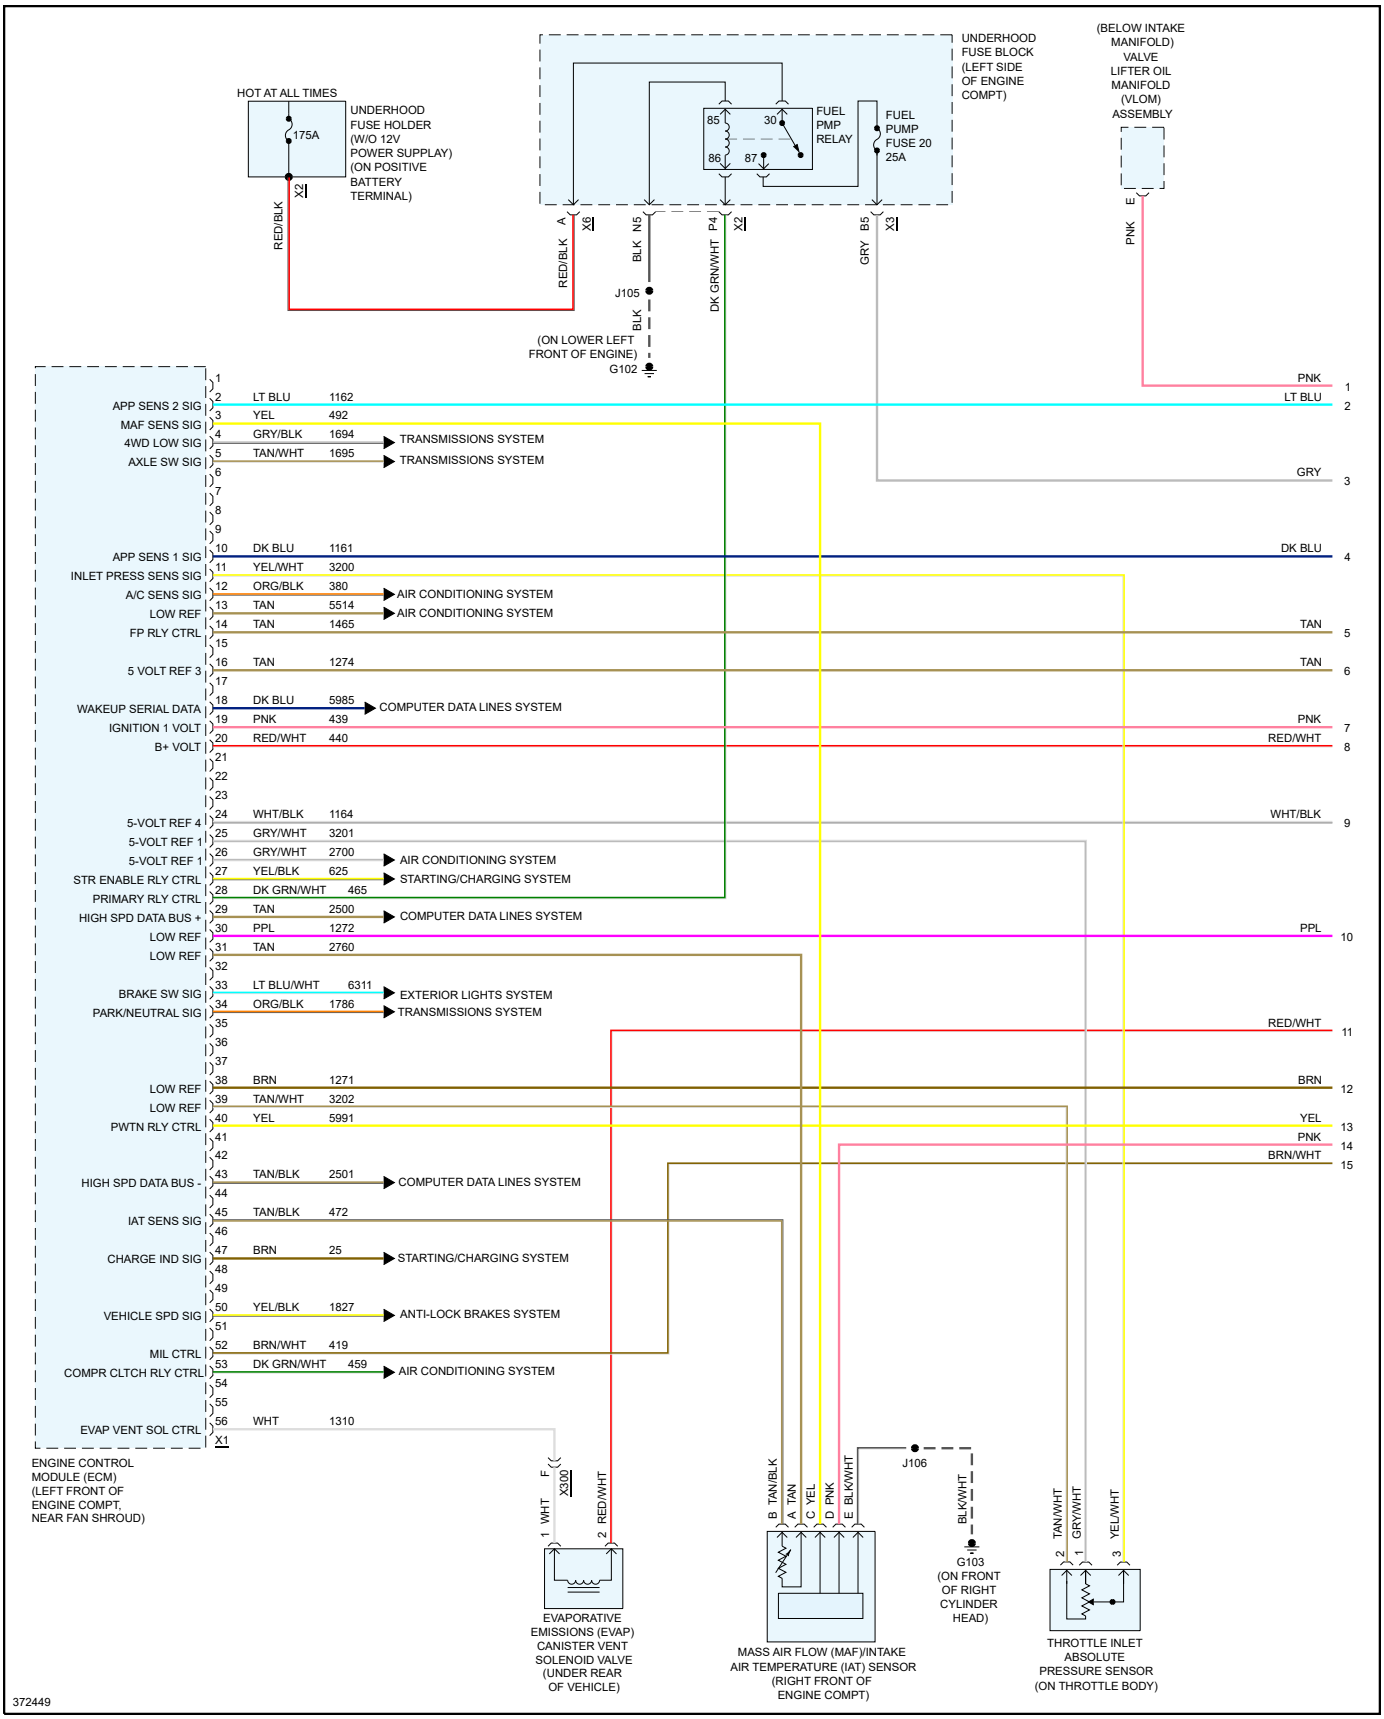
2012 Chevy Truck Silverado 2500 2WD V8-6.0L

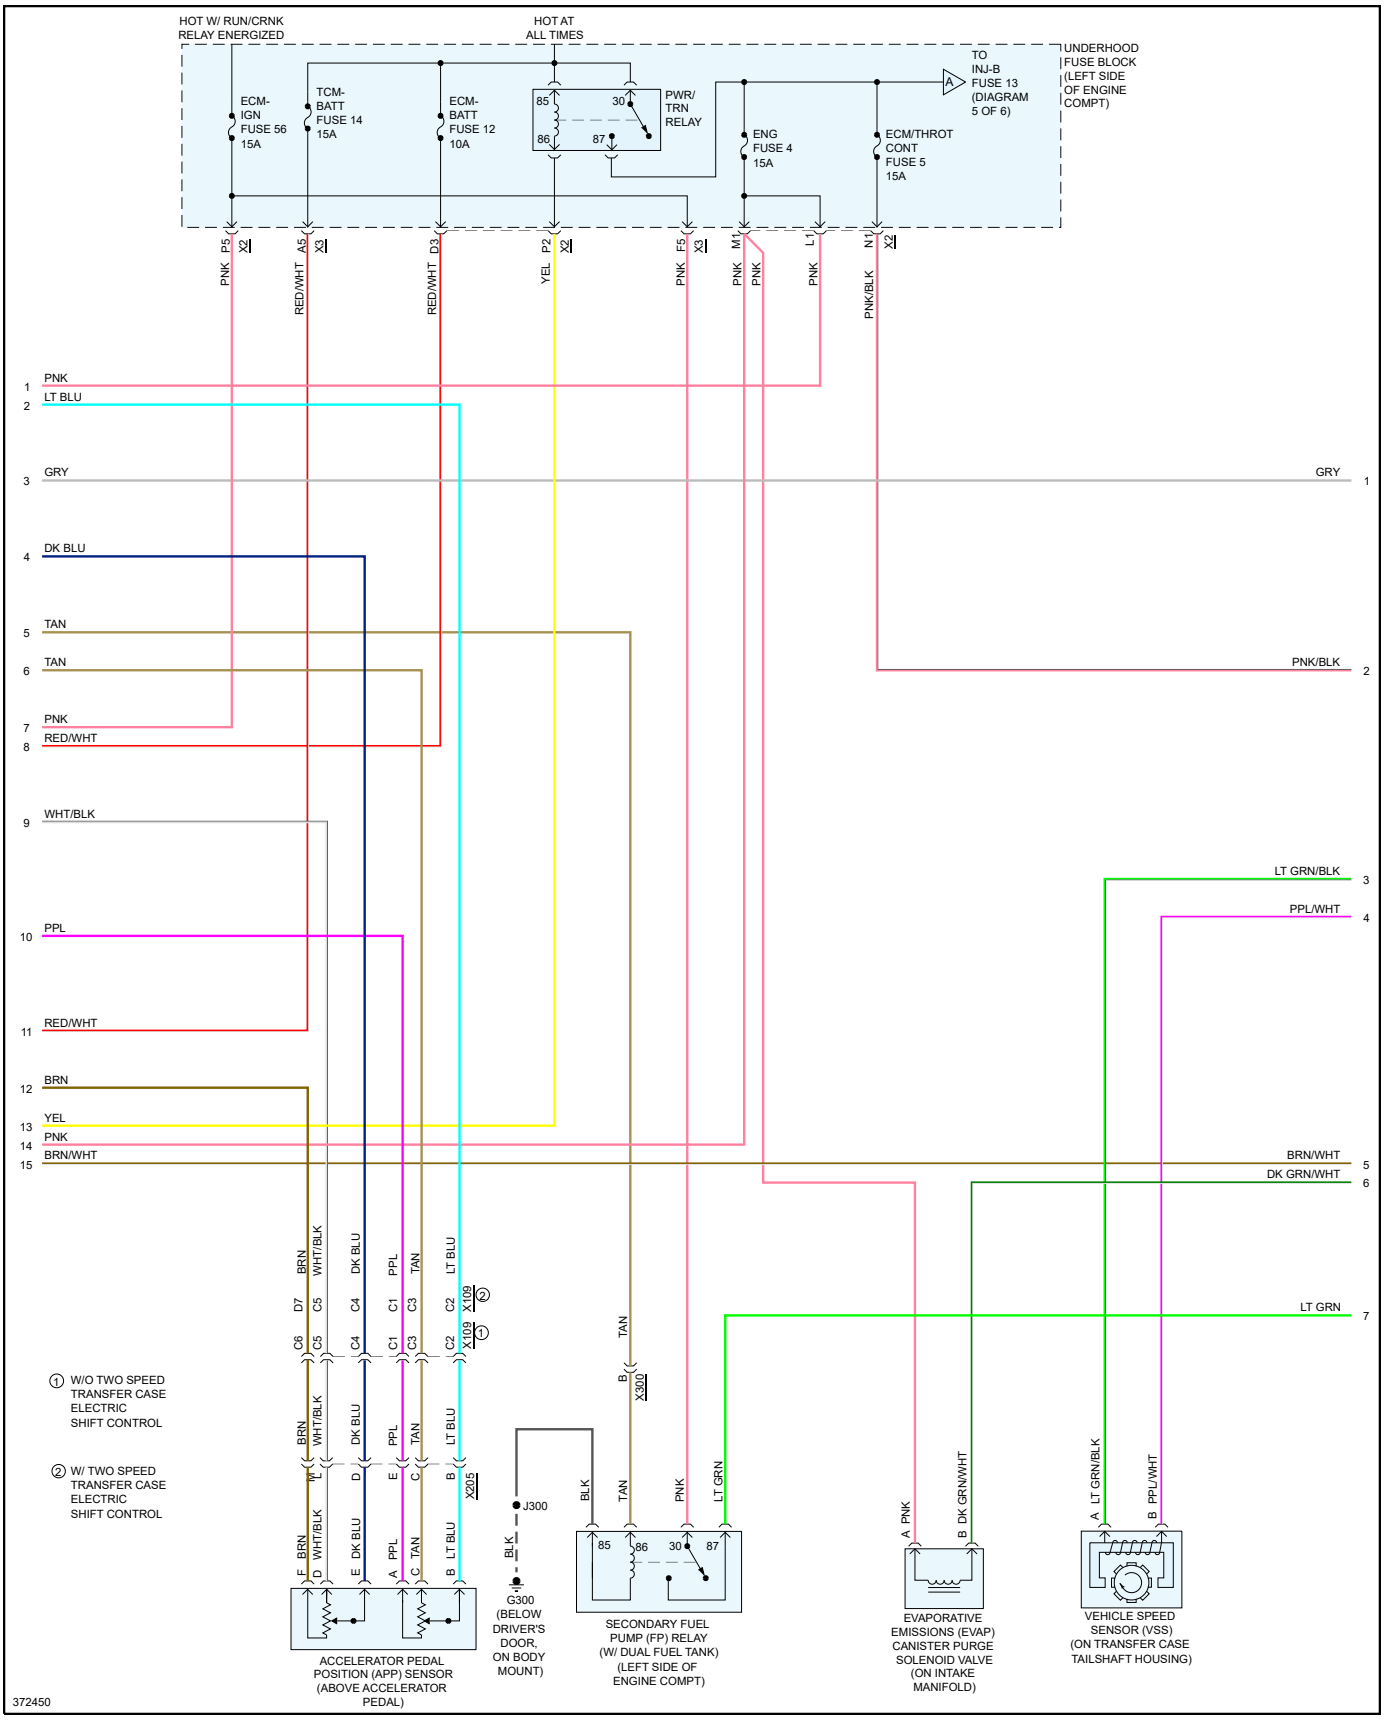
Vehicle > Powertrain Management > Diagrams > Electrical - Interactive Color (Non OE)

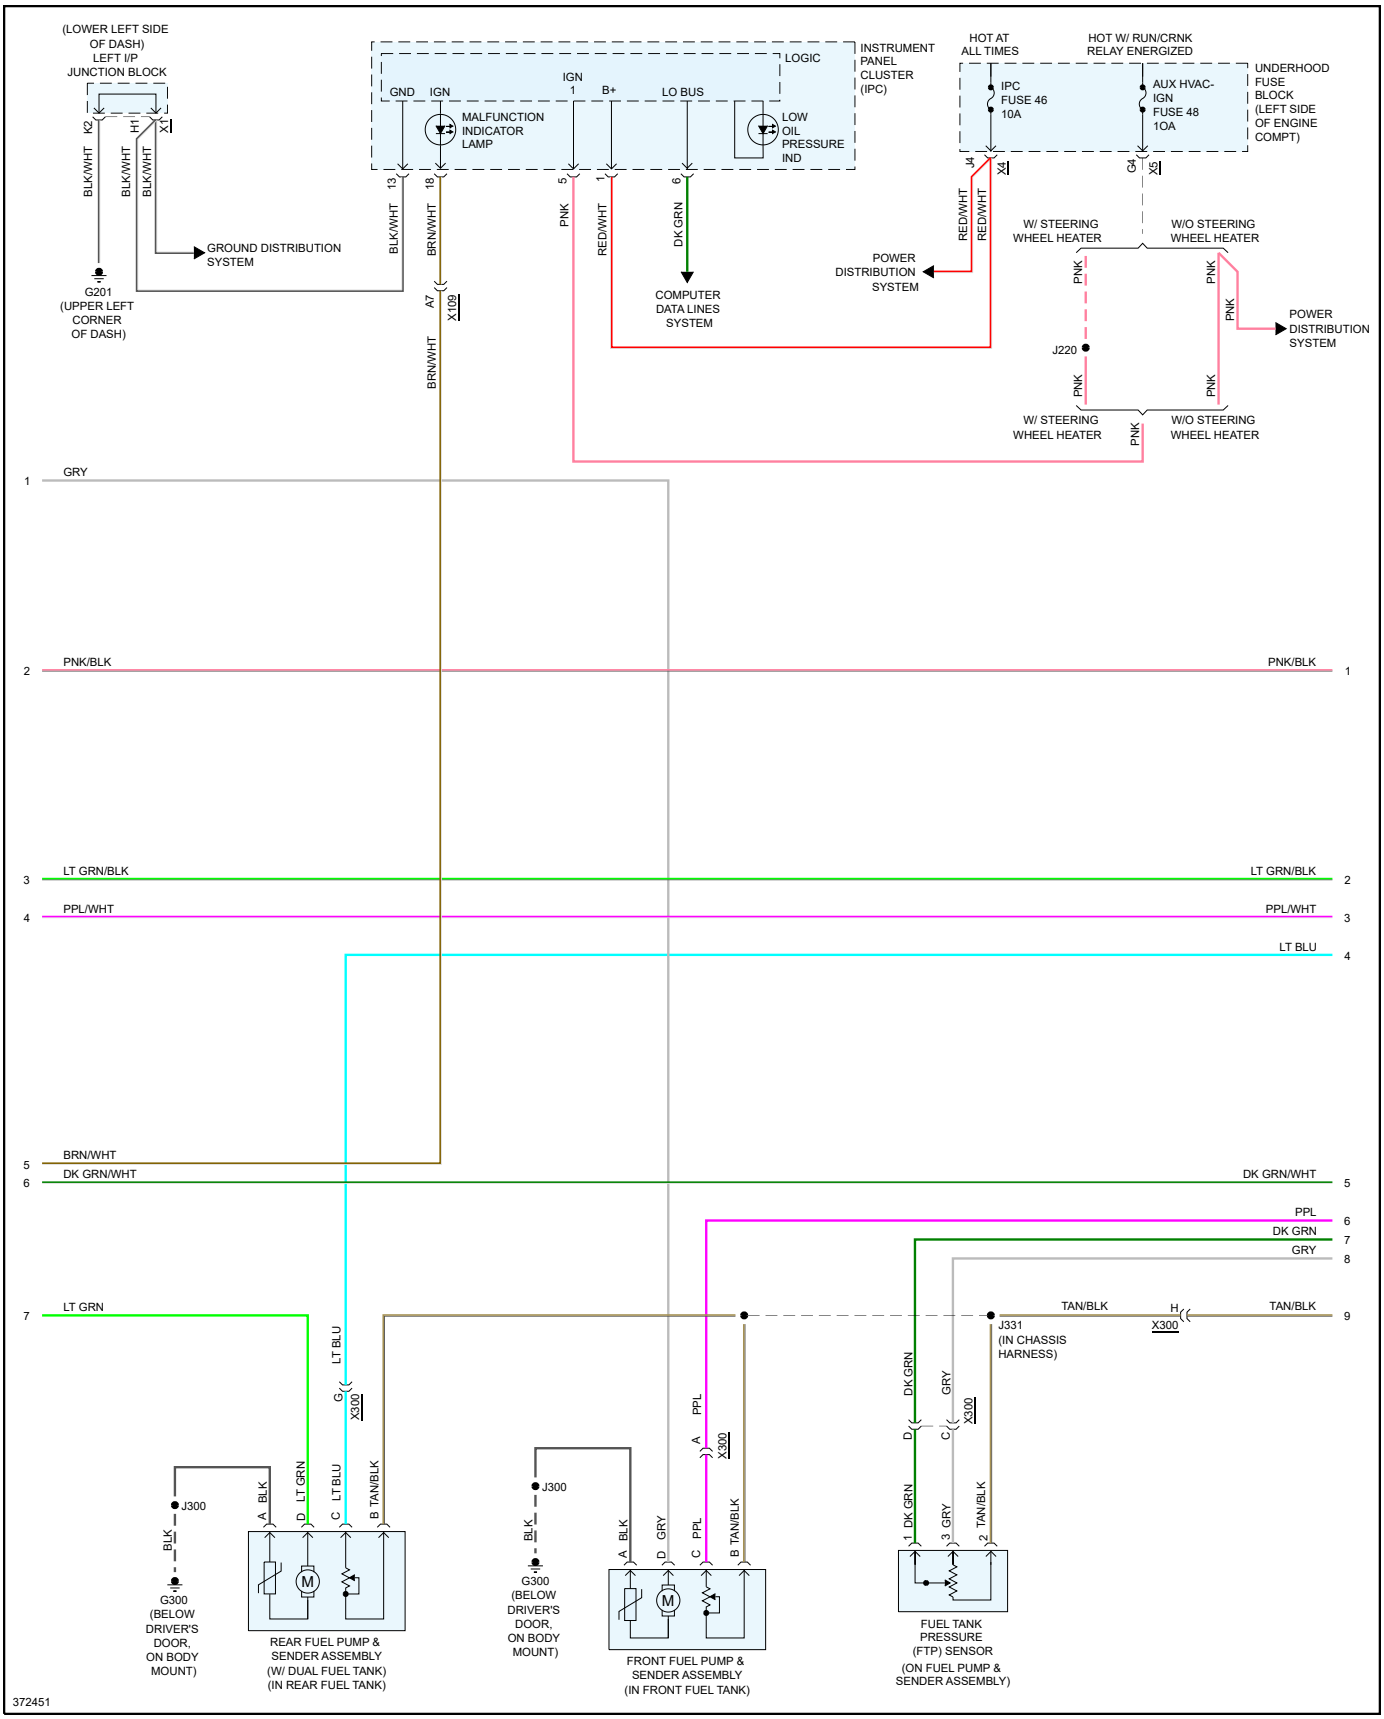
ENGINE CONTROLS

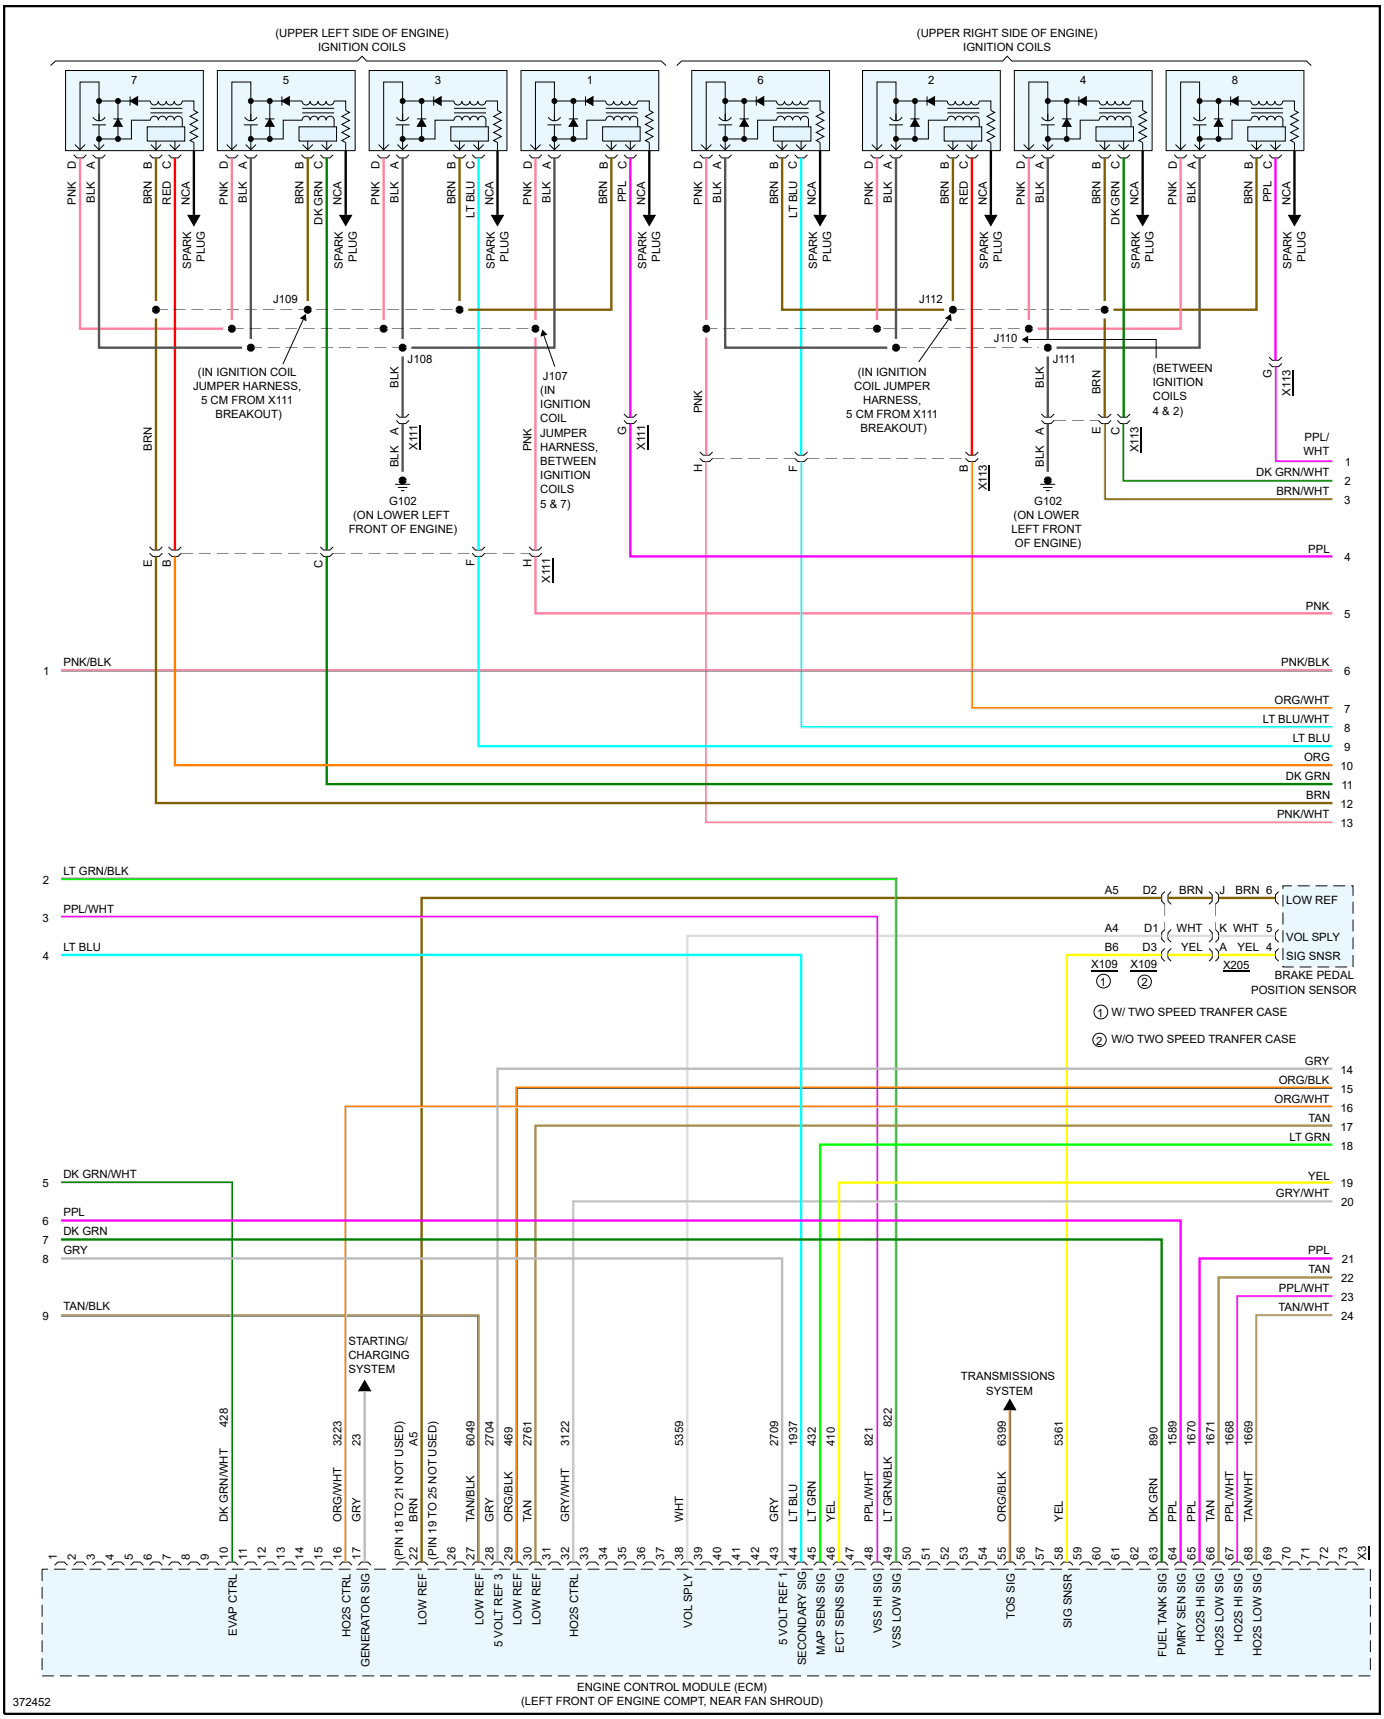
Engine Controls

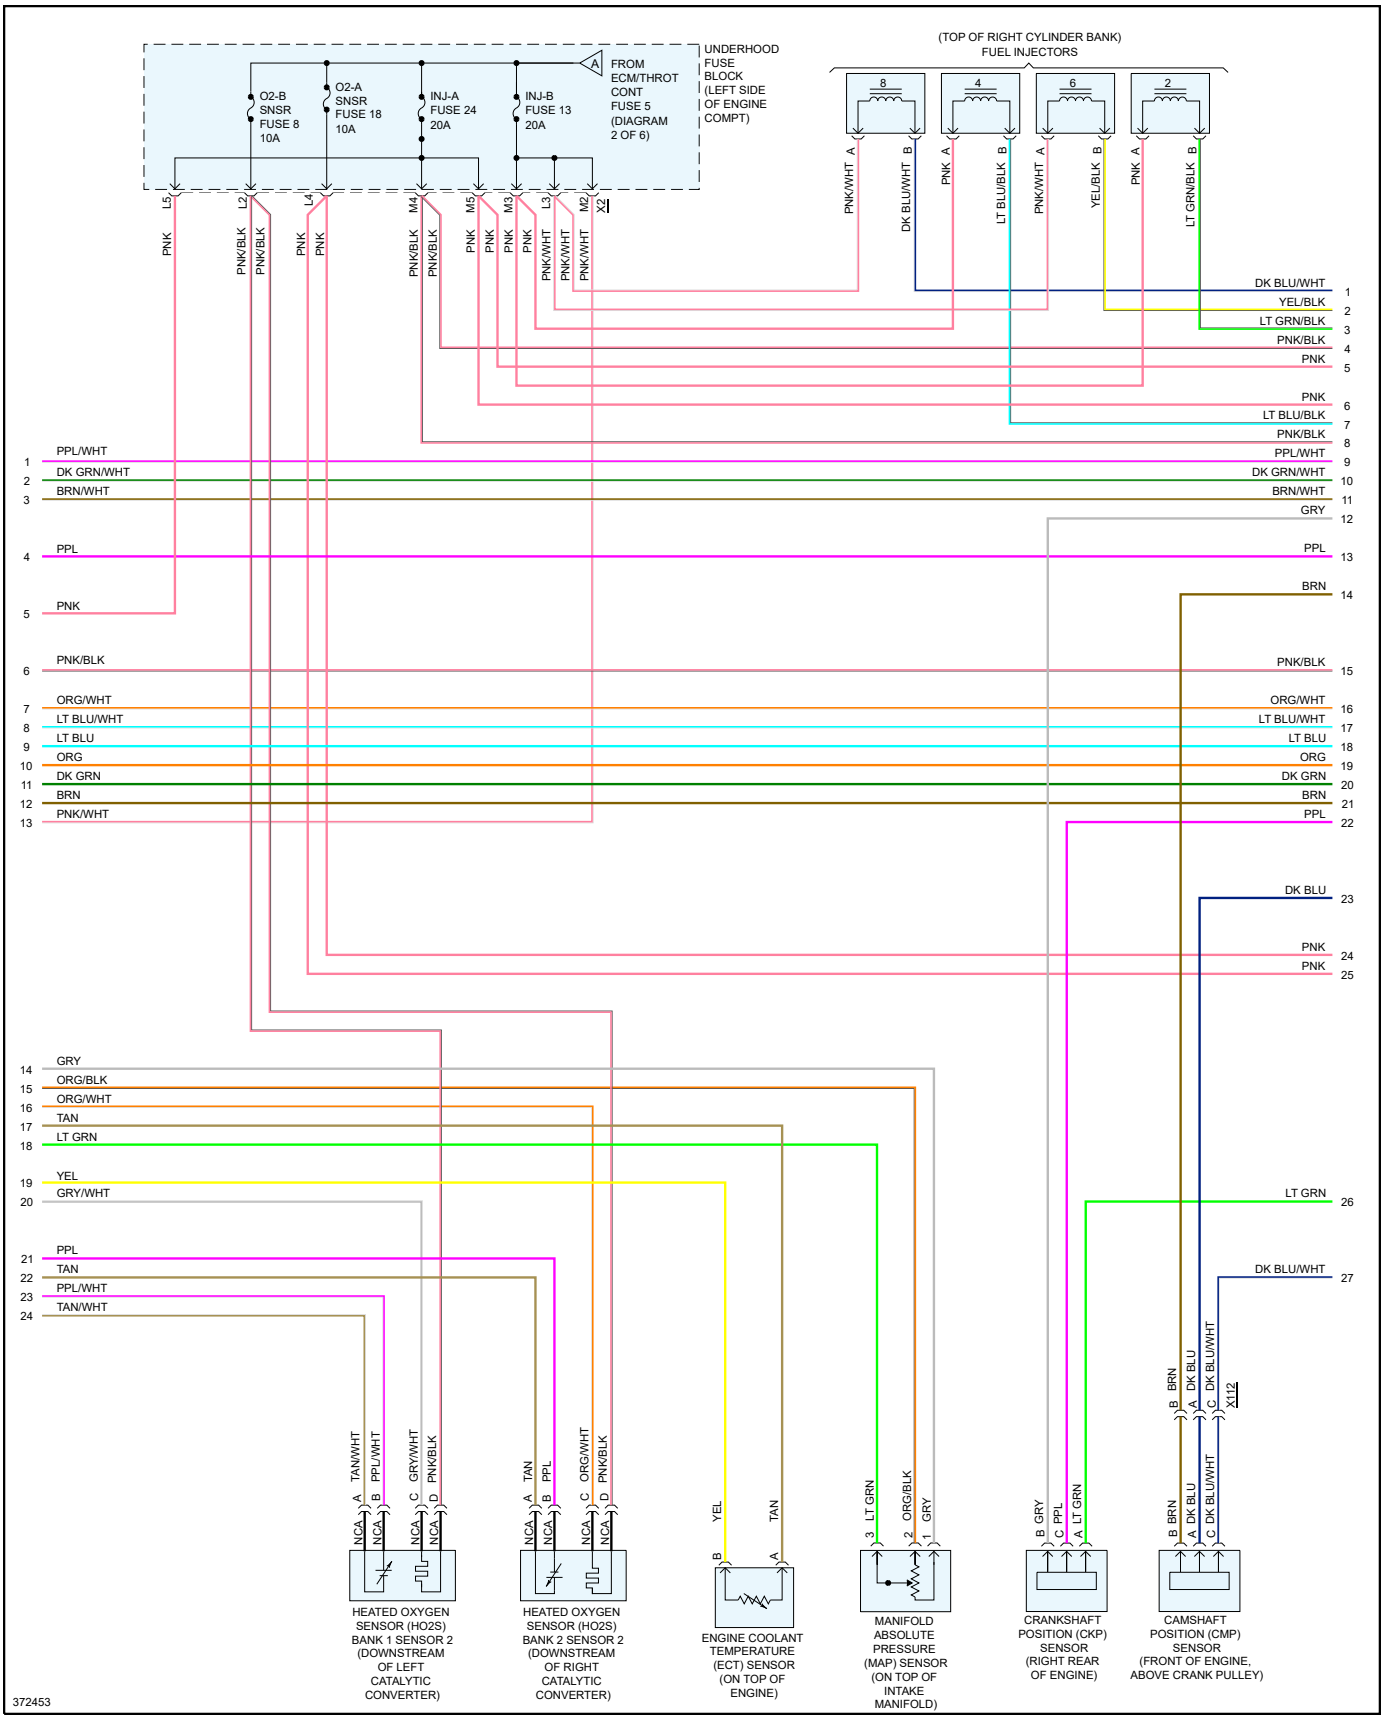
Page 1 of 6

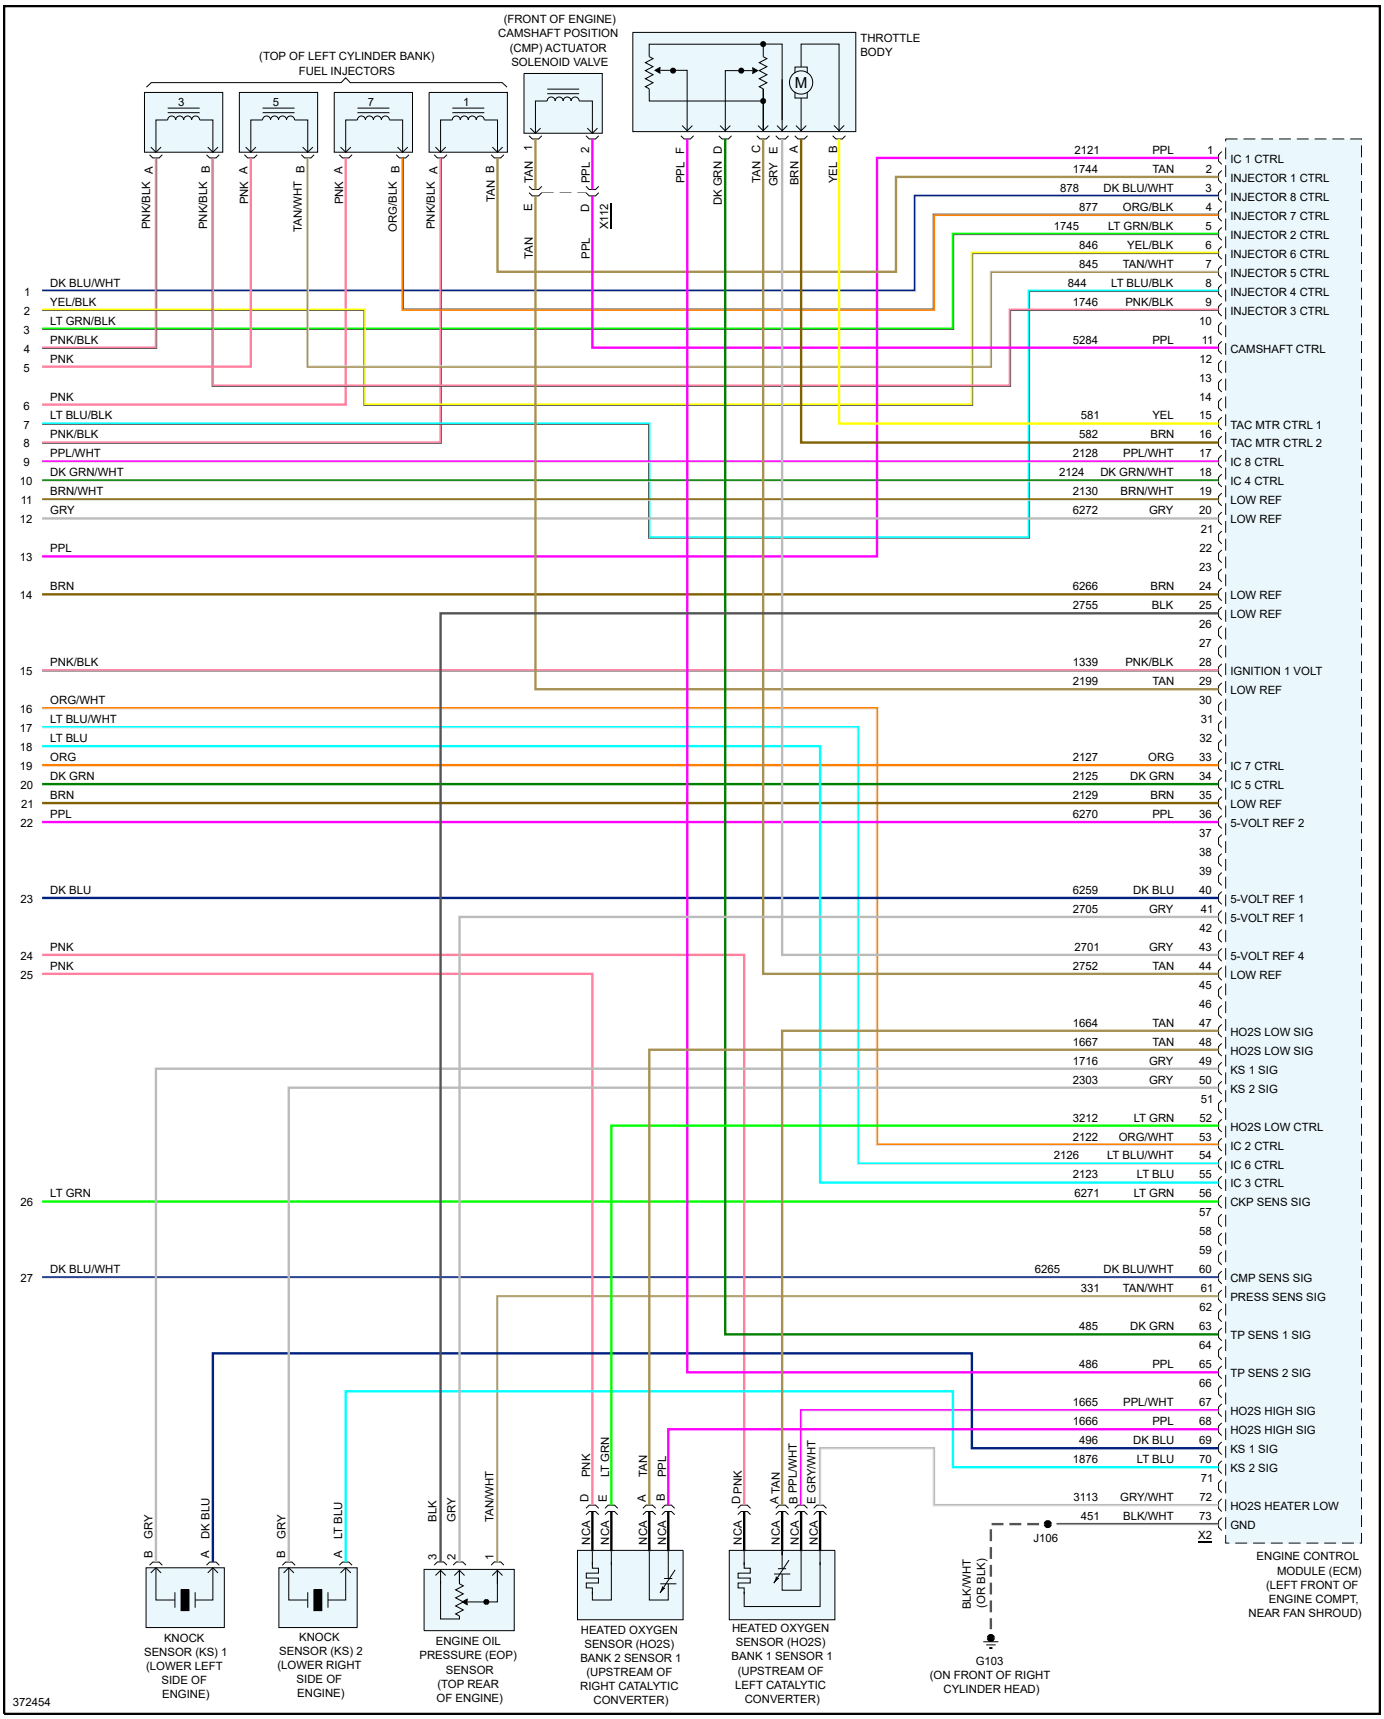

HOT AT ALL TIMES
175A
UNDERHOOD FUSE HOLDER (W/O 12V POWER SUPPLAY) (ON POSITIVE BATTERY TERMINAL)
X2
RED/BLK
UNDERHOOD FUSE BLOCK (LEFT SIDE OF ENGINE COMPT)
85
30
86
87
FUEL PMP RELAY
FUEL PUMP FUSE 20 25A
A
X6
RED/BLK
N5
BLK
J105
BLK
(ON LOWER LEFT FRONT OF ENGINE)
G102
P4
X2
DK GRN/WHT
B5
X3
GRY
(BELOW INTAKE MANIFOLD) VALVE LIFTER OIL MANIFOLD (VLOM) ASSEMBLY
E
PNK
PNK 1
LT BLU 2
GRY 3
DK BLU 4
TAN 5
TAN 6
PNK 7
RED/WHT 8
WHT/BLK 9
PPL 10
RED/WHT 11
BRN 12
YEL 13
PNK 14
BRN/WHT 15
1 APP SENS 2 SIG LT BLU 1162
2 MAF SENS SIG YEL 492
3 4WD LOW SIG GRY/BLK 1694 TRANSMISSIONS SYSTEM
4 AXLE SW SIG TAN/WHT 1695 TRANSMISSIONS SYSTEM
5
6
7
8
9
10 APP SENS 1 SIG DK BLU 1161
11 INLET PRESS SENS SIG YEL/WHT 3200
12 A/C SENS SIG ORG/BLK 380 AIR CONDITIONING SYSTEM
13 LOW REF TAN 5514 AIR CONDITIONING SYSTEM
14 FP RLY CTRL TAN 1465
15
16 5 VOLT REF 3 TAN 1274
17
18 WAKEUP SERIAL DATA DK BLU 5985 COMPUTER DATA LINES SYSTEM
19 IGNITION 1 VOLT PNK 439
20 B+ VOLT RED/WHT 440
21
22
23
24 5-VOLT REF 4 WHT/BLK 1164
25 5-VOLT REF 1 GRY/WHT 3201
26 5-VOLT REF 1 GRY/WHT 2700 AIR CONDITIONING SYSTEM
27 STR ENABLE RLY CTRL YEL/BLK 625 STARTING/CHARGING SYSTEM
28 PRIMARY RLY CTRL DK GRN/WHT 465
29 HIGH SPD DATA BUS + TAN 2500 COMPUTER DATA LINES SYSTEM
30 LOW REF PPL 1272
31 LOW REF TAN 2760
32
33 BRAKE SW SIG LT BLU/WHT 6311 EXTERIOR LIGHTS SYSTEM
34 PARK/NEUTRAL SIG ORG/BLK 1786 TRANSMISSIONS SYSTEM
35
36
37
38 LOW REF BRN 1271
39 LOW REF TAN/WHT 3202
40 PWTN RLY CTRL YEL 5991
41
42
43 HIGH SPD DATA BUS - TAN/BLK 2501 COMPUTER DATA LINES SYSTEM
44
45 IAT SENS SIG TAN/BLK 472
46
47 CHARGE IND SIG BRN 25 STARTING/CHARGING SYSTEM
48
49
50 VEHICLE SPD SIG YEL/BLK 1827 ANTI-LOCK BRAKES SYSTEM
51
52 MIL CTRL BRN/WHT 419
53 COMPR CLTCH RLY CTRL DK GRN/WHT 459 AIR CONDITIONING SYSTEM
54
55
56 EVAP VENT SOL CTRL WHT 1310
X1
ENGINE CONTROL MODULE (ECM) (LEFT FRONT OF ENGINE COMPT, NEAR FAN SHROUD)
F
X300
1 WHT
2 RED/WHT
EVAPORATIVE EMISSIONS (EVAP) CANISTER VENT SOLENOID VALVE (UNDER REAR OF VEHICLE)
B TAN/BLK
A TAN
C YEL
D PNK
E BLK/WHT
J106
BLK/WHT
G103
(ON FRONT OF RIGHT CYLINDER HEAD)
MASS AIR FLOW (MAF)/INTAKE AIR TEMPERATURE (IAT) SENSOR (RIGHT FRONT OF ENGINE COMPT)
2 TAN/WHT
1 GRY/WHT
3 YEL/WHT
THROTTLE INLET ABSOLUTE PRESSURE SENSOR (ON THROTTLE BODY)
372449


HOT W/ RUN/CRNK RELAY ENERGIZED
HOT AT ALL TIMES
ECM-IGN FUSE 56 15A
TCM-BATT FUSE 14 15A
ECM-BATT FUSE 12 10A
PWR/TRN RELAY
ENG FUSE 4 15A
ECM/THROT CONT FUSE 5 15A
TO INJ-B FUSE 13 (DIAGRAM 5 OF 6)
UNDERHOOD FUSE BLOCK (LEFT SIDE OF ENGINE COMPT)
PNK
LT BLU
GRY
DK BLU
TAN
PNK/BLK
RED/WHT
WHT/BLK
PPL
LT GRN/BLK
PPL/WHT
BRN
YEL
BRN/WHT
DK GRN/WHT
LT GRN
① W/O TWO SPEED TRANSFER CASE ELECTRIC SHIFT CONTROL
② W/ TWO SPEED TRANSFER CASE ELECTRIC SHIFT CONTROL
ACCELERATOR PEDAL POSITION (APP) SENSOR (ABOVE ACCELERATOR PEDAL)
G300 (BELOW DRIVER'S DOOR, ON BODY MOUNT)
SECONDARY FUEL PUMP (FP) RELAY (W/ DUAL FUEL TANK) (LEFT SIDE OF ENGINE COMPT)
EVAPORATIVE EMISSIONS (EVAP) CANISTER PURGE SOLENOID VALVE (ON INTAKE MANIFOLD)
VEHICLE SPEED SENSOR (VSS) (ON TRANSFER CASE TAILSHAFT HOUSING)
372450


(LOWER LEFT SIDE OF DASH) LEFT I/P JUNCTION BLOCK
K2
H1
X1
BLK/WHT
BLK/WHT
BLK/WHT
GROUND DISTRIBUTION SYSTEM
G201 (UPPER LEFT CORNER OF DASH)
INSTRUMENT PANEL CLUSTER (IPC)
LOGIC
GND
IGN
IGN 1
B+
LO BUS
MALFUNCTION INDICATOR LAMP
LOW OIL PRESSURE IND
13
18
5
1
6
BLK/WHT
BRN/WHT
PNK
RED/WHT
DK GRN
A7
X109
BRN/WHT
COMPUTER DATA LINES SYSTEM
HOT AT ALL TIMES
HOT W/ RUN/CRNK RELAY ENERGIZED
IPC FUSE 46 10A
AUX HVAC-IGN FUSE 48 10A
UNDERHOOD FUSE BLOCK (LEFT SIDE OF ENGINE COMPT)
J4
X1
G4
X5
RED/WHT
RED/WHT
POWER DISTRIBUTION SYSTEM
W/ STEERING WHEEL HEATER
W/O STEERING WHEEL HEATER
PNK
PNK
PNK
PNK
J220
PNK
PNK
POWER DISTRIBUTION SYSTEM
W/ STEERING WHEEL HEATER
PNK
W/O STEERING WHEEL HEATER
1 GRY
2 PNK/BLK
PNK/BLK 1
3 LT GRN/BLK
LT GRN/BLK 2
4 PPL/WHT
PPL/WHT 3
LT BLU 4
5 BRN/WHT
6 DK GRN/WHT
DK GRN/WHT 5
PPL 6
DK GRN 7
GRY 8
7 LT GRN
TAN/BLK
H
X300
TAN/BLK 9
J331 (IN CHASSIS HARNESS)
LT BLU
G
X300
DK GRN
GRY
D
C
X300
PPL
A
X300
J300
BLK
G300 (BELOW DRIVER'S DOOR, ON BODY MOUNT)
A BLK
D LT GRN
C LT BLU
B TAN/BLK
REAR FUEL PUMP & SENDER ASSEMBLY (W/ DUAL FUEL TANK) (IN REAR FUEL TANK)
J300
BLK
G300 (BELOW DRIVER'S DOOR, ON BODY MOUNT)
A BLK
D GRY
C PPL
B TAN/BLK
FRONT FUEL PUMP & SENDER ASSEMBLY (IN FRONT FUEL TANK)
1 DK GRN
3 GRY
2 TAN/BLK
FUEL TANK PRESSURE (FTP) SENSOR (ON FUEL PUMP & SENDER ASSEMBLY)
372451


(UPPER LEFT SIDE OF ENGINE)
IGNITION COILS
(UPPER RIGHT SIDE OF ENGINE)
IGNITION COILS
SPARK PLUG
J109
J112
J110
J111
J108
J107 (IN IGNITION COIL JUMPER HARNESS, BETWEEN IGNITION COILS 5 & 7)
(IN IGNITION COIL JUMPER HARNESS, 5 CM FROM X111 BREAKOUT)
(BETWEEN IGNITION COILS 4 & 2)
G102 (ON LOWER LEFT FRONT OF ENGINE)
PNK/BLK
ORG/WHT
LT BLU/WHT
LT BLU
ORG
DK GRN
BRN
PNK/WHT
PPL
PNK
PPL/WHT
DK GRN/WHT
BRN/WHT
LT GRN/BLK
PPL/WHT
LT BLU
LOW REF
VOL SPLY
SIG SNSR
BRAKE PEDAL POSITION SENSOR
W/ TWO SPEED TRANFER CASE
W/O TWO SPEED TRANFER CASE
GRY
ORG/BLK
ORG/WHT
TAN
LT GRN
YEL
GRY/WHT
DK GRN/WHT
PPL
DK GRN
GRY
TAN/BLK
TAN
PPL/WHT
TAN/WHT
STARTING/ CHARGING SYSTEM
TRANSMISSIONS SYSTEM
EVAP CTRL
HO2S CTRL
GENERATOR SIG
LOW REF
5 VOLT REF 3
VOL SPLY
5 VOLT REF 1
SECONDARY SIG
MAP SENS SIG
ECT SENS SIG
VSS HI SIG
VSS LOW SIG
TOS SIG
SIG SNSR
FUEL TANK SIG
PMRY SEN SIG
ENGINE CONTROL MODULE (ECM)
(LEFT FRONT OF ENGINE COMPT, NEAR FAN SHROUD)
372452


UNDERHOOD FUSE BLOCK (LEFT SIDE OF ENGINE COMPT)
FROM ECM/THROT CONT FUSE 5 (DIAGRAM 2 OF 6)
O2-B SNSR FUSE 8 10A
O2-A SNSR FUSE 18 10A
INJ-A FUSE 24 20A
INJ-B FUSE 13 20A
(TOP OF RIGHT CYLINDER BANK) FUEL INJECTORS
HEATED OXYGEN SENSOR (HO2S) BANK 1 SENSOR 2 (DOWNSTREAM OF LEFT CATALYTIC CONVERTER)
HEATED OXYGEN SENSOR (HO2S) BANK 2 SENSOR 2 (DOWNSTREAM OF RIGHT CATALYTIC CONVERTER)
ENGINE COOLANT TEMPERATURE (ECT) SENSOR (ON TOP OF ENGINE)
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR (ON TOP OF INTAKE MANIFOLD)
CRANKSHAFT POSITION (CKP) SENSOR (RIGHT REAR OF ENGINE)
CAMSHAFT POSITION (CMP) SENSOR (FRONT OF ENGINE, ABOVE CRANK PULLEY)
372453


(TOP OF LEFT CYLINDER BANK) FUEL INJECTORS
(FRONT OF ENGINE) CAMSHAFT POSITION (CMP) ACTUATOR SOLENOID VALVE
THROTTLE BODY
X112
X2
J106
G103 (ON FRONT OF RIGHT CYLINDER HEAD)
BLK/WHT (OR BLK)
ENGINE CONTROL MODULE (ECM) (LEFT FRONT OF ENGINE COMPT, NEAR FAN SHROUD)
KNOCK SENSOR (KS) 1 (LOWER LEFT SIDE OF ENGINE)
KNOCK SENSOR (KS) 2 (LOWER RIGHT SIDE OF ENGINE)
ENGINE OIL PRESSURE (EOP) SENSOR (TOP REAR OF ENGINE)
HEATED OXYGEN SENSOR (HO2S) BANK 2 SENSOR 1 (UPSTREAM OF RIGHT CATALYTIC CONVERTER)
HEATED OXYGEN SENSOR (HO2S) BANK 1 SENSOR 1 (UPSTREAM OF LEFT CATALYTIC CONVERTER)
372454