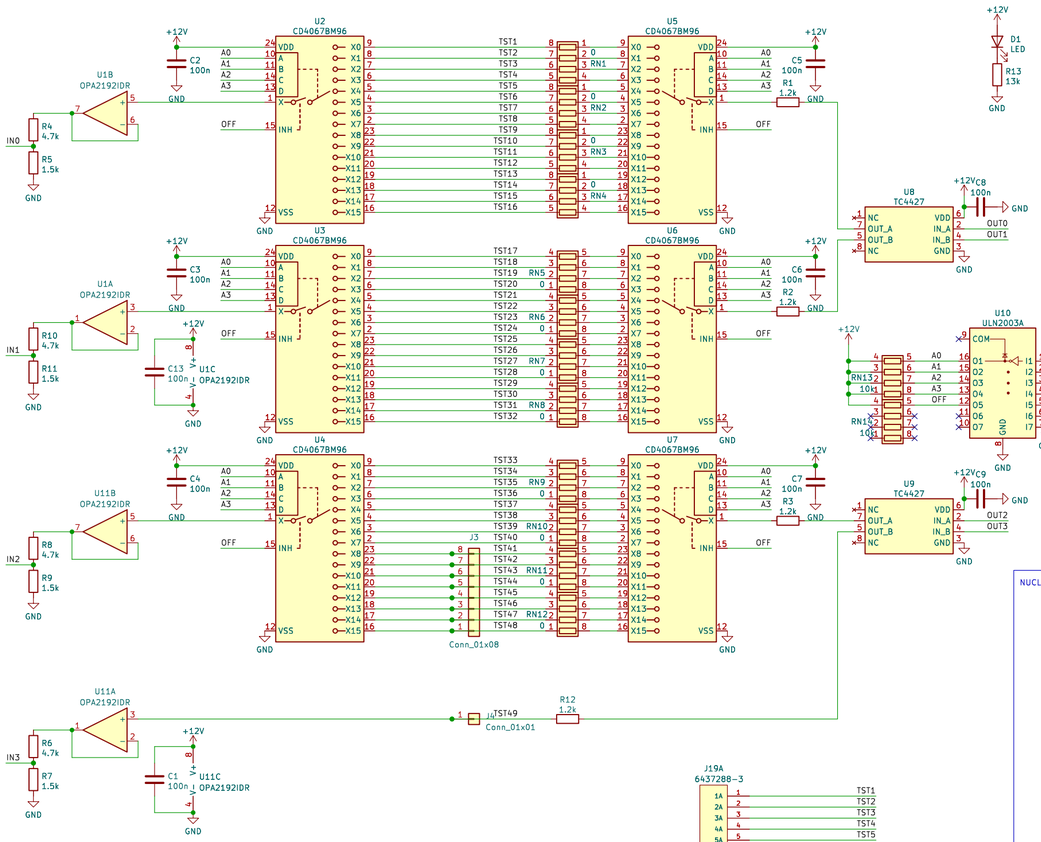

U2
CD4067BM96
U5
CD4067BM96
U3
CD4067BM96
U6
CD4067BM96
U4
CD4067BM96
U7
CD4067BM96
U1A
OPA2192IDR
U1B
OPA2192IDR
U1C
OPA2192IDR
U11A
OPA2192IDR
U11B
OPA2192IDR
U11C
OPA2192IDR
U8
TC4427
U9
TC4427
U10
ULN2003A
U12
TJA1051T-3
U13
TJA1051T-3
D1
LED
J1
6437288-2
J19A
6437288-3
J19B
6437288-3
J3
Conn_01x08
J4
Conn_01x01
J6
Conn_01x04
J7
Conn_01x04
J8
Conn_01x04
J9
Conn_01x04
J2
Barrel_Jack_Switch
F1
1.8A
CB1
U14
LM78M05_TO252
C17
10u
C18
10u
Q1
AO3400A
Q2
AO3400A
Q3
AO3400A
Q4
AO3400A
Q5
AO3400A
Q6
AO3400A
Q7
AO3400A
Q8
AO3400A
F2
nSMD005
F3
nSMD005
F4
nSMD005
F5
nSMD005
F6
nSMD005
F7
nSMD005
F8
nSMD005
F9
nSMD005
R14
4.7k
R15
4.7k
R16
4.7k
R17
4.7k
R18
4.7k
R19
4.7k
R20
4.7k
R21
4.7k
DIG_0
DIG_1
DIG_2
DIG_3
DIG_4
DIG_5
DIG_6
DIG_7
OUT_DIG_0
OUT_DIG_1
OUT_DIG_2
OUT_DIG_3
OUT_DIG_4
OUT_DIG_5
OUT_DIG_6
OUT_DIG_7
NUCLEO-F429ZI
J20
J21
J23
J25
J30
J22
J24
J26
J29
J27
J28
Pins PA11/PA12 are used as USB on the Nucleo board
CAN2_RX
CAN2_TX
MUX_OFF
ADR3
OUT2
OUT1
OUT0
ADR0
ADR1
ADR2
CAN_TX
CAN_RX
CAN_H
CAN_L
D2
PESD1CAN
D6
PESD1CAN
C10
47p
C11
47p
C12
100n
C14
47p
C15
47p
C16
100n
R56
DNP
R62
DNP
P18
P19
D3
LED-RED-0603
D4
LED-RED-0603
R60
4.7k
R57
4.7k
H1
MountingHole
H2
MountingHole
H3
MountingHole
H4
MountingHole
H5
MountingHole
Sheet: /
File: digital_inputs.kicad_sch
Title: stim
Size: A2
Date: 2024-10-20
Rev: D
KiCad E.D.A. 8.0.9
Id: 1/1