

# Software Requirements Specification

**MEA-V2G / FreeV2G**

Reference Implementation for ISO 15118 EV/EVSE

Ruslee Sutthaweeikul

January 7, 2026

# Contents

|          |                                            |           |
|----------|--------------------------------------------|-----------|
| <b>1</b> | <b>Introduction</b>                        | <b>4</b>  |
| 1.1      | Purpose . . . . .                          | 4         |
| 1.2      | Scope . . . . .                            | 4         |
| 1.3      | Definitions and Acronyms . . . . .         | 4         |
| <b>2</b> | <b>Overall Description</b>                 | <b>5</b>  |
| 2.1      | Product Perspective . . . . .              | 5         |
| 2.2      | System Functions . . . . .                 | 5         |
| 2.3      | Use Case Diagram . . . . .                 | 5         |
| 2.4      | System Architecture . . . . .              | 5         |
| 2.5      | EV State Machine . . . . .                 | 5         |
| 2.6      | EVSE State Machine . . . . .               | 6         |
| 2.7      | State Synchronization . . . . .            | 9         |
| 2.8      | Charging Loop Sequence . . . . .           | 9         |
| 2.8.1    | Detailed Implementation Sequence . . . . . | 9         |
| 2.8.2    | CSMS-EVSE-EV Interaction . . . . .         | 12        |
| 2.9      | Core Components . . . . .                  | 12        |
| 2.9.1    | Whitebeet Component . . . . .              | 12        |
| 2.9.2    | EV Component . . . . .                     | 14        |
| 2.9.3    | EVSE Component . . . . .                   | 14        |
| 2.9.4    | OCPP Component . . . . .                   | 14        |
| 2.10     | Charger Component . . . . .                | 14        |
| 2.10.1   | Implementing a Custom Charger . . . . .    | 15        |
| 2.10.2   | TRIO-HP Charger Protocol . . . . .         | 16        |
| 2.11     | Battery Component . . . . .                | 18        |
| 2.12     | Default Charging Routine . . . . .         | 19        |
| 2.12.1   | Default Schedule . . . . .                 | 19        |
| 2.12.2   | Physics Simulation Parameters . . . . .    | 19        |
| 2.13     | Project File Structure . . . . .           | 19        |
| <b>3</b> | <b>Specific Requirements</b>               | <b>21</b> |
| 3.1      | External Interfaces . . . . .              | 21        |
| 3.1.1    | Communication Interfaces . . . . .         | 21        |
| 3.1.2    | User Interfaces . . . . .                  | 21        |
| 3.2      | Functional Requirements . . . . .          | 21        |
| 3.2.1    | FR-01: Protocol Negotiation . . . . .      | 21        |
| 3.2.2    | FR-01-A: OCPP Version Selection . . . . .  | 21        |
| 3.2.3    | FR-02: Authorization . . . . .             | 22        |
| 3.2.4    | FR-03: Charging Control . . . . .          | 22        |
| 3.2.5    | FR-04: OCPP Integration . . . . .          | 22        |

|          |                                                         |           |
|----------|---------------------------------------------------------|-----------|
| 3.3      | Communication Flow . . . . .                            | 22        |
| 3.3.1    | OCPP 1.6 Sequence Flow . . . . .                        | 22        |
| 3.3.2    | OCPP 2.0.1 Sequence Flow . . . . .                      | 22        |
| 3.3.3    | Key Differences: OCPP 1.6 vs 2.0.1 . . . . .            | 22        |
| 3.4      | OCPP Connector State Machine . . . . .                  | 23        |
| 3.4.1    | State Transition Logic . . . . .                        | 25        |
| 3.4.2    | EVSE to OCPP State Mapping . . . . .                    | 25        |
| <b>4</b> | <b>Configuration and Deployment</b>                     | <b>27</b> |
| 4.1      | Command Line Interface (CLI) . . . . .                  | 27        |
| 4.2      | JSON Configuration . . . . .                            | 27        |
| 4.2.1    | EV Configuration (ev.json) . . . . .                    | 27        |
| 4.2.2    | EVSE Configuration (evse.json) . . . . .                | 27        |
| 4.3      | Software Dependencies . . . . .                         | 28        |
| <b>5</b> | <b>Test Plan</b>                                        | <b>29</b> |
| 5.1      | Testing Scope . . . . .                                 | 29        |
| 5.2      | Test Environment . . . . .                              | 29        |
| 5.3      | Automated Test Strategy . . . . .                       | 29        |
| 5.3.1    | Unit Testing . . . . .                                  | 29        |
| 5.3.2    | Integration Testing . . . . .                           | 30        |
| 5.3.3    | System Testing . . . . .                                | 30        |
| 5.3.4    | System Testing with Local Mock OCPP Server . . . . .    | 30        |
| 5.3.5    | Test Execution . . . . .                                | 30        |
| 5.3.6    | Initial Test Results . . . . .                          | 31        |
| 5.4      | Test Procedures . . . . .                               | 31        |
| 5.4.1    | TC-01: System Initialization . . . . .                  | 31        |
| 5.4.2    | TC-02: EV Connection . . . . .                          | 31        |
| 5.4.3    | TC-03: Authorization . . . . .                          | 32        |
| 5.4.4    | TC-04: Charging Loop . . . . .                          | 32        |
| 5.4.5    | TC-05: Session Stop . . . . .                           | 32        |
| 5.4.6    | TC-06: Safety/Emergency Stop . . . . .                  | 32        |
| <b>6</b> | <b>MEA Compliance Strategy</b>                          | <b>33</b> |
| 6.1      | Testing Methodology . . . . .                           | 33        |
| 6.1.1    | Tier 1: Mock Testing (Module Level) . . . . .           | 33        |
| 6.1.2    | Tier 2: Live Sandbox Testing . . . . .                  | 33        |
| 6.1.3    | Connectivity Details . . . . .                          | 33        |
| 6.1.4    | Test Execution Instructions . . . . .                   | 33        |
| 6.1.5    | Tier 3: On-Site Acceptance Testing . . . . .            | 34        |
| 6.2      | OCPP 1.6 V2G Workaround (Special Test Case) . . . . .   | 34        |
| 6.2.1    | Custom Configuration Key: MEA_V2G_PowerDemand . . . . . | 34        |
| 6.3      | MEA OCPP 1.6 Compliance Verification . . . . .          | 34        |
| 6.3.1    | MEA OCPP Compliance Verification Flows . . . . .        | 39        |
| 6.4      | MEA Compliance Test Results . . . . .                   | 64        |
| <b>7</b> | <b>Reference Documents</b>                              | <b>70</b> |
| <b>A</b> | <b>OCPP 2.0.1 Protocol Details</b>                      | <b>71</b> |
| A.1      | Overview . . . . .                                      | 71        |
| A.2      | Core Message Reference . . . . .                        | 71        |
| <b>B</b> | <b>Whitebeet Interface Reference</b>                    | <b>73</b> |

|     |                                         |    |
|-----|-----------------------------------------|----|
| B.1 | System & Configuration . . . . .        | 73 |
| B.2 | Control Pilot (CP) . . . . .            | 73 |
| B.3 | SLAC (GreenPHY) . . . . .               | 73 |
| B.4 | V2G Session Management (EVSE) . . . . . | 73 |
|     | B.4.1 Configuration . . . . .           | 74 |
|     | B.4.2 Session Control . . . . .         | 74 |
|     | B.4.3 Notifications & Parsing . . . . . | 74 |

# Chapter 1

## Introduction

### 1.1 Purpose

The purpose of this document is to define the software requirements for the MEA-V2G (FreeV2G) project. This system serves as a reference implementation for controlling the 8 devices WHITE-beet-EI (EVSE) and WHITE-beet-PI (EV) ISO 15118 modules using an Ethernet host control interface (HCI).

### 1.2 Scope

The MEA-V2G software encompasses:

- Parsing of the protocol used to communicate with the WHITE-beet modules.
- Simulation of EVSE and EV behaviors.
- Handling of charging parameters (Voltage, Current, Power).
- Implementation of basic Control Pilot (CP) and SLAC sequences.
- High-level V2G communication management.
- Integration with OCPP 2.0.1 for backend communication.

### 1.3 Definitions and Acronyms

**EV** Electric Vehicle

**EVSE** Electric Vehicle Supply Equipment (Charging Station)

**HCI** Host Control Interface

**SLAC** Signal Level Attenuation Characterization

**V2G** Vehicle-to-Grid

**PNC** Plug & Charge

**EIM** External Identification Means

**OCPP** Open Charge Point Protocol

**CSMS** Charging Station Management System

## Chapter 2

# Overall Description

### 2.1 Product Perspective

The software interacts directly with the WHITE-beet hardware modules via Ethernet or SPI. It acts as the "Host" controller, managing the logic while the WHITE-beet module handles the low-level PLC (Power Line Communication) and ISO 15118 framing.

### 2.2 System Functions

The system enables the following core functions:

1. **Control Pilot (CP) implementation:** Detects EV plugin and manages duty cycles.
2. **SLAC:** Automates the matching process between EV and EVSE at the physical layer.
3. **V2G Session Management:** Handles Service Discovery, Parameter Discovery, and Authorization.
4. **Charging Loop:** Monitoring and control of the active energy transfer.
5. **OCPP Communication:** Interface with a CSMS via OCPP 2.0.1 for remote control and status monitoring.

### 2.3 Use Case Diagram

The following diagram illustrates the primary actors and use cases for the MEA-V2G system.

### 2.4 System Architecture

The system obeys a modular object-oriented architecture. The core logic handles the state machines for EV and EVSE, while the 'Whitebeet' class abstracts the hardware communication.

### 2.5 EV State Machine

The EV internal logic follows a distinct state machine to manage the charging session lifecycle, as observed in the implementation.

**Init** Initial state where the EV controller is started and hardware interfaces (SPI/Ethernet) are initialized.

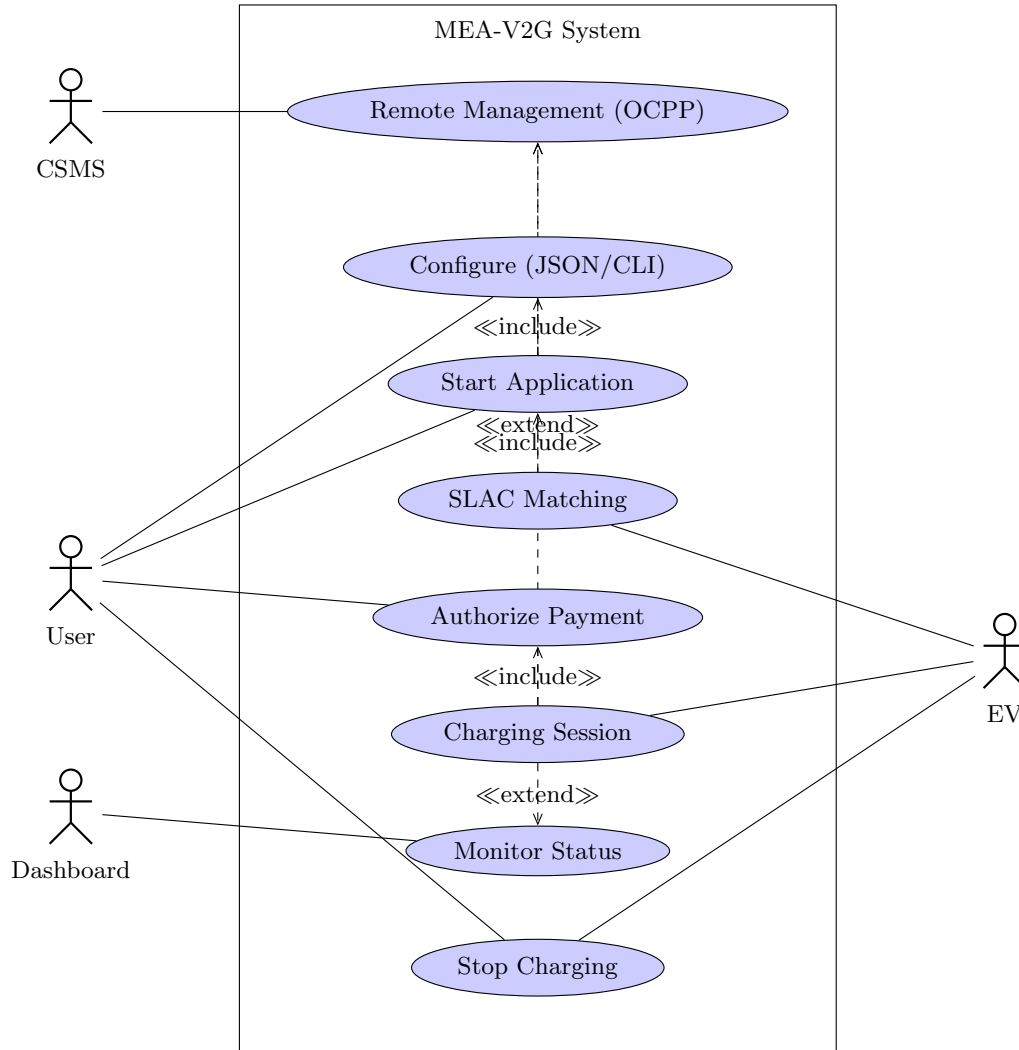


Figure 2.1: MEA-V2G High-Level Use Case Diagram

**SessionStarted** The V2G session has been established. The EV has successfully matched with the EVSE via SLAC.

**CableCheck** The EV waits for the EVSE to perform the cable check (isolation test) to ensure safety.

**PreCharging** Pre-charge phase where the EV matches its battery voltage to the DC bus voltage.

**Charging** The main state where energy transfer occurs. The EV sends *CurrentDemand* requests in a loop.

**ChargingStopped** The session is terminated, either normally (target SOC reached) or due to an error.

## 2.6 EVSE State Machine

The EVSE logic complements the EV, acting as the server component that handles session setup, authorization, and power delivery control.

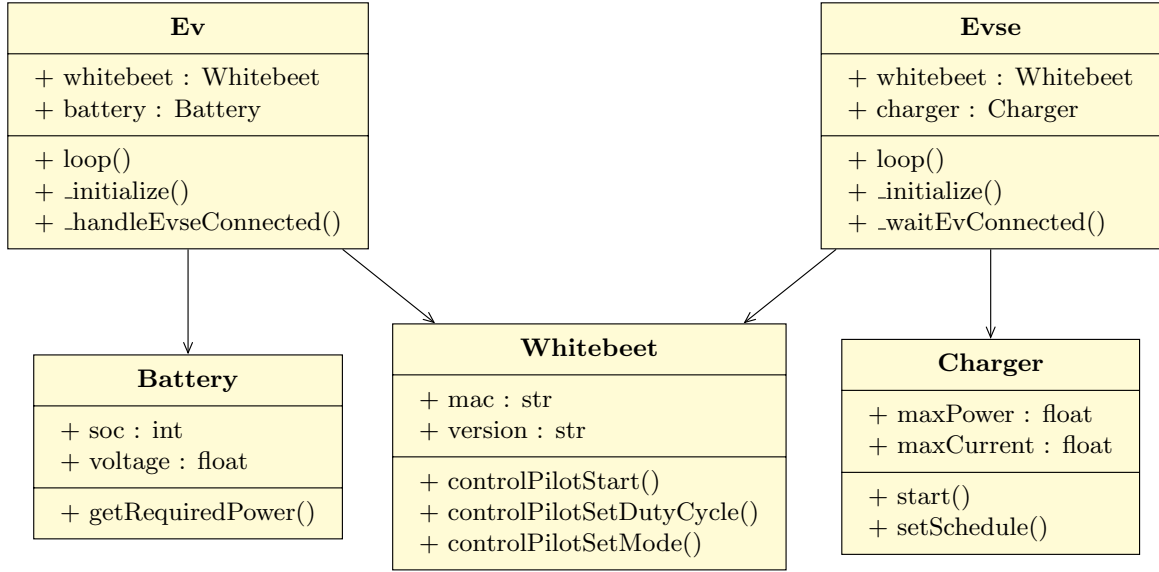


Figure 2.2: MEA-V2G Simplified Class Diagram

**Init** Initialization of the Whitebeet module services (CP, SLAC, V2G).

**Wait** The EVSE waits for an EV to physically plug in (Control Pilot State B).

**SLAC** Signal Level Attenuation Characterization process to pair the EV and EVSE.

**Session** High-level communication session established; protocol negotiation occurs.

**Authorization** Verifying if the EV is authorized to charge (via EIM or Plug & Charge).

**Params** Exchanging charge parameter limits (Maximum Voltage, Current, Power limits).

**Cable** Performing cable isolation check to ensure no faults exist.

**PreCharge** Adjusting DC output voltage to match the EV's reported battery voltage.

**Charge** Active energy transfer loop responding to the EV's current demand.

**Stop** Session termination and welding detection sequence.

**Faulted** Critical error state (e.g., GFDI trip, Overcurrent). The EVSE opens contactors and sends a **StatusNotification(Faulted)** to the CSMS via OCPP. It awaits a manual or remote reset.



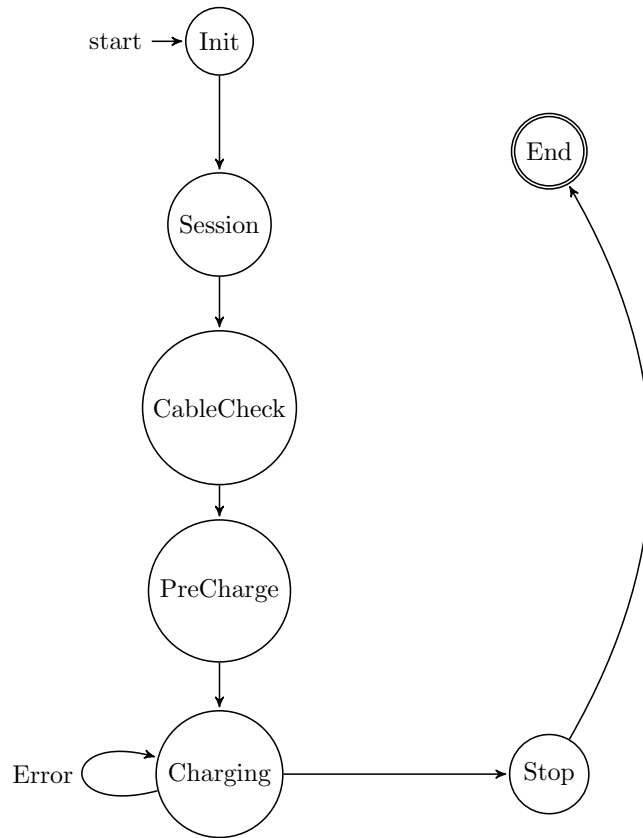


Figure 2.3: EV State Machine

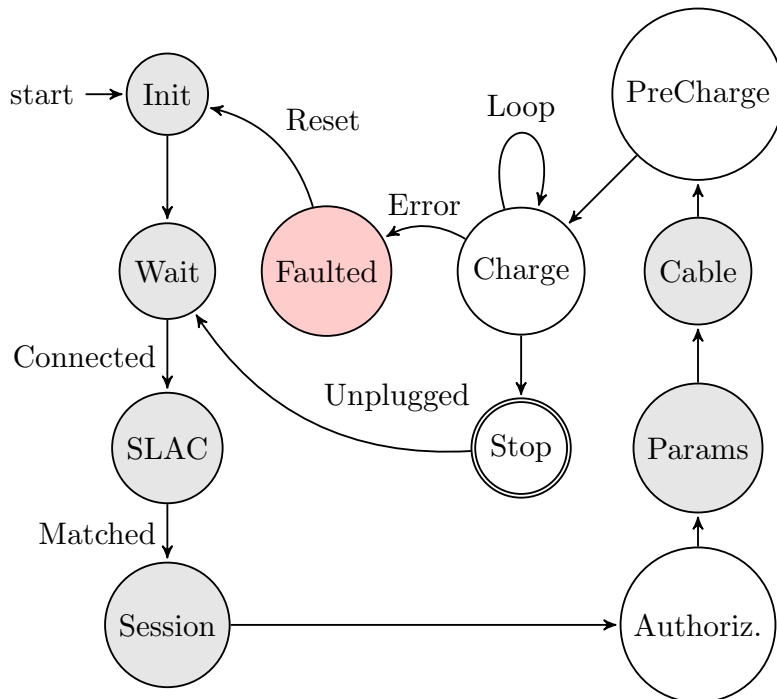


Figure 2.4: EVSE State Machine

## 2.7 State Synchronization

The charging process relies on the tight synchronization between the EV and EVSE states. Figure 2.5 illustrates the parallel state progression and key synchronization points.

**Discovery** Control Pilot signal detection (State A  $\rightarrow$  B).

**Setup** SLAC matching and V2G Session Setup.

**Safety** Both sides must confirm safety parameters during Cable Check.

**Sync** Voltage levels must be synchronized during Pre-Charge before the contactors close.

**Power** The Charging Loop is a lock-step process where the EV requests and the EVSE delivers.

**Term** Coordinated shutdown to ensure contactors open safely (Welding Detection).

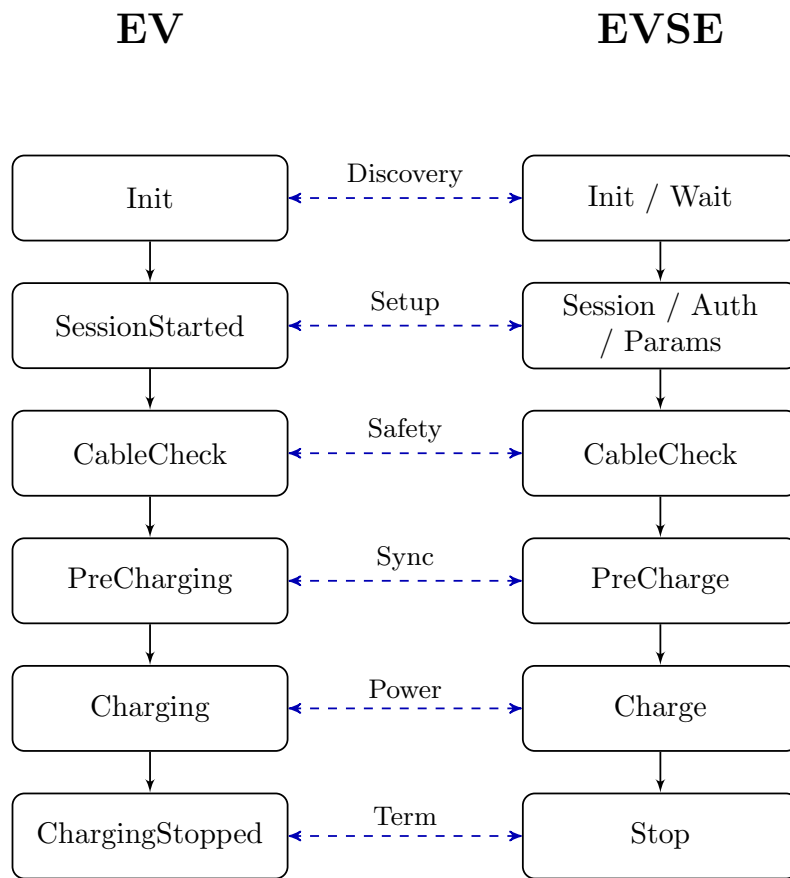


Figure 2.5: EV-EVSE State Synchronization

## 2.8 Charging Loop Sequence

The following sequence diagram depicts the simplified ISO 15118 charging loop interaction between the EV and EVSE, which is the core logical flow of the application.

### 2.8.1 Detailed Implementation Sequence

The following diagram illustrates the actual sequence of HCI commands and notifications implemented in the `Ev` and `Evse` classes.

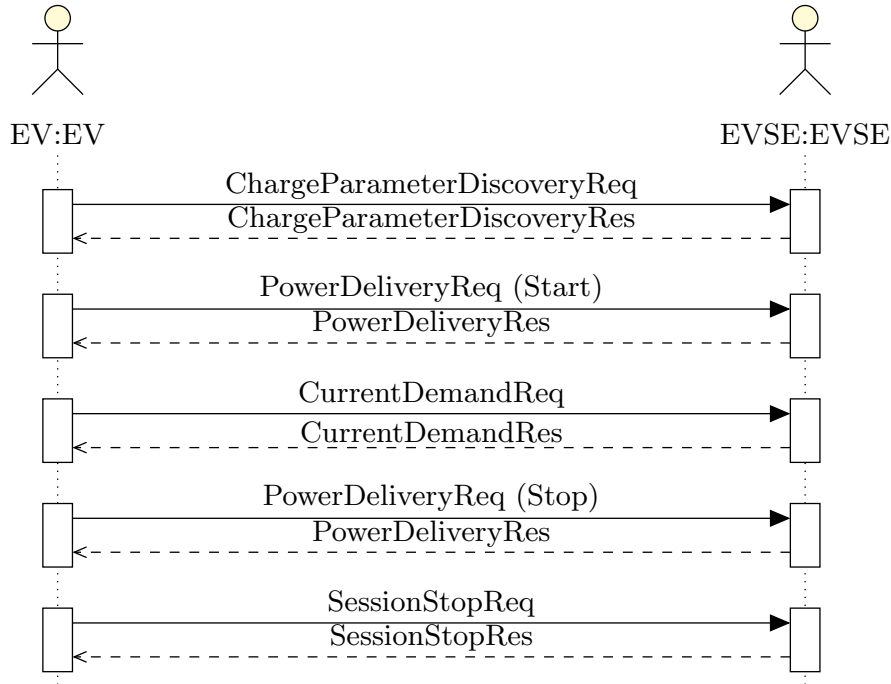


Figure 2.6: ISO 15118 Charging Loop Sequence

### Transaction Value Analysis

The following list details the specific values exchanged in each transaction of the implementation sequence shown in Figure 2.7.

**Session Setup** The session initiation involves a handshake of identifiers and capabilities.

- **EV Action:** Calls `v2gStartSession()`.
- **EVSE Response (0x80):** Notification `SessionStarted` sent to EVSE logic.
  - `protocol`: Negotiated ISO 15118 protocol version.
  - `session_id`: Unique session identifier (hex string).
  - `evcc_id`: EV Communication Controller ID (MAC address based).
- **EV Notification (0xC0):** Notification `SessionStarted` received by EV logic.
  - `session_id`: Unique session identifier.
  - `evse_id`: EVSE Identification Number (e.g., DE\*A23\*E45B\*78C).
  - `payment_method`: Selected payment option (e.g., EIM).
  - `energy_transfer_mode`: Selected transfer mode (e.g., DC\_extended).

**Parameter Discovery** Exchange of electrical limits and target values.

- **EV Action:** Calls `v2gSetDCChargingParameters()` with:
  - `max_voltage`, `max_current`, `max_power`: Physical limits of the battery.
  - `target_voltage`, `target_current`: Requested output values.

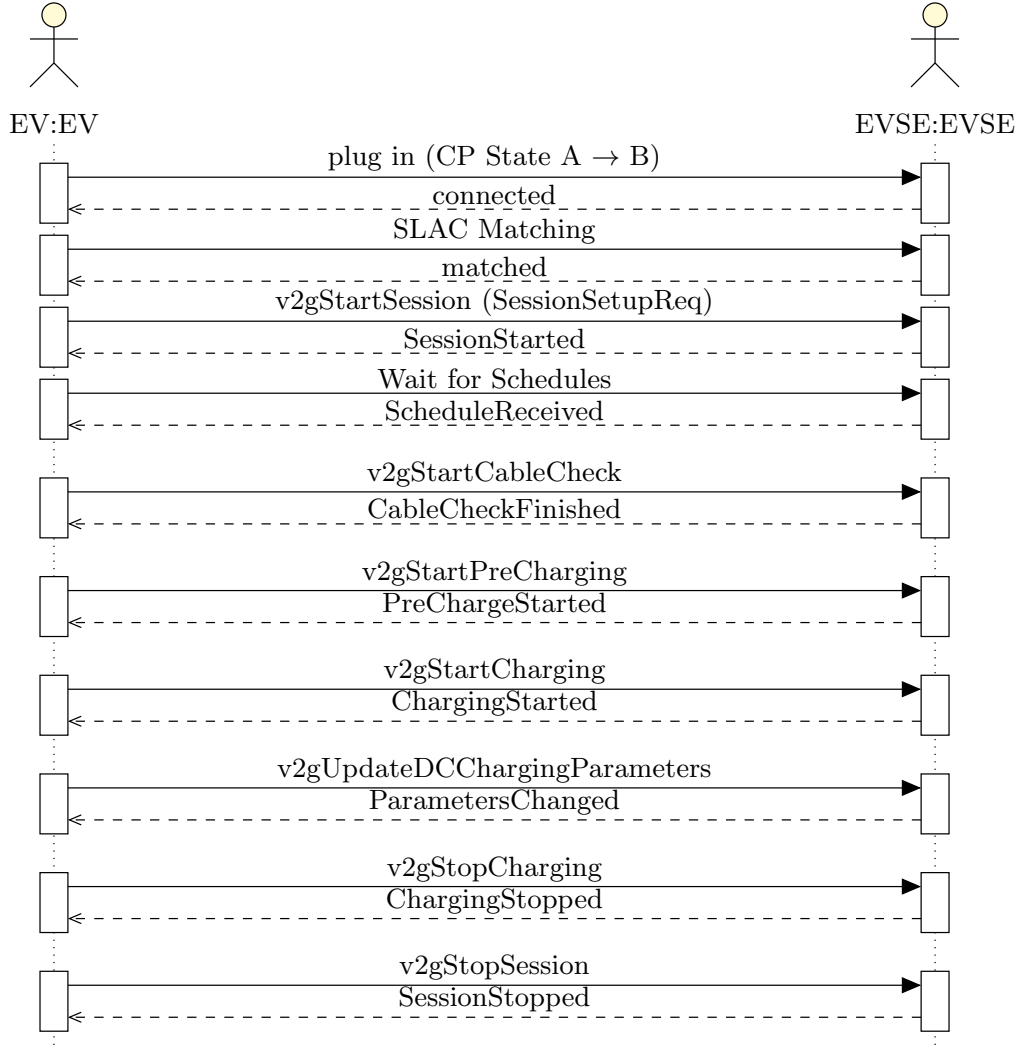


Figure 2.7: Detailed EV-EVSE Implementation Sequence

- soc: Current State of Charge (0-100%).
- **EVSE Notification** (0x85): Notification `DCChargeParametersChanged` received by EVSE logic containing the EV's requested values.
- **EVSE Action**: Calls `v2gEvseUpdateDcChargingParameters()` with:
  - `evse_max_current`, `evse_max_power`: Station limits.
  - `evse_present_voltage`, `evse_present_current`: Real-time measured output.
  - `evse_status`: Current system status code.
- **EV Notification** (0xC1): Notification `DCChargeParametersChanged` received by EV logic with the station's limits and current status.

**Cable Check** Safety verification of the physical connection.

- **EV Action**: Calls `v2gStartCableCheck()`.
- **EVSE Notification** (0x87): Notification `RequestCableCheck` received.

- **EVSE Action:** Verifies isolation and calls `v2gEvseSetCableCheckFinished(True)`.
- **EV Notification (0xC5):** Notification `CableCheckFinished` received.

**Pre-Charge** Voltage synchronization.

- **EV Action:** Calls `v2gStartPreCharging()`.
- **EVSE Notification (0x88):** Notification `PreChargeStarted` received. EVSE adjusts output voltage to match EV battery voltage.
- **EV Notification (0xC6):** Notification `PreChargingReady` received.

**Start Charging** Contactors close and power delivery begins.

- **EV Action:** Calls `v2gStartCharging()`.
- **EVSE Notification (0x89):** Notification `RequestStartCharging` received.
- **EV Notification (0xC8):** Notification `ChargingStarted` received.

**Charging Loop** Continuous control loop (Cyclic).

- **EV:** Periodically calls `v2gUpdateDCChargingParameters` to adjust `target_current` based on the charging profile.
- **EVSE:** Periodically calls `v2gEvseUpdateDcChargingParameters` to report `present_voltage` and `present_current` for safety monitoring.

**Termination** Safe shutdown sequence.

- **EV Action:** Calls `v2gStopCharging()` when SOC target is reached.
- **EVSE Notification (0x8A):** Notification `RequestStopCharging` received. EVSE ramps down current and opens contactors.
- **EV Notification (0xC9):** Notification `ChargingStopped` received.
- **EV Action:** Calls `v2gStopSession()`.
- **EVSE Notification (0x8C):** Notification `SessionStopped` received.

## 2.8.2 CSMS-EVSE-EV Interaction

This diagram focuses on the 3-tier communication flow involving the management system, the charging station, and the vehicle. It illustrates a scenario where a remote command initiates a session with smart charging limits.

## 2.9 Core Components

The system comprises the following key software components:

### 2.9.1 Whitebeet Component

The `Whitebeet` class serves as the Hardware Abstraction Layer (HAL). It manages the low-level communication with the physical ISO 15118 module via Ethernet or SPI.

- **Packet Framing:** Handles the encapsulation of Host Control Interface (HCI) commands.
- **Event Dispatching:** Receives raw data from the hardware and dispatches events (e.g., `EV_CONNECTED`, `V2G_MESSAGE`) to the higher-level logic.

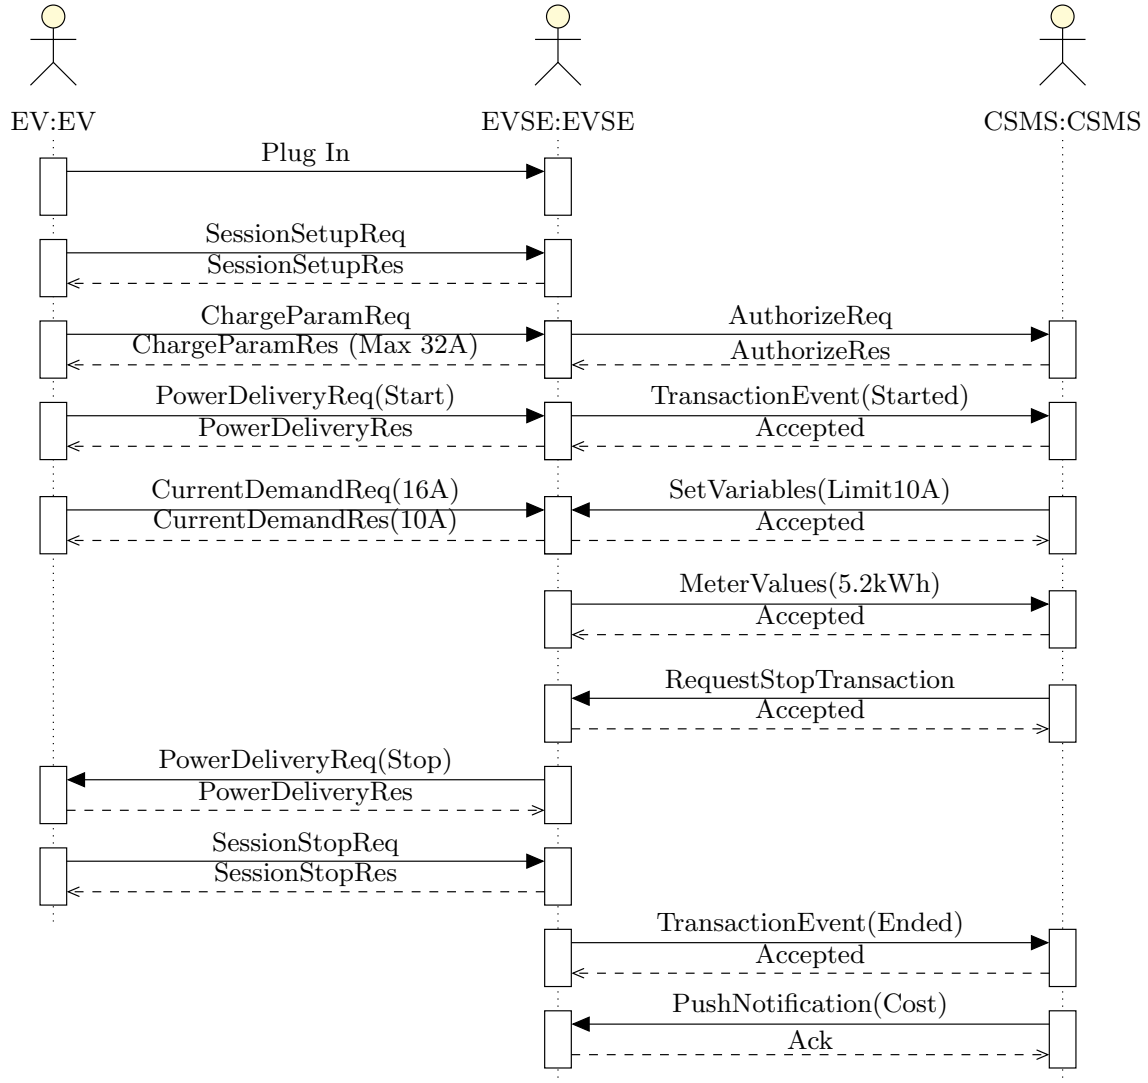


Figure 2.8: 3-Tier (CSMS-EVSE-EV) Sequence Flow

- **Service Management:** Exposes methods to control Control Pilot (CP) state, SLAC, and V2G messaging.

### Protocol Structure

The Whitebeet module communicates via a serial interface using a framed protocol. Each frame is structured as follows:

| Start | Mod ID | Sub ID | Req ID | Len (2)    | Payload   | CRC    | End  |
|-------|--------|--------|--------|------------|-----------|--------|------|
| 0xC0  | 1 Byte | 1 Byte | 1 Byte | Big Endian | $N$ Bytes | 1 Byte | 0xC1 |

### HCI State Transition Mapping

The following table maps the critical EVSE states to the corresponding ISO 15118 V2G messages and the Whitebeet HCI notifications that trigger the transitions.

| EVSE State        | ISO 15118 Message           | HCI Notification      | HCI ID |
|-------------------|-----------------------------|-----------------------|--------|
| <b>CableCheck</b> | ChargeParameterDiscoveryReq | SessionStarted        | 0x80   |
| Authorization     | AuthorizationReq            | RequestAuthorization  | 0x82   |
| <b>PreCharge</b>  | PowerDeliveryReq(Start)     | PowerDeliveryReq      | 0x8E   |
| <b>PreCharge</b>  | PreChargeReq                | PreChargeStarted      | 0x88   |
| <b>Charge</b>     | CurrentDemandReq            | DCChargeParamsChanged | 0x85   |
| Stop              | PowerDeliveryReq(Stop)      | RequestStopCharging   | 0x8A   |
| <b>Stop</b>       | SessionStopReq              | SessionStopped        | 0x8C   |
| Faulted           | (Any Error)                 | SessionError          | 0x8E   |

Table 2.1: Whitebeet HCI State Mapping

### 2.9.2 EV Component

The EV class is the central controller for the client side. It orchestrates the charging session from the vehicle's perspective.

- **State Machine:** Implements the ISO 15118 client flow (Session Setup → Charge Parameter Discovery → Power Delivery).
- **Hardware Aggregation:** Owning instance of `Whitebeet` (for comms) and `Battery` (for energy simulation).

### 2.9.3 EVSE Component

The EVSE class is the central controller for the station side. It manages the server-side logic and power delivery authorization.

- **State Machine:** Implements the ISO 15118 server flow, including Service Discovery and Plug & Charge authorization.
- **Hardware Aggregation:** Owning instance of `Whitebeet` (for comms) and `Charger` (for power delivery simulation).
- **Scheduling:** Manages SASchedules based on configuration.

### 2.9.4 OCPP Component

The system integrates an OCPP 2.0.1 client to enable remote management.

- **OcppInterface:** Adapts the `ocpp` library's `ChargePoint` class to the MEA-V2G architecture. It maps OCPP commands (e.g., `RequestStartTransaction`) to local `Charger` actions.
- **OcppWorker:** A dedicated thread that manages the `asyncio` event loop and WebSocket connection to the CSMS, ensuring non-blocking operation alongside the main application loop.

## 2.10 Charger Component

The `Charger` class performs a physical simulation of the power electronics, ensuring realistic behavior during the charging session. Its key functions include:

- **Output Ramping:** Instead of instantaneous jumps, the charger simulates the physical "slewing" of voltage and current over time. It uses defined  $\Delta U$  and  $\Delta I$  rates to ramp the output toward the target setpoint.

- **Limit Enforcement:** It strictly enforces hard safety limits for the system (e.g., `evse_max_current`, `evse_max_power`), protecting the modeled hardware.
- **Setpoint Control:** The EV provides dynamic target values (*Target Voltage*, *Target Current*), which the charger attempts to follow within its safety constraints.
- **Fault Detection:** The class includes methods like `isVoltageLimitExceeded()` and `isPowerLimitExceeded()` to trigger immediate session termination if operating conditions are violated.

The `Charger` class implements the `ChargerInterface` abstract base class. This design pattern allows the simulation module to be easily swapped with a real hardware driver, such as the `CanCharger` class, which communicates with physical power electronics via CAN bus using the `python-can` library, while maintaining a consistent API for the EVSE logic.

### 2.10.1 Implementing a Custom Charger

To integrate specific power electronics hardware, developers must create a subclass of `ChargerInterface`. This ensures the EVSE logic remains decoupled from the physical layer.

A custom implementation must override the abstract methods to map high-level commands to hardware-specific protocols. The following sections detail the requirements for each group of methods.

#### Lifecycle Management

These methods control the high-level operational state of the power electronics.

**start()** Called when the EVSE initializes or prepares for a session. It should initialize hardware communication (e.g., open CAN sockets). **Note:** This method should **not** automatically close the output contactors; that is handled by the state machine after safe voltage matching.

**stop()** **Critical Safety Method.** Called to terminate a session or during error conditions. It must immediately disable power output, open contactors, and return the hardware to a safe idle state (0V/0A).

#### Control Loop Methods

These methods are called cyclically (typically every 10-100ms) during the active charging phase.

**setEvTargetVoltage(val)** Receives the EV's requested voltage setpoint (in Volts). The implementation must transmit this request to the power supply unit (PSU).

**setEvTargetCurrent(val)** Receives the EV's requested current setpoint (in Amps). The implementation must ensure the PSU imposes this current limit.

*Return Value:* These methods must return **True** if the command was successfully queued or sent to the hardware, and **False** if the request triggers a local hardware fault or limit violation.

#### Telemetry Methods

The EVSE state machine relies on accurate feedback to perform safety checks (e.g., Welding Detection) and process steps (e.g., Pre-Charge).

**getEvsePresentVoltage()** Must return the *measured* voltage at the DC output terminals. Do not return the internal setpoint; the actual value is required to verify contactor states.

**getEvsePresentCurrent()** Must return the *measured* current flowing to the EV.



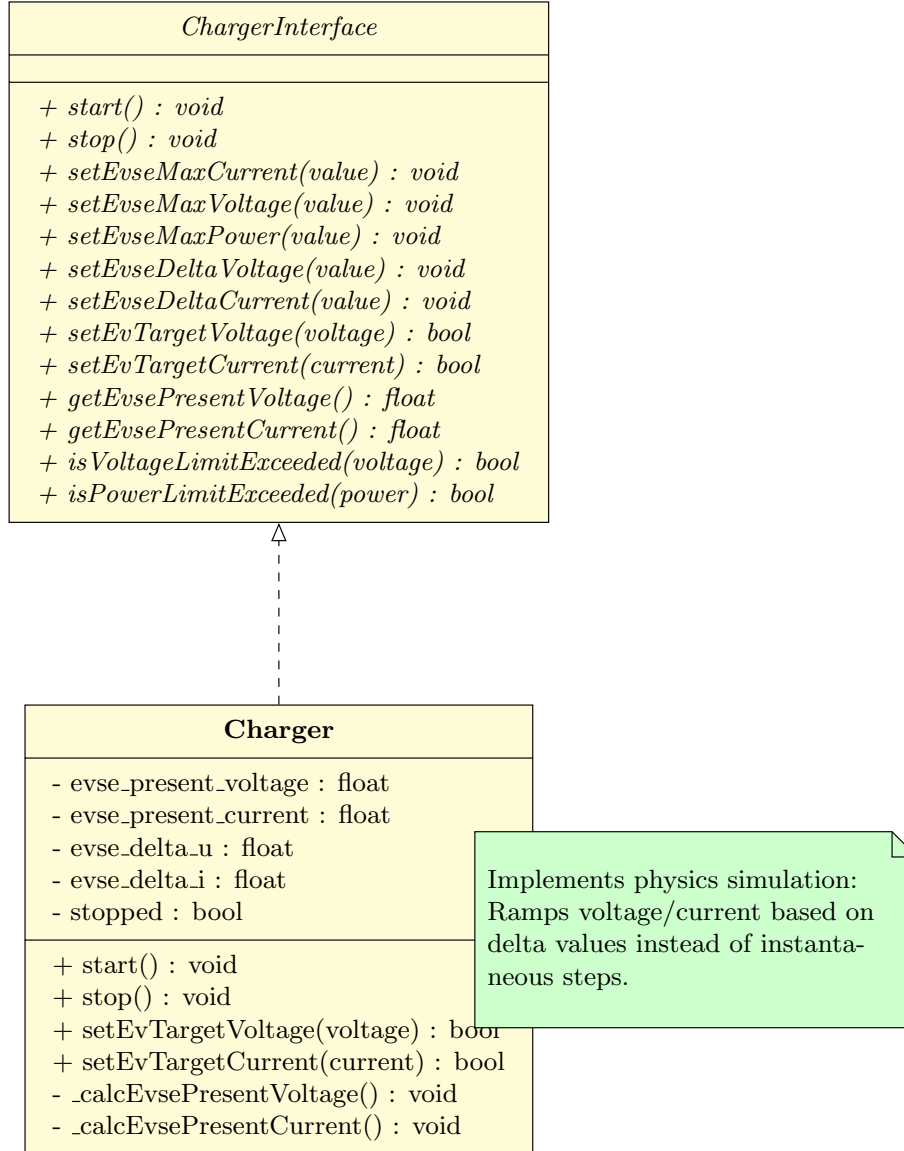


Figure 2.9: Charger Interface and Implementation

### Configuration Accessors

The interface includes getters and setters for electrical limits (e.g., `setEvseMaxCurrent`, `getEvseMaxPower`).

- For a **Simulation** (like `Charger.py`), these methods simply store and retrieve variables to emulate different hardware capabilities.
- For **Physical Hardware**, the setters (e.g., ‘`setEvseMaxCurrent`’) should theoretically configure the hardware’s internal safety latches if supported. The getters must return the valid limits to be advertised to the EV during the *Charge Parameter Discovery* phase.

### 2.10.2 TRIO-HP Charger Protocol

This section details the specific hardware and communication protocol for the TRIO-HP/3AC/1KDC/20KW/BI power module, which is supported by the system via a CAN bus interface.

## Hardware Description

- **Brand:** PHOENIX CONTACT
- **Model:** TRIO-HP/3AC/1KDC/20KW/BI
- **Function:** Bidirectional DC/AC and AC/DC converter.
- **Communication:** CAN 2.0B Extended Frame (29-bit Identifier).
- **Baud Rate:** 125 kbps.
- **Termination:** 120  $\Omega$  resistors required.

## Protocol Structure

The protocol uses a 29-bit extended identifier structured as follows:

| Error (3 bits) | Device No. (4 bits) | Command (6 bits) | Target (8 bits) | Source (8 bits) |
|----------------|---------------------|------------------|-----------------|-----------------|
| 28-26          | 25-22               | 21-16            | 15-8            | 7-0             |

- **Error Code:** 0x00 = Normal.
- **Device No:** 0x0A for individual modules, 0x0B for groups.
- **Target/Source Address:** Unique module ID; Controller default is 0xF0.

## Key Commands

The system utilizes the following CAN commands to control the charger:

| Description      | Cmd ID | Data Bytes (Hex) | Notes                            |
|------------------|--------|------------------|----------------------------------|
| Read DC Voltage  | 0x23   | 10 01 00 00 ...  | Response contains voltage in mV. |
| Read DC Current  | 0x23   | 10 02 00 00 ...  | Response contains current in mA. |
| Set DC Voltage   | 0x24   | 10 01 00 00 ...  | Sets output voltage target (mV). |
| Set DC Current   | 0x24   | 10 02 00 00 ...  | Sets output current limit (mA).  |
| Enable Operation | 0x24   | 11 10 00 00 ...  | Byte 7: 0xA0 (On), 0xA1 (Off).   |

## Protocol Integration

The following table maps the abstract EVSE states and OCPP events to specific CAN protocol actions, ensuring the hardware behaves correctly during the session lifecycle.

| EVSE State       | Event / Trigger           | System Action                                       | CAN Command Sequence                                                            |
|------------------|---------------------------|-----------------------------------------------------|---------------------------------------------------------------------------------|
| <b>PreCharge</b> | Session Setup             | Match EV battery voltage to prevent inrush current. | Set DC Voltage (Target)<br>Read DC Voltage (Verify)<br>Enable Operation (0xA0)  |
| <b>Charge</b>    | SetChargingProfile (OCPP) | Apply new maximum current limit from CSMS.          | Set DC Current (Profile Limit)                                                  |
| <b>Charge</b>    | CurrentDemand (EV)        | Follow EV's dynamic current request.                | Set DC Current (EV Target)                                                      |
| <b>Stop</b>      | Session Check / User Stop | Safe shutdown sequence.                             | Set DC Current (0 A)<br>Read DC Current (Verify 0A)<br>Disable Operation (0xA1) |

## CanCharger Implementation

The `CanCharger` class provides the concrete implementation for the TRIO-HP protocol. It utilizes the `python-can` library to handle low-level bus arbitration and message framing.

- **Bus Abstraction:** Supports multiple interfaces (SocketCAN, Kvaser, Virtual) via the library's abstraction layer.
- **Threaded Listening:** A continuous background thread monitors the bus for broadcast updates (e.g., current system voltage) to keep the internal state synchronized with the hardware.
- **Error Handling:** Automatically detects connection failures or missing libraries, falling back to safe states or raising initialization errors.

## 2.11 Battery Component

The `Battery` class provides a logical model of the EV's energy storage, managing State of Charge (SOC) and physical limits.

- **Energy Tracking:** Maintains the battery capacity (Wh) and current energy level. SOC is dynamically calculated as  $\frac{\text{Current Level}}{\text{Capacity}} \times 100$ .
- **Charging Process:** The `tickSimulation()` method accumulates energy over time intervals based on the instantaneous input voltage and current ( $E = V \times I \times \Delta t$ ).
- **Configurable Limits:** Supports defining maximum Voltage, Current, and Power constraints specific to the chosen Energy Transfer Mode (AC vs. DC).
- **Status Reporting:** Continuously updates the SOC and charging status ('is\_full', 'is\_charging'), which are reported back to the EVSE via ISO 15118 messages.

## 2.12 Default Charging Routine

In the absence of an external configuration file, the system defaults to a hardcoded "Simple Charging Routine" defined in `Application.py`. This routine ensures the EVSE behaves predictably during initial testing or standalone operation.

### 2.12.1 Default Schedule

The default charging profile is a time-dependent power curve that simulates a decreasing power availability (e.g., grid balancing or solar curve):

- **0 to 30 minutes:** Maximum Power 25,000 W.
- **30 to 60 minutes:** Maximum Power reduced to 18,750 W.
- **Over 60 minutes:** Maximum Power further reduced to 12,500 W.

### 2.12.2 Physics Simulation Parameters

To simulate realistic hardware behavior, the `Charger` class uses specific delta parameters to ramp voltage and current rather than applying instantaneous steps:

- **Delta Voltage:** 0.5 V per tick.
- **Delta Current:** 0.05 A per tick.
- **Max Limits:** 400 V / 100 A / 25 kW.

## 2.13 Project File Structure

The following table summarizes the key files in the repository and their specific purposes within the architecture:

| File Name           | Description                                                                                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Application.py      | The main entry point. Parses command-line arguments and initializes the EV or EVSE instance based on the selected role.        |
| Ev.py               | Implements the Electric Vehicle (client) logic, including the ISO 15118 state machine and session management.                  |
| Evse.py             | Implements the Charging Station (server) logic, managing service discovery, authorization, and power delivery.                 |
| Whitebeet.py        | The Hardware Abstraction Layer (HAL). Handles low-level communication with the Codico Whitebeet module.                        |
| Charger.py          | A physics simulation class for the EVSE's power electronics. Simulates voltage/current ramping and enforces safety limits.     |
| ChargerInterface.py | An abstract base class defining the standard API for charger implementations, enabling pluggable drivers (Simulation vs. CAN). |
| Battery.py          | A logical model of the EV battery, tracking State of Charge (SOC) and energy capacity.                                         |
| EthernetAdapter.py  | Driver for communicating with the Whitebeet module via a network socket.                                                       |
| SpiAdapter.py       | Driver for communicating with the Whitebeet module via the SPI bus (e.g., on Raspberry Pi).                                    |
| FramingInterface.py | Defines the packet structure and framing rules for the Host Control Interface (HCI) protocol.                                  |
| api_server.py       | A lightweight Flask server that exposes internal state (like SOC, current power) via a REST API for monitoring.                |
| gui_launcher.py     | A graphical utility to easily launch <b>Application.py</b> without using the command line.                                     |
| ev.json / evse.json | Configuration files defining capabilities, limits, and schedules for the respective roles.                                     |

## Chapter 3

# Specific Requirements

### 3.1 External Interfaces

#### 3.1.1 Communication Interfaces

- **Ethernet:** Main control interface for sending HCI commands and receiving notifications.
- **SPI:** Alternative control interface (e.g., for Raspberry Pi integration).
- **OCPP Interface:** WebSocket connection (JSON over WebSockets) to a central management system (CSMS).

#### 3.1.2 User Interfaces

- **CLI (Command Line Interface):** Primary mode of operation. Outputs session logs and accepts interactive input (e.g., authorization "yes/no").
- **GUI:** A graphical launcher ('gui\_launcher.py') provided for configuration and startup.
- **API:** A REST API (default port 5000) for real-time status monitoring (e.g., for Grafana dashboards).

### 3.2 Functional Requirements

#### 3.2.1 FR-01: Protocol Negotiation

The system shall support negotiation of ISO 15118 protocol versions.

- The EVSE shall advertise supported protocols.
- The EV shall select a mutually supported protocol (e.g., DIN SPEC 70121 or ISO 15118-2).

#### 3.2.2 FR-01-A: OCPP Version Selection

The system shall allow the selection of the OCPP protocol version at startup.

- Supported versions: OCPP 1.6, OCPP 2.0.1, and OCPP 2.1 (experimental).
- The version shall be configurable via command-line arguments.

### 3.2.3 FR-02: Authorization

The system shall support multiple authorization modes:

- **EIM (External Identification Means)**: Manual authorization via console input.
- **PnC (Plug & Charge)**: Automated certificate-based authorization.

### 3.2.4 FR-03: Charging Control

During the charging loop, the system shall:

- Exchange charging parameters (SOC, Target Voltage, Target Current).
- Terminate the session upon "Stop Charging" request from either side.

### 3.2.5 FR-04: OCPP Integration

The system shall implement OCPP client features for the selected version (1.6, 2.0.1, or 2.1):

- Connect to a CSMS via WebSocket.
- Send version-specific **BootNotification** and **Heartbeat** messages.
- Accept remote commands appropriate for the version (e.g., **RemoteStartTransaction** for 1.6, **RequestStartTransaction** for 2.0.1+).
- Support configuration/variable management (**ChangeConfiguration** for 1.6, **SetVariables** for 2.0.1+).

## 3.3 Communication Flow

### 3.3.1 OCPP 1.6 Sequence Flow

The interaction in OCPP 1.6 is similar but uses different message names and structures. The following diagram illustrates the flow for OCPP 1.6 (JSON).

### 3.3.2 OCPP 2.0.1 Sequence Flow

The following diagram illustrates the interaction between the EVSE (Charge Point) and the CSMS (Charging Station Management System) via OCPP 2.0.1.

### 3.3.3 Key Differences: OCPP 1.6 vs 2.0.1

The following table highlights the primary differences in message terminology and functionality between the two supported versions.

| Feature       | OCPP 1.6                          | OCPP 2.0.1                               |
|---------------|-----------------------------------|------------------------------------------|
| Remote Start  | RemoteStartTransaction            | RequestStartTransaction                  |
| Remote Stop   | RemoteStopTransaction             | RequestStopTransaction                   |
| Configuration | ChangeConfiguration               | SetVariables                             |
| Status        | StatusNotification                | StatusNotification (Expanded states)     |
| Transaction   | StartTransaction, StopTransaction | TransactionEvent (Started/Updated/Ended) |

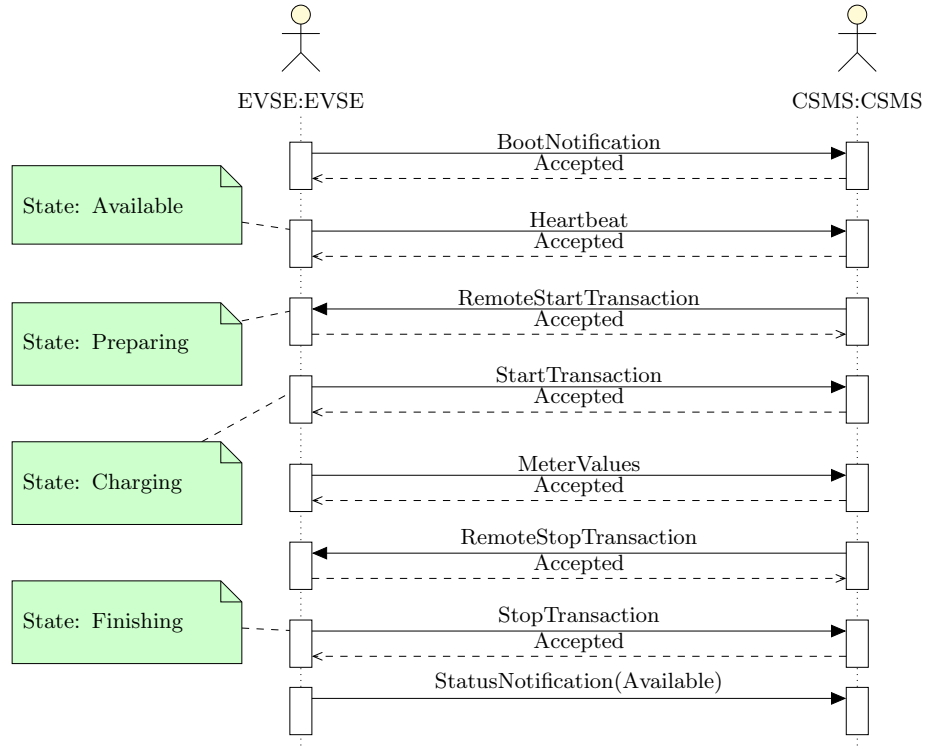


Figure 3.1: OCPP 1.6 Interaction Sequence

### 3.4 OCPP Connector State Machine

The EVSE maintains a logical state for each connector, which is reported to the CSMS via Status Notification messages. This state machine abstracts the underlying ISO 15118 physical processes.

**Available** The connector is free and ready for a new session.

**Preparing** An EV is plugged in or an authorization process is pending.

**Charging** Active energy transfer is in progress.

**SuspendedEV** Charging is paused by the EV (e.g., battery full).

**SuspendedEVSE** Charging is paused by the EVSE (e.g., smart charging limit).

**Finishing** The session has stopped, waiting for the plug to be removed.

**Reserved** The connector is reserved for a specific user.

**Unavailable** The connector is operative but not available for use (e.g., maintenance).

**Faulted** A critical error has occurred.



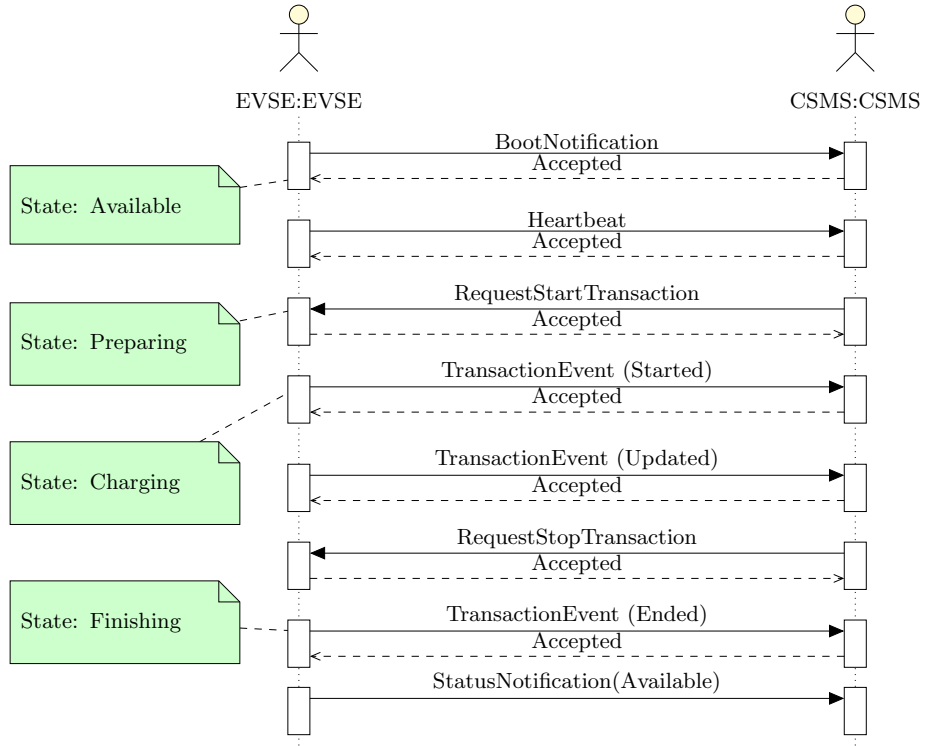


Figure 3.2: OCPP 2.0.1 Interaction Sequence

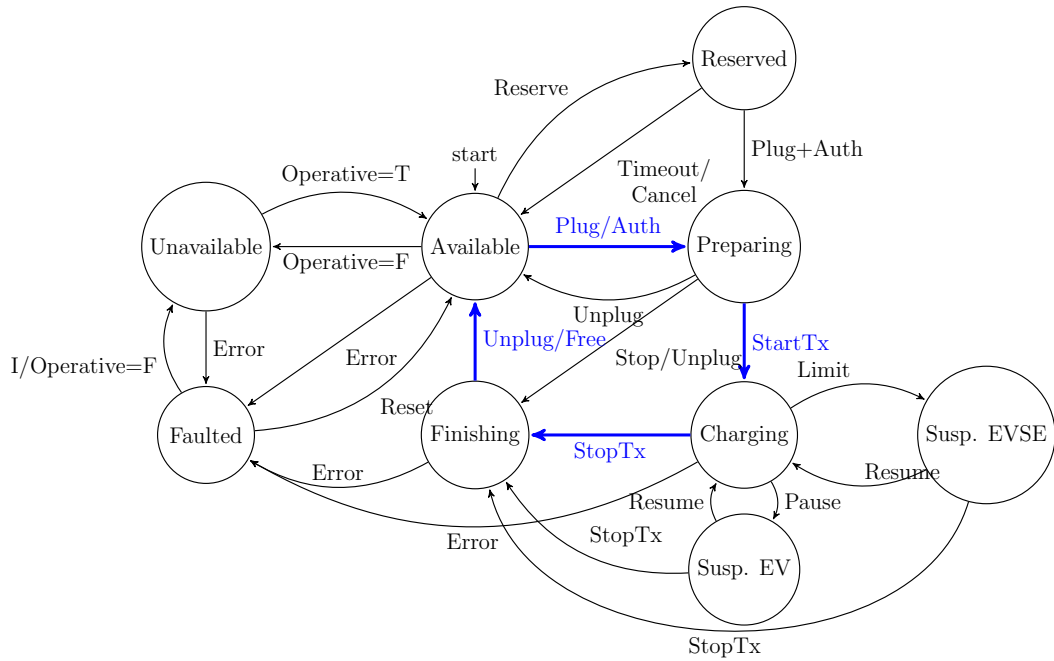


Figure 3.3: OCPP Connector Status State Machine

### 3.4.1 State Transition Logic

The following table details the communication packets exchanged between the EV, EVSE, and CSMS that trigger the transitions in the OCPP Connector State Machine.

| Transition                            | Physical Trigger                             | ISO 15118 (EV-EVSE)                       | OCPP (EVSE-CSMS)                                        |
|---------------------------------------|----------------------------------------------|-------------------------------------------|---------------------------------------------------------|
| <i>Normal Operation</i>               |                                              |                                           |                                                         |
| Available → Preparing                 | Plug In (CP $A \rightarrow B$ )              | SLAC Match, SessionSetupReq               | StatusNotification(Preparing)                           |
| Preparing → Charging                  | Power Delivery Start (CP $B \rightarrow C$ ) | PowerDeliveryReq(Start), CurrentDemandReq | TransactionEvent(Started), StatusNotification(Charging) |
| Charging → Finishing                  | Session Stop (CP $C \rightarrow B$ )         | PowerDeliveryReq(Stop) or SessionStopReq  | TransactionEvent(Ended), StatusNotification(Finishing)  |
| Finishing → Available                 | Unplug (CP $B \rightarrow A$ )               | N/A                                       | StatusNotification(Available)                           |
| <i>Suspended States</i>               |                                              |                                           |                                                         |
| Charging → SuspendedEV                | EV pauses (e.g. max SOC)                     | CurrentDemandReq (Target=0A)              | StatusNotification(SuspendedEV)                         |
| SuspendedEV → Charging                | EV resumes                                   | CurrentDemandReq (Target>0A)              | StatusNotification(Charging)                            |
| Charging → SuspendedEVSE              | EVSE limits power                            | CurrentDemandRes (MaxCurrent=0A)          | StatusNotification(SuspendedEVSE)                       |
| SuspendedEVSE → Charging              | EVSE lifts limit                             | CurrentDemandRes (MaxCurrent>0A)          | StatusNotification(Charging)                            |
| Suspended → Finishing                 | Stop during pause                            | SessionStopReq                            | TransactionEvent(Ended), StatusNotification(Finishing)  |
| <i>Reservation &amp; Availability</i> |                                              |                                           |                                                         |
| Available → Reserved                  | N/A                                          | N/A                                       | ReserveNowReq, StatusNotification(Reserved)             |
| Reserved → Preparing                  | Plug In + Auth                               | SessionSetupReq                           | StatusNotification(Preparing)                           |
| Reserved → Available                  | Timeout / Cancel                             | N/A                                       | CancelReservationReq, StatusNotification(Available)     |
| Available → Unavailable               | Operator Command                             | N/A                                       | ChangeAvailabilityReq, StatusNotification(Unavailable)  |
| Unavailable → Available               | Operator Command                             | N/A                                       | ChangeAvailabilityReq, StatusNotification(Available)    |
| <i>Exception Layout</i>               |                                              |                                           |                                                         |
| Preparing → Available                 | Unplug (Invalid Session)                     | SessionStopReq                            | StatusNotification(Available)                           |
| Any → Faulted                         | Error / Fault                                | Welding Detection Fail, etc.              | StatusNotification(Faulted)                             |
| Faulted → Available                   | Reset / Recovery                             | N/A                                       | ResetReq, StatusNotification(Available)                 |
| Faulted → Unavailable                 | Permanent Fault                              | N/A                                       | ChangeAvailabilityReq, StatusNotification(Unavailable)  |

### 3.4.2 EVSE to OCPP State Mapping

The following table defines how the internal ISO 15118 EVSE states map to the reported OCPP Connector Status.

| EVSE State (ISO 15118)   | OCPP Status   | Notes                                               |
|--------------------------|---------------|-----------------------------------------------------|
| Init                     | Unavailable   | System initialization or re-boot.                   |
| Wait                     | Available     | Ready for a new session (CP State A).               |
| Wait (Reserved)          | Reserved      | Reserved for specific idTag via <i>ReserveNow</i> . |
| SLAC                     | Preparing     | Plugged in, matching physics.                       |
| Session, Authorization   | Preparing     | Protocol negotiation and Auth.                      |
| Params, Cable            | Preparing     | Parameter discovery and Cable Check.                |
| PreCharge                | Charging      | Contactors closing, voltage matching.               |
| Charge                   | Charging      | Active energy transfer.                             |
| Charge (CurrentDemand=0) | SuspendedEV   | EV is not drawing power.                            |
| Charge (limit=0)         | SuspendedEVSE | EVSE is preventing power flow.                      |
| Stop                     | Finishing     | Session ended, waiting for unplug.                  |
| (Any Error)              | Faulted       | Critical hardware or protocol failure.              |

# Chapter 4

## Configuration and Deployment

### 4.1 Command Line Interface (CLI)

The system is launched via `Application.py` with several arguments to define its operating mode:

- `-r, -role`: Specifies the mode of operation (EV or EVSE).
- `-i, -interface`: Defines the network interface connected to the Whitebeet module (e.g., `eth0`).
- `-c, -config`: Path to the EV configuration file (default: `ev.json`).
- `-ec, -evse-config`: Path to the EVSE configuration file (default: `evse.json`).
- `-auto`: (EVSE only) Enables automatic authorization for Plug & Charge.
- `-api-port`: Sets the port for the REST API status monitor.
- `-ocpp-url`: (EVSE only) WebSocket URL for the OCPP CSMS.
- `-ocpp-id`: (EVSE only) The Charge Point ID to Identify the station to the CSMS.
- `-ocpp-version`: (EVSE only) The OCPP protocol version to use (1.6, 2.0.1, or 2.1). Defaults to 2.0.1.

### 4.2 JSON Configuration

Behavioral parameters are externalized in JSON files to allow run-time customization without code changes.

#### 4.2.1 EV Configuration (`ev.json`)

Defines the characteristics of the Electric Vehicle:

- **ev**: Supported protocols (ISO 15118-2, DIN), payment methods (EIM, PnC), and energy transfer modes.
- **battery**: Physical parameters including capacity, maximum voltage/current, and initial SOC.

#### 4.2.2 EVSE Configuration (`evse.json`)

Defines the characteristics of the Charging Station:

- **charger**: Output limits (Max Voltage/Current/Power) and slew rates ( $\Delta V$ ,  $\Delta I$ ) for the simulation.
- **schedule**: Defines power delivery schedules (SASchedules) sent to the EV during the Charge Parameter Discovery phase.

## 4.3 Software Dependencies

The MEA-V2G software relies on the following external Python libraries for hardware communication and protocol handling:

- **python-can**: Required for the **CanCharger** class to communicate with CAN-based power modules.
- **spidev**: Required for SPI communication with the Whitebeet module on Raspberry Pi platforms.
- **RPi.GPIO**: Required for General Purpose I/O control on Raspberry Pi.
- **Flask**: Required for the REST API server.

# Chapter 5

## Test Plan

### 5.1 Testing Scope

The validation of the MEA-V2G system ensures compliance with ISO 15118 standards and robust handling of high-voltage safety.

1. **Unit Testing:** Verification of individual classes (e.g., ‘Battery’, ‘Charger’) using the Python ‘unittest’ framework.
2. **Integration Testing:** Verification of the Host Control Interface (HCI) between the application and the Whitebeet module.
3. **System Testing:** End-to-end reliability provided by pairing a simulated EV with the EVSE.

### 5.2 Test Environment

- **DUT (Device Under Test):** The MEA-V2G software running on a Linux host (e.g., Raspberry Pi 4).
- **Hardware Setup:**
  - 1x Codico Whitebeet-EI (EVSE Role)
  - 1x Codico Whitebeet-PI (EV Role) connected via PLC coupling.
  - Physical or Simulated Power Electronics.

### 5.3 Automated Test Strategy

The project employs a tiered automated testing strategy using the Python ‘unittest’ framework. This ensures regressions are caught early and that individual components behave correctly before being integrated.

#### 5.3.1 Unit Testing

Unit tests isolate specific classes and methods, mocking out external dependencies like hardware interfaces and network libraries.

`tests/unit/test_charger.py` Verifies the `Charger` physics simulation.

- Validates voltage and current ramping logic ( $dV/dt$ ,  $dI/dt$ ).
- Ensures safety limits (Max Voltage/Current/Power) are enforced.
- Checks start/stop behavior.

`tests/unit/test_whitebeet.py` Verifies the `Whitebeet` HAL module.

- Mocks the internal `FramingInterface` and `Logger`.
- Validates command construction for SLAC and V2G modes.
- Checks error handling for invalid input parameters.

`tests/unit/test_ocpp.py` Verifies the `OcppInterface`.

- Mocks the `ocpp` library to avoid heavy dependencies in CI environments.
- Tests `BootNotification` handling (Accepted/Rejected).
- Tests `RemoteStartTransaction` and `RemoteStopTransaction` flows.

### 5.3.2 Integration Testing

Integration tests focus on the interaction between the application logic and the hardware drivers (mocked).

`tests/integration/test_evse.py` Verifies the `Evse` class orchestrator.

- Simulates the complete EV connection flow (CP State change → SLAC → V2G Session).
- Validates that V2G messages (e.g., `ChargeParameterDiscovery`) correctly update the `Charger` setpoints.

### 5.3.3 System Testing

System tests verify the full end-to-end stack, including the external management interface.

`tests/system/test_system.py` Verifies the connection between OCPP and the local Charging hardware.

- Validates that an OCPP `RemoteStart` command successfully transitions the local `Charger` to an active state.
- Verifies that hardware faults or stops are correctly reported back to the OCPP layer.

### 5.3.4 System Testing with Local Mock OCPP Server

Detailed validation of MEA compliance and custom extensions is performed using a dedicated system test that runs a local mock CSMS.

`tests/system/test_mea_mock.py` A self-contained test suite that spins up a local WebSocket server (acting as the CSMS) and an instance of the `Ocpp16Interface`.

- **Objective:** Validate OCPP compliance and MEA-specific extensions without reliance on external live servers.
- **Coverage:** Runs the full suite of MEA compliance scenarios:
  1. **1.x Configuration:** Boot, Status, Heartbeat, Local List.
  2. **2.x–3.x Operations:** Auto-Charge logic, Start/Stop Transaction, Remote Start/Stop via CSMS.
  3. **4.x–5.x Resets & Reservations:** Soft/Hard reset, ReserveNow, CancelReservation.
  4. **6.x Charging Profiles:** Smart Charging Profiles (TxProfile).
  5. **7.x Abnormal Conditions:** Handling of busy states and emergency stops.
  6. **9.x MEA Extensions:** Custom configuration keys for V2G power demands.
- **Execution:** Run via `python3 tests/system/test_mea_mock.py`.

### 5.3.5 Test Execution

The entire test suite can be executed from the project root directory using the standard Python test runner.

```
# Run all tests (Unit, Integration, System)
python3 -m unittest discover tests

# Run only Unit Tests
python3 -m unittest discover tests/unit

# Run only Integration Tests
python3 -m unittest discover tests/integration

# Run in Verbose Mode (shows individual test names)
python3 -m unittest discover tests -v
```

### 5.3.6 Initial Test Results

As of December 2025, the initial automated test suite consisting of 20 tests has been executed successfully.

- **Unit Tests:** 15 tests passed. Covers ‘Charger’ logic, ‘Whitebeet’ protocol framing, and ‘OcppInterface’ messages.
- **Integration Tests:** 3 tests passed. Validates ‘Evse’ orchestrator connection flows and parameter handling.
- **System Tests:** 2 tests passed. Validates end-to-end OCPP remote start/stop commands.

**Result:** 100% Pass Rate (20/20). Execution time < 0.3 seconds.

## 5.4 Test Procedures

### 5.4.1 TC-01: System Initialization

**Objective:** Verify the application correctly detects and initializes the Whitebeet hardware.

**Steps:**

1. Power on the detailed hardware.
2. Launch ‘python3 Application.py –role evse’.
3. Observe console logs for ‘[Whitebeet] System Version: x.y.z’.

**Expected Result:** The system reports a valid firmware version and enters the ‘Wait’ state (CP State A).

### 5.4.2 TC-02: EV Connection

**Objective:** Verify successful plug-in detection and SLAC matching.

**Steps:**

1. Ensure EVSE is in ‘Wait’ state.
2. Physically connect the CCS cable (simulated by connecting CP/PE pins).
3. Trigger SLAC from the EV side.

**Expected Result:**

- EVSE transitions to ‘SLAC’.
- Matching is successful (GreenPHY association).
- EVSE transitions to ‘Session’ (Protocol Negotiation).



### 5.4.3 TC-03: Authorization

**Objective:** Verify the system correctly processes payment/authorization methods.

**Steps:**

1. Initiate a session with 'PaymentOption=ExternalPayment' (EIM).
2. When prompted on the EVSE console, enter "yes" to authorize.

**Expected Result:** EVSE transitions from 'Authorization' to 'Parameter Discovery'.

### 5.4.4 TC-04: Charging Loop

**Objective:** Verify the main energy transfer loop.

**Steps:**

1. Complete Pre-Charge (Voltage matching).
2. EV requests a current draw (e.g., 10A).

**Expected Result:**

- Contactors close (Simulated).
- EVSE output current ramps to 10A.
- 'CurrentDemandRes' messages return 'DC\_EVSEStatus=Charging'.

### 5.4.5 TC-05: Session Stop

**Objective:** Verify normal session termination.

**Steps:**

1. Allow SOC to reach target OR manually stop the EV.
2. EV sends 'SessionStopReq'.

**Expected Result:**

- EVSE initiates Welding Detection.
- Contactors open (Voltage returns to 0V).
- EVSE returns to 'Wait' state.

### 5.4.6 TC-06: Safety/Emergency Stop

**Objective:** Verify immediate shutdown upon fault or unplug.

**Steps:**

1. During 'Charging' state, physically disconnect the cable (CP line open).

**Expected Result:**

- EVSE immediately detects 'CP State A'.
- State transitions to 'Stop' or 'Faulted'.
- Hardware output is disabled (< 20ms).

# Chapter 6

## MEA Compliance Strategy

### 6.1 Testing Methodology

The MEA compliance validation strategy is designed to ensure the EVSE software meets the stringent requirements of the Metropolitan Electricity Authority. The process follows a three-tiered approach, progressing from software simulation to physical deployment.

#### 6.1.1 Tier 1: Mock Testing (Module Level)

The first level of validation involves unit and system testing using a local CSMS mock server. This allows for the verification of the full OCPP 1.6 compliance matrix (see Section 6.3) and MEA-specific extensions in a controlled, offline environment.

- **Tool:** `tests/system/test_mea_mock.py`
- **Scope:** 100% of message flows (Happy Path + Error Scenarios).
- **Outcome:** A generated test report confirming protocol adherence (see Section 6.4).

#### 6.1.2 Tier 2: Live Sandbox Testing

The second level involves connecting the software to the official MEA Sandbox environment to verify connectivity and authentication mechanisms.

#### Test Configuration

This section details the specific configuration used for validation against the Metropolitan Electricity Authority (MEA) OCPP Sandbox.

#### 6.1.3 Connectivity Details

- **Charge Point ID:** `rddQC4000001`
- **CSMS Endpoint:** `wss://ocpp.measandbox.com:2930/EV/Srv/JSON/1.6/rddQC4000001`
- **Protocol:** OCPP 1.6J (JSON over WebSockets)

#### 6.1.4 Test Execution Instructions

To verify connectivity and basic message exchange with the live MEA server, execute the following system test script:

```
python3 tests/system/test_mea_live.py
```

This script performs a real-time handshake, sending a `BootNotification` and `StatusNotification`, and logs the server's response.

### 6.1.5 Tier 3: On-Site Acceptance Testing

The final validation stage is conducted on-site using the production hardware and real electric vehicles. This "User Acceptance Test" (UAT) focuses on physical and environmental factors that cannot be simulated.

- **Electrical Safety:** Verification of RCD tripping, ground monitoring (GFDI), and emergency stop functionality.
- **Thermal Performance:** Running continuous high-power sessions (e.g., 20kW for 1 hour) to validate thermal management.
- **Network Stability:** Verifying the reliability of the cellular/Ethernet backhaul (4G/5G) and OCPP heartbeat latency.
- **UX Validation:** Testing the RFID authentication speed, LED status indicators, and plug handling with an actual EV.

## 6.2 OCPP 1.6 V2G Workaround (Special Test Case)

**NOTE:** This is a specialized test case to validate the V2G workaround mechanism.

Since OCPP 1.6J does not natively support bidirectional power flow control (V2G), this system implements a **vendor-specific extension** using the `ChangeConfiguration` packet.

### 6.2.1 Custom Configuration Key: MEA\_V2G\_PowerDemand

The Central System (CSMS) can control the charging/discharging rate by updating the custom configuration key `MEA_V2G_PowerDemand`.

- **Key Name:** `MEA_V2G_PowerDemand`
- **Value Type:** Integer (Watts)
- **Semantics:**
  - **Positive ( $> 0$ ):** Charge from Grid [Demand]. (e.g., 5000 = import 5kW)
  - **Negative ( $< 0$ ):** Discharge to Grid [Supply]. (e.g., -5000 = export 5kW)
  - **Zero (0):** Idle / No Transfer.

**Example Usage:** To request the EVSE to export 5kW to the grid, the CSMS sends a `ChangeConfiguration` request with key `MEA_V2G_PowerDemand` and value -5000.

## 6.3 MEA OCPP 1.6 Compliance Verification

The following table outlines the verification matrix mandated by the Metropolitan Electricity Authority (MEA) for OCPP 1.6 compliance. The system must pass these scenarios to ensure compatibility with the MEA EV charging infrastructure.

| Item                                 | Direction | Message / Description               | Requirement / Content Include                             |
|--------------------------------------|-----------|-------------------------------------|-----------------------------------------------------------|
| <b>1. Configuration Verification</b> |           |                                     |                                                           |
| 1.1                                  | CS → CSMS | BootNotification                    | chargePointModel, chargePointVendor, firmwareVersion      |
| 1.2                                  | CS → CSMS | StatusNotification                  | connectorId, errorCode, info, status, timestamp, vendorId |
| 1.3                                  | CSMS → CS | TriggerMessage (BootNotification)   | status (Accepted)                                         |
| 1.4                                  | CS → CSMS | BootNotification (Triggered)        | chargePointModel, chargePointVendor, firmwareVersion      |
| 1.5                                  | CSMS → CS | TriggerMessage (StatusNotification) | status (Accepted)                                         |

| Item                                    | Direction | Message / Description                        | Requirement / Content Include                                                 |
|-----------------------------------------|-----------|----------------------------------------------|-------------------------------------------------------------------------------|
| 1.6                                     | CS → CSMS | StatusNotification (Triggered)               | connectorId, errorCode, info, status, timestamp, vendorId                     |
| 1.7                                     | CSMS → CS | TriggerMessage (MeterValues)                 | status (Accepted)                                                             |
| 1.8                                     | CS → CSMS | MeterValues                                  | connectorId, transactionId, meterValue (Voltage, Current, Energy, Power, SoC) |
| 1.9                                     | CSMS → CS | GetConfiguration                             | HeartbeatInterval, LocalAuthorizeOffline, MeterValueSampleInterval            |
| 1.10                                    | CSMS → CS | ChangeConfiguration (Heartbeat: 10m)         | status (Accepted)                                                             |
| 1.11                                    | CSMS → CS | ChangeConfiguration (MeterValue: 30s)        | status (Accepted)                                                             |
| 1.12                                    | CSMS → CS | ChangeConfiguration (UnlockConnector: True)  | status (Accepted)                                                             |
| 1.13                                    | CSMS → CS | ChangeAvailability (Inoperative)             | status (Accepted)                                                             |
| 1.14                                    | CS → CSMS | StatusNotification                           | status: Unavailable                                                           |
| 1.15                                    | CSMS → CS | ChangeAvailability (Operative)               | status (Accepted)                                                             |
| 1.16                                    | CS → CSMS | StatusNotification                           | status: Available                                                             |
| 1.17                                    | CSMS → CS | GetDiagnostics                               | fileName                                                                      |
| 1.18                                    | CS → CSMS | DiagnosticsStatusNotification                | status: Uploading, Uploaded, Upload-Failed                                    |
| 1.19                                    | CSMS → CS | UpdateFirmware                               | location (URI)                                                                |
| 1.20                                    | CS → CSMS | FirmwareStatusNotification                   | status: Downloading, Installing, Installed                                    |
| 1.21                                    | CSMS → CS | ChangeConfiguration (LocalAuthOffline: True) | status (Accepted)                                                             |
| 1.22                                    | CSMS → CS | SendLocalList (Update: Full)                 | status (Accepted)                                                             |
| 1.23                                    | CSMS → CS | GetLocalListVersion                          | listVersion                                                                   |
| 1.24                                    | CSMS → CS | clearCache                                   | status (Accepted)                                                             |
| <b>2. Auto Charge Verification</b>      |           |                                              |                                                                               |
| 2.1                                     | CSMS → CS | ChangeConfiguration (AutoCharge: False)      | status (Accepted)                                                             |
| 2.2                                     | CS → CSMS | StatusNotification (Plug)                    | status: Preparing (No Authorize sent)                                         |
| 2.3                                     | CS → CSMS | StatusNotification (Unplug)                  | status: Available                                                             |
| 2.4                                     | CSMS → CS | ChangeConfiguration (AutoCharge: True)       | status (Accepted)                                                             |
| 2.5                                     | CS → CSMS | StatusNotification (Plug)                    | status: Preparing                                                             |
| 2.6                                     | CS → CSMS | Authorize (Auto Charge)                      | idTag: VID:..., status: Accepted                                              |
| 2.7                                     | CS → CSMS | StartTransaction                             | connectorId, idTag, meterStart, timestamp                                     |
| 2.8                                     | CS → CSMS | StatusNotification                           | status: Charging                                                              |
| 2.9                                     | CS → CSMS | MeterValues (30s)                            | measurand: Voltage, Current, Energy, Power, SoC                               |
| 2.10                                    | CSMS → CS | RemoteStopTransaction                        | status: Accepted                                                              |
| 2.11                                    | CS → CSMS | StopTransaction                              | meterStop, timestamp, transactionId                                           |
| 2.12                                    | CS → CSMS | StatusNotification (Plug)                    | status: Finishing                                                             |
| 2.13                                    | CS → CSMS | StatusNotification (Unplug)                  | status: Available                                                             |
| 2.14                                    | CS → CSMS | StatusNotification (Plug)                    | status: Preparing                                                             |
| 2.15                                    | CS → CSMS | Authorize (Auto Charge)                      | idTag: VID:...                                                                |
| 2.16                                    | CS → CSMS | StartTransaction                             | connectorId, idTag                                                            |
| 2.17                                    | CS → CSMS | StatusNotification                           | status: Charging                                                              |
| 2.18                                    | CS → CSMS | MeterValues (30s)                            | Values present                                                                |
| 2.19                                    | CS → CSMS | StatusNotification (Suspended)               | status: SuspendedEV                                                           |
| 2.20                                    | CS → CSMS | StopTransaction (Unplug)                     | idTag, meterStop                                                              |
| 2.21                                    | CS → CSMS | StatusNotification (Unplug)                  | status: Available                                                             |
| <b>3. Normal Operation Verification</b> |           |                                              |                                                                               |
| 3.1                                     | CS → CSMS | BootNotification                             | chargePointModel, chargePointVendor                                           |
| 3.2                                     | CS → CSMS | StatusNotification                           | status: Available                                                             |
| 3.3                                     | CS → CSMS | StatusNotification (Plug)                    | status: Preparing                                                             |
| 3.4                                     | CS → CSMS | Authorize (Valid Card)                       | status: Accepted                                                              |
| 3.5                                     | CS → CSMS | StartTransaction                             | connectorId, idTag, meterStart                                                |
| 3.6                                     | CS → CSMS | StatusNotification                           | status: Charging                                                              |

| Item                                    | Direction | Message / Description            | Requirement / Content Include                       |
|-----------------------------------------|-----------|----------------------------------|-----------------------------------------------------|
| 3.7                                     | CS → CSMS | MeterValues                      | Energy.Active.Import.Register related to meterStart |
| 3.8                                     | CS → CSMS | StopTransaction (Card)           | meterStop, transactionId                            |
| 3.9                                     | CS → CSMS | StatusNotification (Plug)        | status: Preparing                                   |
| 3.10                                    | CS → CSMS | StatusNotification (Unplug)      | status: Available                                   |
| 3.11                                    | CS → CSMS | StatusNotification (Plug)        | status: Preparing                                   |
| 3.12                                    | CSMS → CS | RemoteStartTransaction           | status: Accepted                                    |
| 3.13                                    | CS → CSMS | StartTransaction                 | connectorId, idTag, meterStart                      |
| 3.14                                    | CS → CSMS | StatusNotification               | status: Charging                                    |
| 3.15                                    | CS → CSMS | MeterValues                      | Values present                                      |
| 3.16                                    | CSMS → CS | RemoteStopTransaction            | status: Accepted                                    |
| 3.17                                    | CS → CSMS | StopTransaction                  | meterStop, transactionId                            |
| 3.18                                    | CS → CSMS | StatusNotification (Plug)        | status: Finishing/Preparing                         |
| 3.19                                    | CS → CSMS | StatusNotification (Unplug)      | status: Available                                   |
| <b>4. Reset Verification</b>            |           |                                  |                                                     |
| 4.1                                     | CSMS → CS | Reset (Hard)                     | status: Accepted                                    |
| 4.2                                     | CS → CSMS | BootNotification                 | Post-reboot checks                                  |
| 4.3                                     | CS → CSMS | Heartbeat                        | Received                                            |
| 4.4                                     | CS → CSMS | MeterValues                      | Received                                            |
| 4.5                                     | CS → CSMS | StatusNotification               | status: Available                                   |
| 4.6                                     | CSMS → CS | ChangeConfiguration (Heartbeat)  | status: Accepted                                    |
| 4.7                                     | CSMS → CS | ChangeConfiguration (MeterValue) | status: Accepted                                    |
| 4.8                                     | CSMS → CS | ChangeConfiguration (LocalAuth)  | status: Accepted                                    |
| 4.9                                     | CSMS → CS | Reset (Soft)                     | status: Accepted                                    |
| 4.10                                    | CS → CSMS | BootNotification                 | Post-reboot checks                                  |
| 4.11                                    | CS → CSMS | Heartbeat                        | Received                                            |
| 4.12                                    | CS → CSMS | MeterValues                      | Received                                            |
| 4.13                                    | CS → CSMS | StatusNotification               | status: Available                                   |
| 4.14                                    | CSMS → CS | ChangeConfiguration (Heartbeat)  | status: Accepted                                    |
| 4.15                                    | CSMS → CS | ChangeConfiguration (MeterValue) | status: Accepted                                    |
| 4.16                                    | CSMS → CS | ChangeConfiguration (LocalAuth)  | status: Accepted                                    |
| 4.17                                    | CS → CSMS | StatusNotification               | status: Available                                   |
| 4.18                                    | CS → CSMS | StartTransaction                 | status: Accepted                                    |
| 4.19                                    | CSMS → CS | Reset (Hard)                     | status: Accepted                                    |
| 4.20                                    | CS → CSMS | StopTransaction (Reset)          | status: Accepted                                    |
| 4.21                                    | CS → CSMS | BootNotification                 | Post-reboot checks                                  |
| <b>5. Reservation Verification</b>      |           |                                  |                                                     |
| 5.1                                     | CSMS → CS | ReserveNow                       | status: Accepted                                    |
| 5.2                                     | CSMS → CS | ReserveNow (Same ID)             | status: Accepted                                    |
| 5.3                                     | CSMS → CS | ReserveNow (Different ID)        | status: Rejected                                    |
| 5.4                                     | CSMS → CS | CancelReservation                | status: Accepted                                    |
| 5.5                                     | CSMS → CS | ReserveNow (Locked)              | status: Accepted                                    |
| 5.6                                     | CSMS → CS | ReserveNow (Expiry 1m)           | status: Accepted                                    |
| 5.7                                     | CS → CSMS | StatusNotification (Reserved)    | status: Reserved                                    |
| 5.8                                     | CS → CSMS | StatusNotification (Expiry)      | status: Available                                   |
| 5.9                                     | CSMS → CS | ReserveNow                       | status: Accepted                                    |
| 5.10                                    | CS → CSMS | StatusNotification (Reserved)    | status: Reserved                                    |
| 5.11                                    | CSMS → CS | RemoteStartTransaction           | status: Accepted                                    |
| 5.12                                    | CS → CSMS | StatusNotification (Plug)        | status: Preparing                                   |
| 5.13                                    | CS → CSMS | StartTransaction (Reserved)      | reservationId included                              |
| 5.14                                    | CS → CSMS | StatusNotification               | status: Charging                                    |
| 5.15                                    | CS → CSMS | MeterValues                      | Values present                                      |
| 5.16                                    | CSMS → CS | RemoteStopTransaction            | status: Accepted                                    |
| 5.17                                    | CS → CSMS | StopTransaction                  | status: Accepted                                    |
| 5.18                                    | CS → CSMS | StatusNotification               | status: Finishing                                   |
| 5.19                                    | CS → CSMS | StatusNotification               | status: Available                                   |
| <b>6. Charging Profile Verification</b> |           |                                  |                                                     |
| 6.1                                     | CS → CSMS | StatusNotification (Unplug)      | status: Available                                   |
| 6.2                                     | CS → CSMS | StatusNotification (Plug)        | status: Preparing                                   |
| 6.3                                     | CS → CSMS | Authorize (Card)                 | status: Accepted                                    |

| Item                                      | Direction | Message / Description           | Requirement / Content Include |
|-------------------------------------------|-----------|---------------------------------|-------------------------------|
| 6.4                                       | CS → CSMS | StartTransaction                | connectorId, idTag            |
| 6.5                                       | CS → CSMS | StatusNotification              | status: Charging              |
| 6.6                                       | CS → CSMS | MeterValues                     | Values present                |
| 6.7                                       | CSMS → CS | SetChargingProfile (TxProfile)  | status: Accepted              |
| 6.8                                       | CS → CSMS | MeterValues                     | Values present                |
| 6.9                                       | CSMS → CS | SetChargingProfile (Update)     | status: Accepted              |
| 6.10                                      | CS → CSMS | MeterValues                     | Values present                |
| 6.11                                      | CS → CSMS | StopTransaction                 | Verify profile effect         |
| 6.12                                      | CS → CSMS | StatusNotification (Plug)       | status: Finishing             |
| 6.13                                      | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| 6.14                                      | CS → CSMS | StatusNotification (Plug)       | status: Preparing             |
| 6.15                                      | CSMS → CS | RemoteStartTransaction          | status: Accepted              |
| 6.16                                      | CS → CSMS | StartTransaction                | connectorId, idTag            |
| 6.17                                      | CS → CSMS | StatusNotification              | status: Charging              |
| 6.18                                      | CS → CSMS | MeterValues                     | Values present                |
| 6.19                                      | CSMS → CS | SetChargingProfile              | status: Accepted              |
| 6.20                                      | CS → CSMS | MeterValues                     | Values present                |
| 6.21                                      | CSMS → CS | SetChargingProfile              | status: Accepted              |
| 6.22                                      | CS → CSMS | MeterValues                     | Values present                |
| 6.23                                      | CSMS → CS | RemoteStopTransaction           | status: Accepted              |
| 6.24                                      | CS → CSMS | StopTransaction                 | status: Accepted              |
| 6.25                                      | CS → CSMS | StatusNotification (Plug)       | status: Finishing             |
| 6.26                                      | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| <b>7. Abnormal Operation Verification</b> |           |                                 |                               |
| 7.1.1                                     | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| 7.1.2                                     | CSMS → CS | RemoteStartTransaction          | status: Rejected              |
| <b>7.2 Concurrent Remote Start</b>        |           |                                 |                               |
| 7.2.1                                     | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| 7.2.2                                     | CS → CSMS | StatusNotification (Plug)       | status: Preparing             |
| 7.2.3                                     | CSMS → CS | RemoteStartTransaction (1)      | status: Accepted              |
| 7.2.4                                     | CSMS → CS | RemoteStartTransaction (2)      | status: Rejected (Busy)       |
| 7.2.5                                     | CS → CSMS | StartTransaction                | status: Accepted              |
| 7.2.6                                     | CS → CSMS | StatusNotification              | status: Charging              |
| 7.2.7                                     | CS → CSMS | MeterValues                     | Values present                |
| 7.2.8                                     | CSMS → CS | RemoteStopTransaction           | status: Accepted              |
| 7.2.9                                     | CS → CSMS | StopTransaction                 | status: Accepted              |
| 7.2.10                                    | CS → CSMS | StatusNotification              | status: Finishing             |
| 7.2.11                                    | CS → CSMS | StatusNotification              | status: Available             |
| <b>7.3 Swap Card</b>                      |           |                                 |                               |
| 7.3.1                                     | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| 7.3.2                                     | CS → CSMS | StatusNotification (Plug)       | status: Preparing             |
| 7.3.3                                     | CS → CSMS | Authorize (Invalid)             | status: Rejected              |
| 7.3.4                                     | CS → CSMS | Authorize (Valid)               | status: Accepted              |
| 7.3.5                                     | CS → CSMS | StartTransaction                | status: Accepted              |
| 7.3.6                                     | CS → CSMS | StatusNotification              | status: Charging              |
| 7.3.7                                     | CS → CSMS | MeterValues                     | Values present                |
| 7.3.8                                     | CS → CSMS | Authorize (Invalid Stop)        | status: Rejected              |
| 7.3.9                                     | CS → CSMS | StopTransaction                 | status: Accepted              |
| 7.3.10                                    | CS → CSMS | StatusNotification              | status: Finishing             |
| 7.3.11                                    | CS → CSMS | StatusNotification              | status: Available             |
| <b>7.4 Emergency Stop</b>                 |           |                                 |                               |
| 7.4.1                                     | CS → CSMS | StatusNotification (Unplug)     | status: Available             |
| 7.4.2                                     | CS → CSMS | StatusNotification (Plug)       | status: Preparing             |
| 7.4.3                                     | CSMS → CS | RemoteStartTransaction          | status: Accepted              |
| 7.4.4                                     | CS → CSMS | StartTransaction                | status: Accepted              |
| 7.4.5                                     | CS → CSMS | StatusNotification              | status: Charging              |
| 7.4.6                                     | CS → CSMS | MeterValues                     | Values present                |
| 7.4.7                                     | CS → CSMS | StopTransaction (Emergency)     | status: Accepted              |
| 7.4.8                                     | CS → CSMS | StatusNotification              | status: Faulted (Emergency)   |
| 7.4.9                                     | CS → CSMS | StatusNotification (Persistent) | status: Faulted               |

| Item                                      | Direction | Message / Description          | Requirement / Content Include |
|-------------------------------------------|-----------|--------------------------------|-------------------------------|
| 7.4.10                                    | CS → CSMS | StatusNotification (Recover)   | status: Available             |
| <b>7.5 Open Door</b>                      |           |                                |                               |
| 7.5.1                                     | CS → CSMS | StatusNotification (Unplug)    | status: Available             |
| 7.5.2                                     | CS → CSMS | StatusNotification (DoorOpen)  | status: Faulted (DoorOpen)    |
| 7.5.3                                     | CS → CSMS | StatusNotification (DoorClose) | status: Available             |
| <b>7.6 Power Loss</b>                     |           |                                |                               |
| 7.6.1                                     | CS → CSMS | StatusNotification (Unplug)    | status: Available             |
| 7.6.2                                     | CS → CSMS | StatusNotification (Plug)      | status: Preparing             |
| 7.6.3                                     | CSMS → CS | RemoteStartTransaction         | status: Accepted              |
| 7.6.4                                     | CS → CSMS | StartTransaction               | status: Accepted              |
| 7.6.5                                     | CS → CSMS | StatusNotification             | status: Charging              |
| 7.6.6                                     | CS → CSMS | MeterValues                    | Values present                |
| 7.6.7                                     | CS → CSMS | StopTransaction (PowerLoss)    | status: Accepted              |
| 7.6.8                                     | CS → CSMS | BootNotification               | Recovery                      |
| 7.6.9                                     | CS → CSMS | StatusNotification             | status: Preparing             |
| 7.6.10                                    | CS → CSMS | StatusNotification             | status: Available             |
| <b>7.7 Local List (Offline)</b>           |           |                                |                               |
| 7.7.1                                     | N/A       | Disconnect LAN                 | Simulated                     |
| 7.7.2                                     | CS → CSMS | StartTransaction (Offline)     | Logged upon Reconnect         |
| 7.7.3                                     | CS → CSMS | StopTransaction (Offline)      | Logged upon Reconnect         |
| <b>8. Dual Connector Operation</b>        |           |                                |                               |
| <b>8.1 Concurrent Remote Start (Dual)</b> |           |                                |                               |
| 8.1.1                                     | CS → CSMS | StatusNotification (Unplug)    | status: Available             |
| 8.1.2                                     | CS → CSMS | StatusNotification (Plug Both) | status: Preparing             |
| 8.1.3                                     | CSMS → CS | RemoteStartTransaction (1)     | status: Accepted              |
| 8.1.4                                     | CSMS → CS | RemoteStartTransaction (2)     | status: Accepted              |
| 8.1.5                                     | CS → CSMS | StartTransaction (1)           | status: Accepted              |
| 8.1.6                                     | CS → CSMS | StatusNotification (1)         | status: Charging              |
| 8.1.7                                     | CS → CSMS | StartTransaction (2)           | status: Accepted              |
| 8.1.8                                     | CS → CSMS | StatusNotification (2)         | status: Charging              |
| 8.1.9                                     | CS → CSMS | MeterValues (1)                | Values present                |
| 8.1.10                                    | CS → CSMS | MeterValues (2)                | Values present                |
| 8.1.11                                    | CSMS → CS | RemoteStopTransaction (1)      | status: Accepted              |
| 8.1.12                                    | CS → CSMS | StopTransaction (1)            | status: Accepted              |
| 8.1.13                                    | CS → CSMS | StatusNotification (1)         | status: Finishing             |
| 8.1.14                                    | CS → CSMS | StatusNotification (1 Unplug)  | status: Available             |
| 8.1.15                                    | CSMS → CS | RemoteStopTransaction (2)      | status: Accepted              |
| 8.1.16                                    | CS → CSMS | StopTransaction (2)            | status: Accepted              |
| 8.1.17                                    | CS → CSMS | StatusNotification (2)         | status: Finishing             |
| 8.1.18                                    | CS → CSMS | StatusNotification (2 Unplug)  | status: Available             |
| <b>8.2 Shared Emergency Stop (Dual)</b>   |           |                                |                               |
| 8.2.1                                     | CS → CSMS | StatusNotification (Unplug)    | status: Available             |
| 8.2.2                                     | CS → CSMS | StatusNotification (1 Plug)    | status: Preparing             |
| 8.2.3                                     | CSMS → CS | RemoteStartTransaction (1)     | status: Accepted              |
| 8.2.4                                     | CS → CSMS | StartTransaction (1)           | status: Accepted              |
| 8.2.5                                     | CS → CSMS | StatusNotification (1)         | status: Charging              |
| 8.2.6                                     | CS → CSMS | MeterValues (1)                | Values present                |
| 8.2.7                                     | CS → CSMS | StatusNotification (2 Plug)    | status: Preparing             |
| 8.2.8                                     | CSMS → CS | RemoteStartTransaction (2)     | status: Accepted              |
| 8.2.9                                     | CS → CSMS | StartTransaction (2)           | status: Accepted              |
| 8.2.10                                    | CS → CSMS | StatusNotification (2)         | status: Charging              |
| 8.2.11                                    | CS → CSMS | MeterValues (2)                | Values present                |
| 8.2.12                                    | CS → CSMS | StopTransaction (1 Emerg)      | status: Accepted              |
| 8.2.13                                    | CS → CSMS | StopTransaction (2 Emerg)      | status: Accepted              |
| 8.2.14                                    | CS → CSMS | StatusNotification (Both)      | status: Faulted (Emergency)   |
| 8.2.15                                    | CS → CSMS | StatusNotification (Unplug)    | status: Faulted               |
| 8.2.16                                    | CS → CSMS | StatusNotification (Release)   | status: Available             |
| <b>8.3 Power Loss (Dual)</b>              |           |                                |                               |
| 8.3.1                                     | CS → CSMS | StatusNotification (Unplug)    | status: Available             |
| 8.3.2                                     | CS → CSMS | StatusNotification (1 Plug)    | status: Preparing             |

| Item                                 | Direction | Message / Description            | Requirement / Content Include                  |
|--------------------------------------|-----------|----------------------------------|------------------------------------------------|
| 8.3.3                                | CSMS → CS | RemoteStartTransaction (1)       | status: Accepted                               |
| 8.3.4                                | CS → CSMS | StartTransaction (1)             | status: Accepted                               |
| 8.3.5                                | CS → CSMS | StatusNotification (1)           | status: Charging                               |
| 8.3.6                                | CS → CSMS | MeterValues (1)                  | Values present                                 |
| 8.3.7                                | CS → CSMS | StatusNotification (2 Plug)      | status: Preparing                              |
| 8.3.8                                | CSMS → CS | RemoteStartTransaction (2)       | status: Accepted                               |
| 8.3.9                                | CS → CSMS | StartTransaction (2)             | status: Accepted                               |
| 8.3.10                               | CS → CSMS | StatusNotification (2)           | status: Charging                               |
| 8.3.11                               | CS → CSMS | MeterValues (2)                  | Values present                                 |
| 8.3.12                               | CS → CSMS | StopTransaction (1 PwrLoss)      | status: Accepted                               |
| 8.3.13                               | CS → CSMS | StopTransaction (2 PwrLoss)      | status: Accepted                               |
| 8.3.14                               | CS → CSMS | BootNotification                 | Recovery                                       |
| 8.3.15                               | CS → CSMS | StatusNotification (Plug)        | status: Preparing                              |
| 8.3.16                               | CS → CSMS | StatusNotification (Unplug)      | status: Available                              |
| <b>9. MEA Specific Configuration</b> |           |                                  |                                                |
| 9.1                                  | CSMS → CS | ChangeConfiguration (Heartbeat)  | 60 min                                         |
| 9.2                                  | CSMS → CS | ChangeConfiguration (MeterValue) | 1 min                                          |
| 9.3                                  | CSMS → CS | ChangeConfiguration (LocalAuth)  | False                                          |
| <b>9.4 V2G Configuration</b>         |           |                                  |                                                |
| 9.4.1                                | CSMS → CS | ChangeConfig (V2G: Discharge)    | MEA_V2G_PowerDemand = -5000                    |
| 9.4.2                                | CSMS → CS | ChangeConfig (V2G: Charge)       | MEA_V2G_PowerDemand = 2000                     |
| 9.4.3                                | CSMS → CS | ChangeConfig (V2G: Idle)         | MEA_V2G_PowerDemand = 0                        |
| <b>10. Message Summary Checks</b>    |           |                                  |                                                |
| 10.1                                 | CS → CSMS | Authorize                        | Include: IdTag                                 |
| 10.2                                 | CS → CSMS | BootNotification                 | Include: Model, Vendor, Firmware               |
| 10.3                                 | CS → CSMS | DataTransfer                     | *Dependent on consideration                    |
| 10.4                                 | CS → CSMS | Heartbeat (60 min)               | Received                                       |
| 10.5                                 | CS → CSMS | MeterValues (1 min)              | Voltage, Current, Energy, Power, SoC           |
| 10.6                                 | CSMS → CS | RemoteStartTransaction           | Accepted / Rejected (Unplug)                   |
| 10.7                                 | CSMS → CS | RemoteStopTransaction            | status: Accepted                               |
| 10.8                                 | CSMS → CS | Reset                            | status: Accepted                               |
| 10.9                                 | CS → CSMS | StartTransaction                 | connectorId, idTag, meterStart, timestamp      |
| 10.10                                | CS → CSMS | StatusNotification               | status, errorCode, info                        |
| 10.11                                | CS → CSMS | StopTransaction                  | idTag, meterStop, timestamp, transactionId     |
| 10.12                                | CSMS → CS | ReserveNow                       | status: Accepted                               |
| 10.13                                | CSMS → CS | CancelReservation                | status: Accepted                               |
| 10.14                                | CSMS → CS | SetChargingProfile               | status: Accepted                               |
| 10.15                                | CSMS → CS | TriggerMessage                   | status: Accepted                               |
| 10.16                                | CSMS → CS | GetConfiguration                 | Keys: Heartbeat, LocalAuth, MeterValue, Unlock |
| 10.17                                | CSMS → CS | ChangeConfiguration              | status: Accepted                               |
| 10.18                                | CSMS → CS | ChangeAvailability               | status: Accepted                               |
| 10.19                                | CSMS → CS | GetDiagnostics                   | status: Accepted                               |
| 10.20                                | CSMS → CS | UpdateFirmware                   | Dispatch success                               |
| 10.21                                | CSMS → CS | SendLocalList                    | status: Accepted                               |
| 10.22                                | CSMS → CS | GetLocalListVersion              | listVersion returned                           |
| 10.23                                | CSMS → CS | clearCache                       | status: Accepted                               |
| <b>11. Other Verification</b>        |           |                                  |                                                |
| 11.1                                 | N/A       | LAN Disconnect Handshake         | Handshake time < 1 min                         |
| 11.2                                 | N/A       | Disconnect Statistics            | Frequency/Duration logged                      |

### 6.3.1 MEA OCPP Compliance Verification Flows

The following sequence diagrams illustrate the specific user journeys and system interactions for each test case defined in the MEA Compliance Report.



## 1. Configuration Verification

Verification of the system's ability to handle boot notifications, status updates, and remote configuration changes from the CSMS.

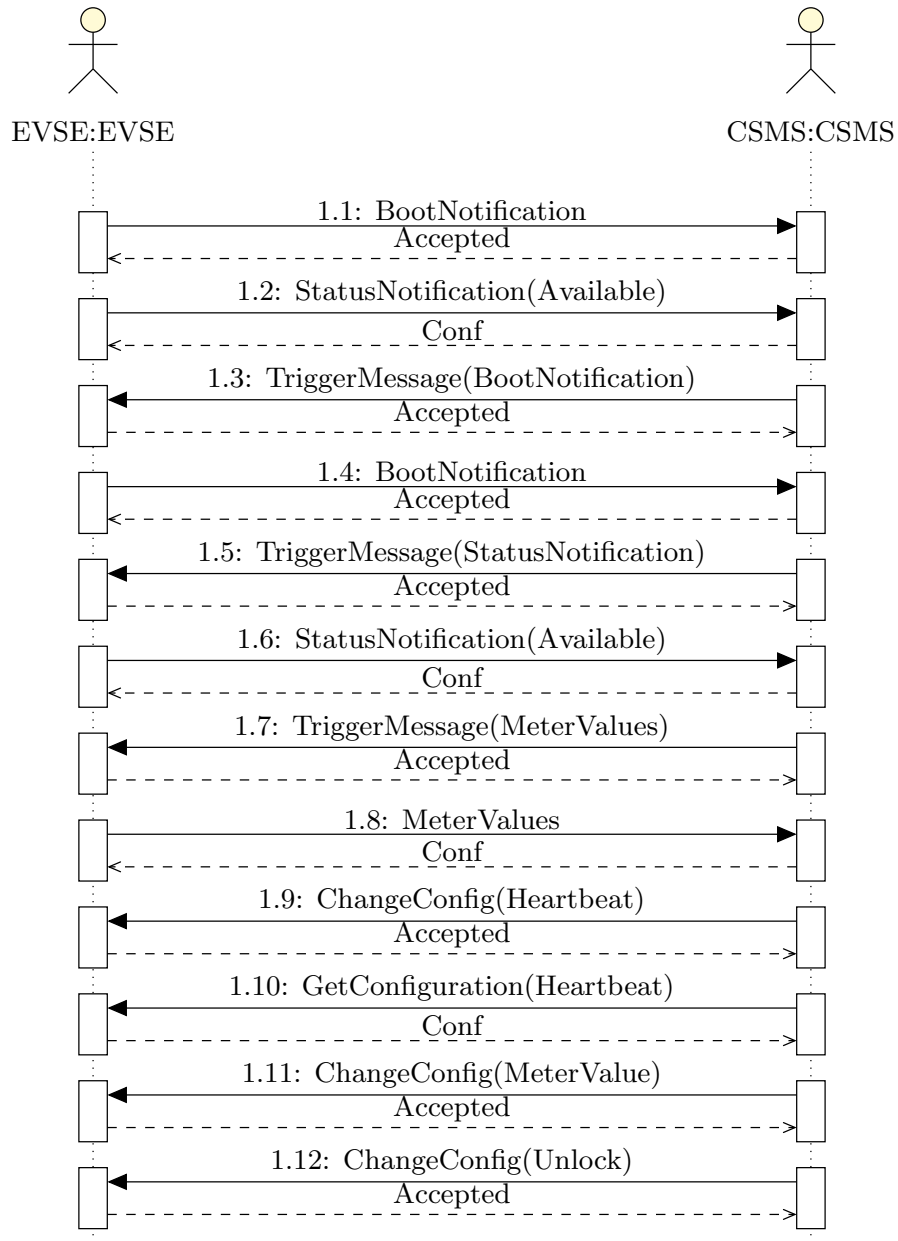


Figure 6.1: Configuration Verification (Part 1)

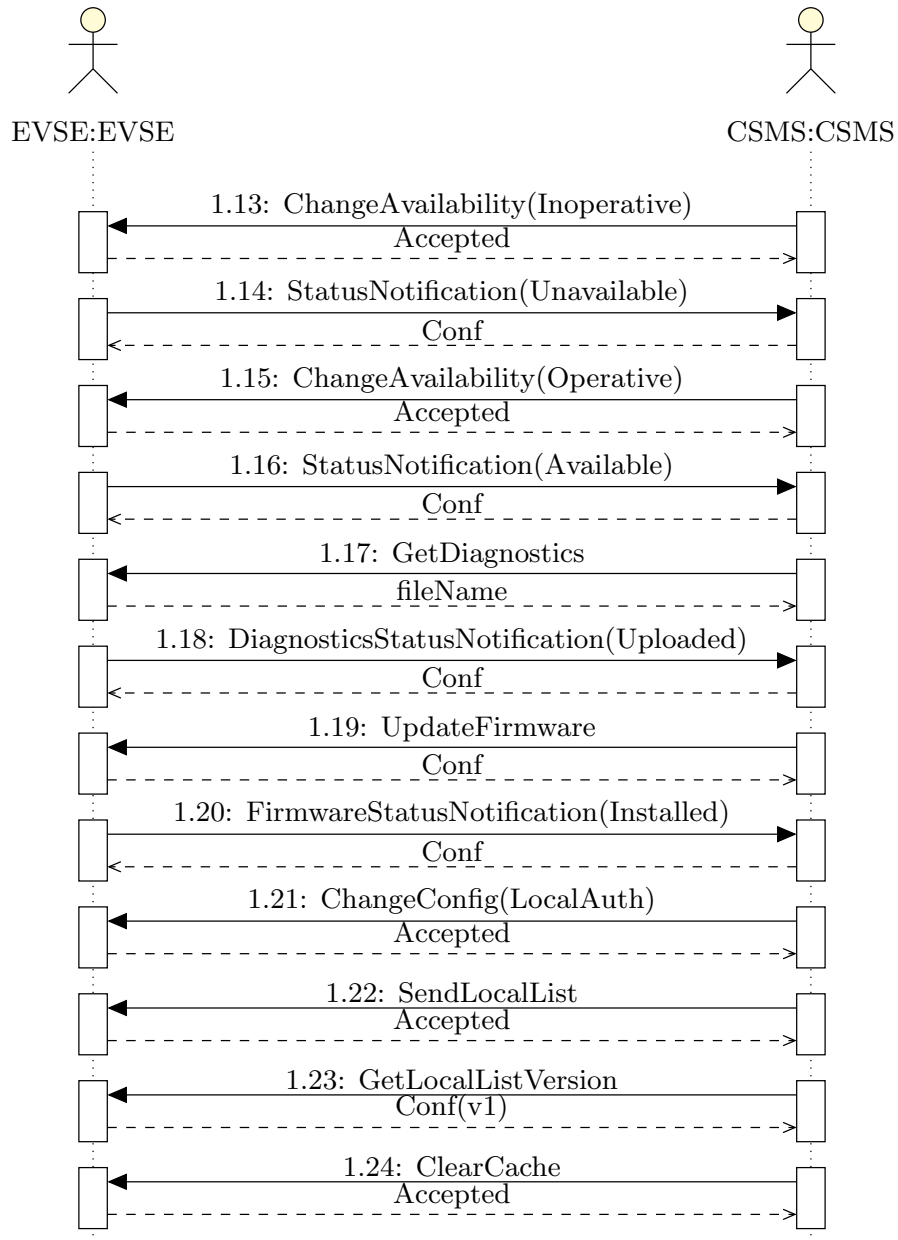


Figure 6.2: Configuration Verification (Part 2)

## 2. Auto Charge Verification

Verification of the "Auto Charge" (Plug & Charge emulation) logic, including remote stops and automatic authorization updates.

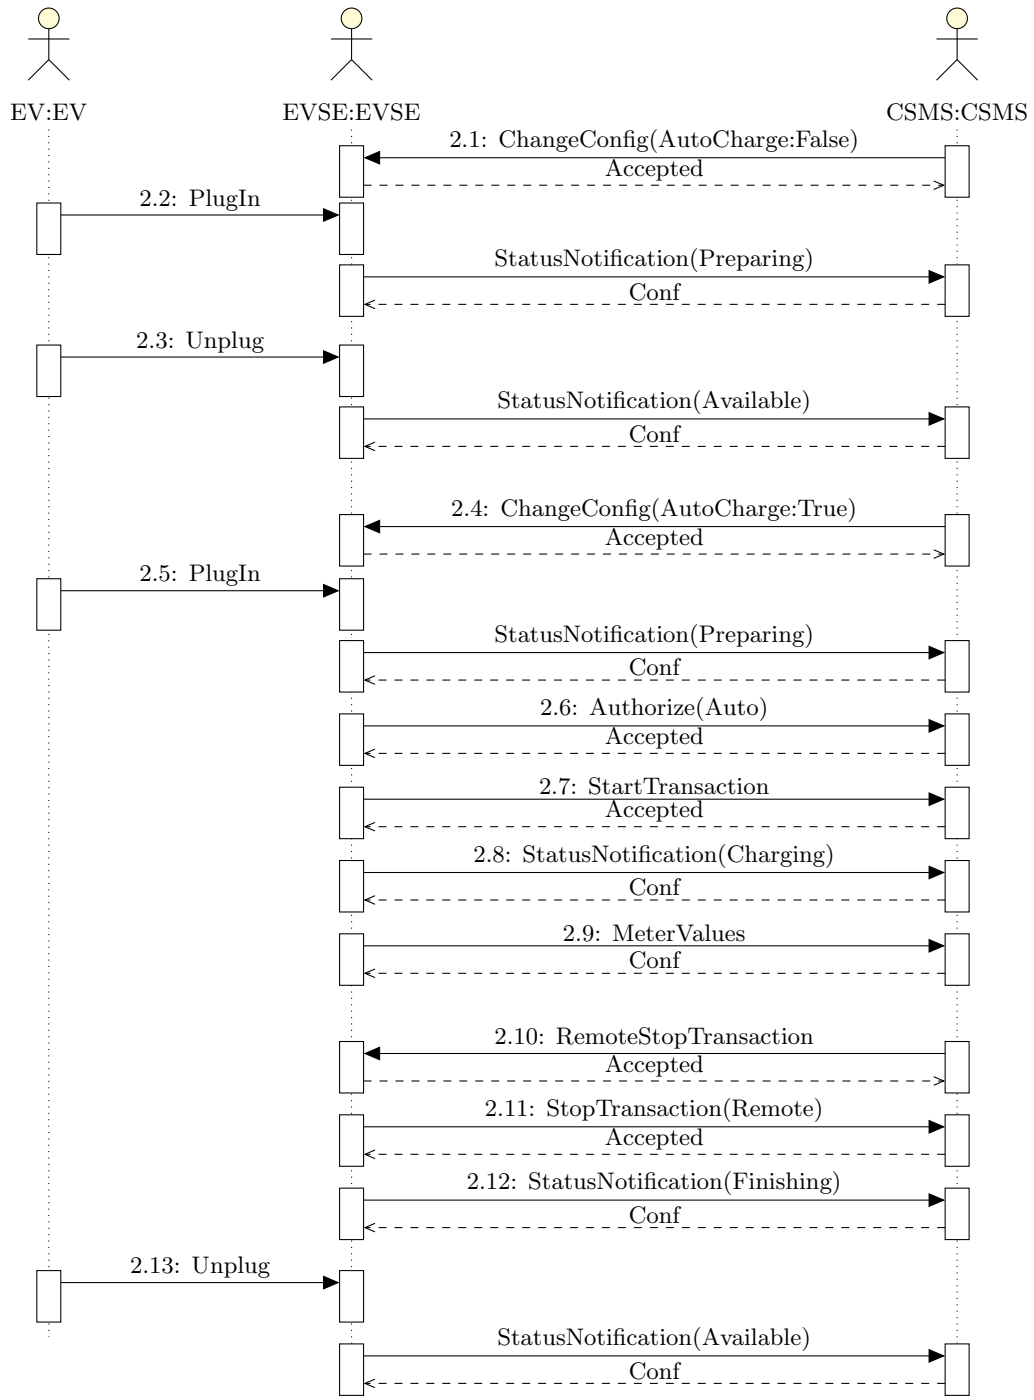


Figure 6.3: Auto Charge Verification (Part 1)

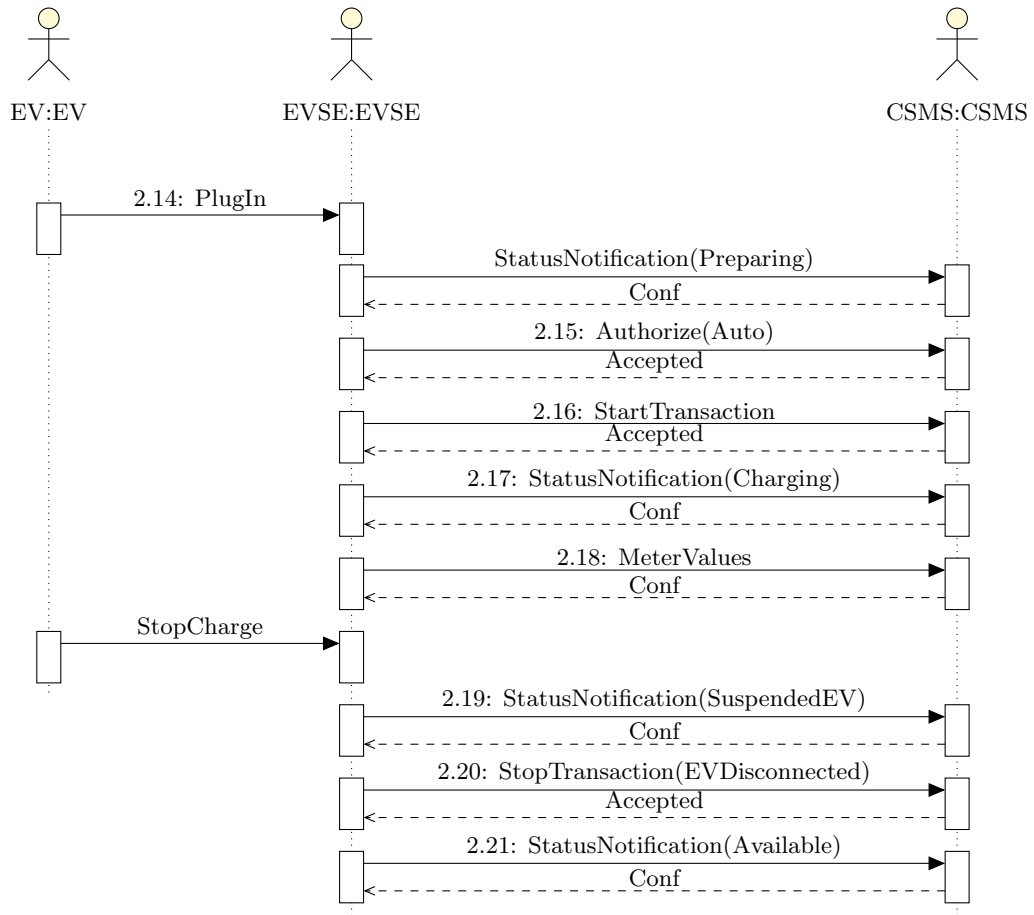


Figure 6.4: Auto Charge Verification (Part 2)

### 3. Normal Operation Verification

Verification of the standard RFID-based authorization and charging session lifecycle.

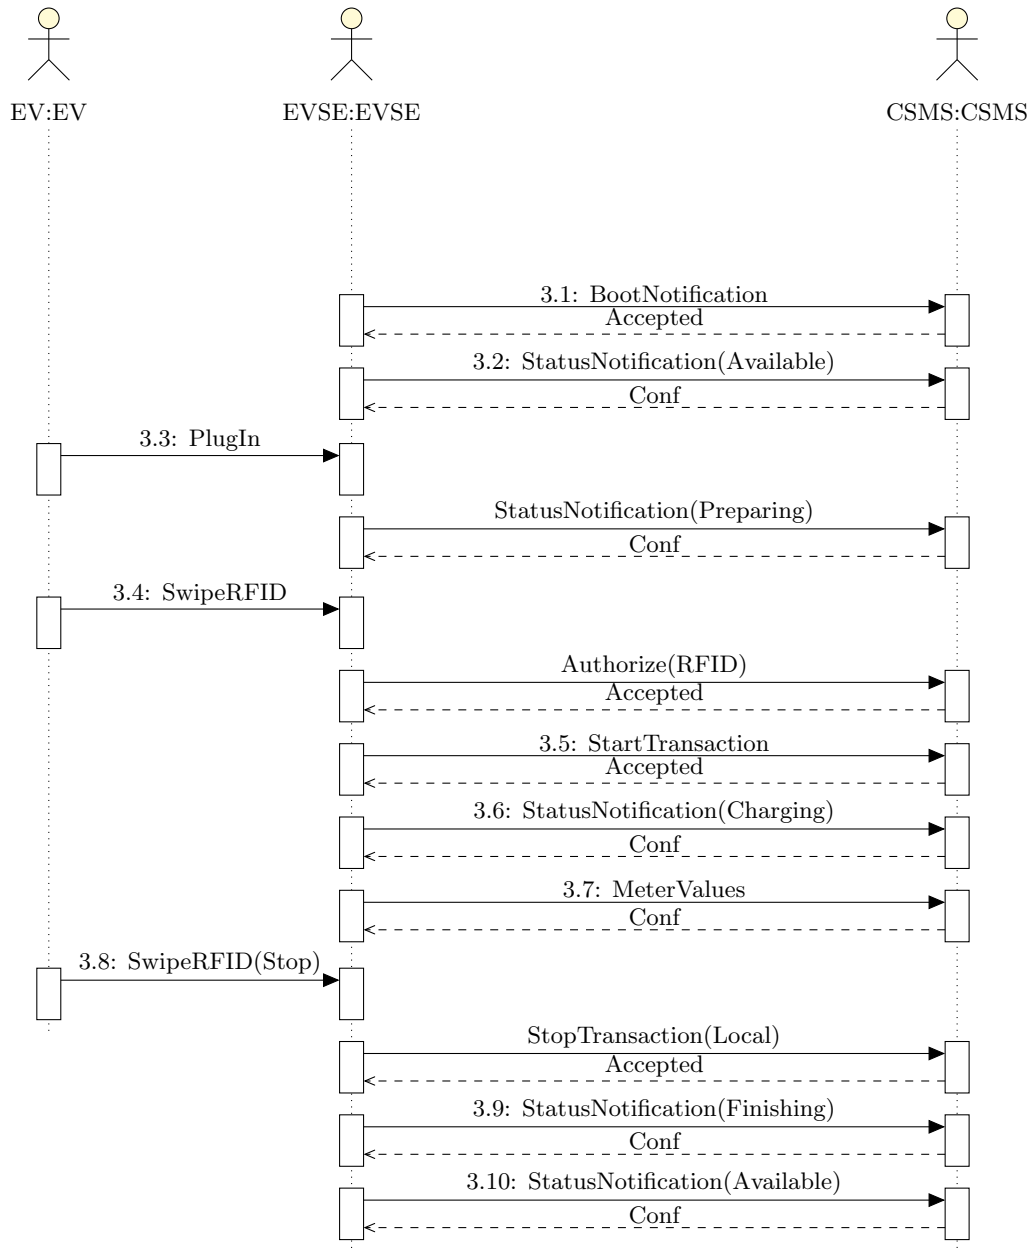


Figure 6.5: Normal Operation Verification (Part 1)

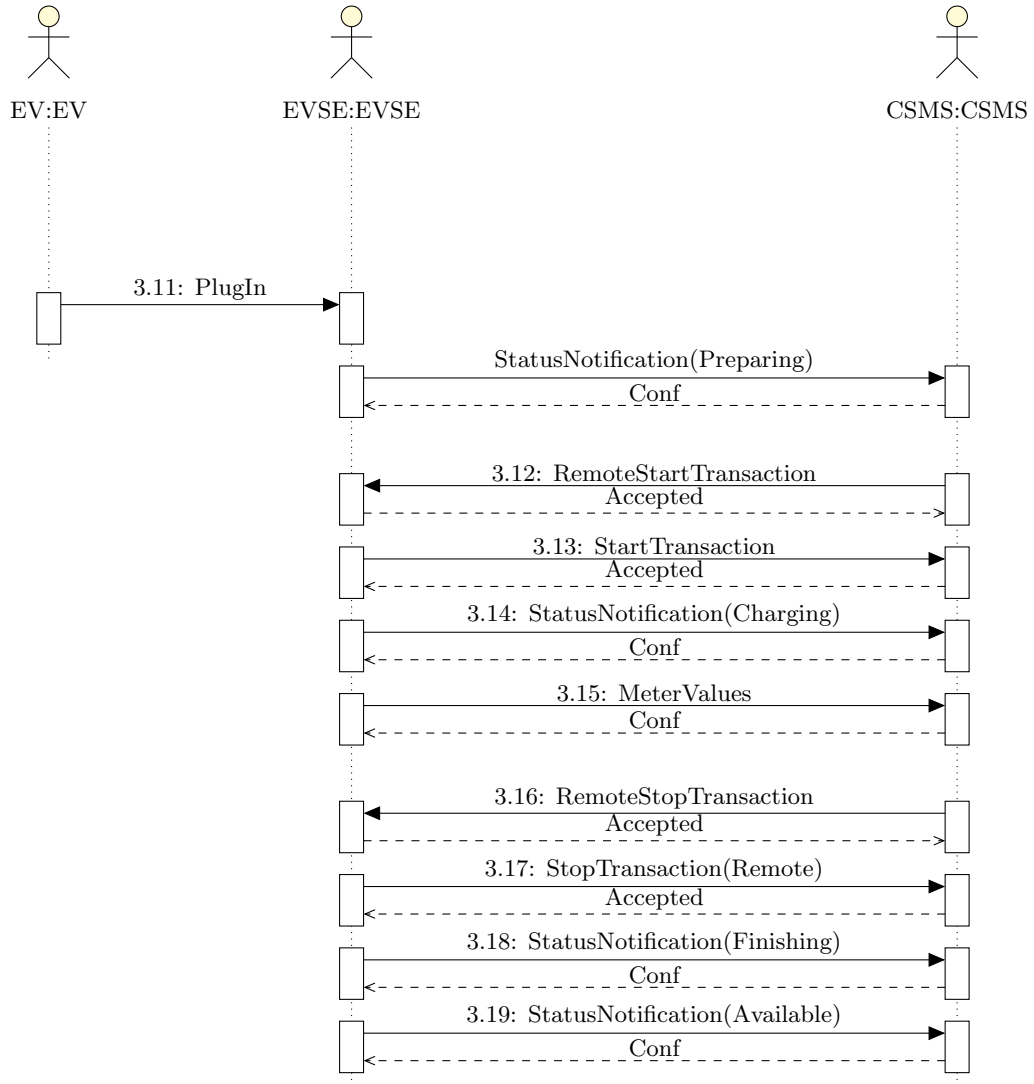


Figure 6.6: Normal Operation Verification (Part 2)

#### 4. Reset Verification

Verification of the system's behavior during Hard and Soft remote resets, ensuring proper state recovery and notification.

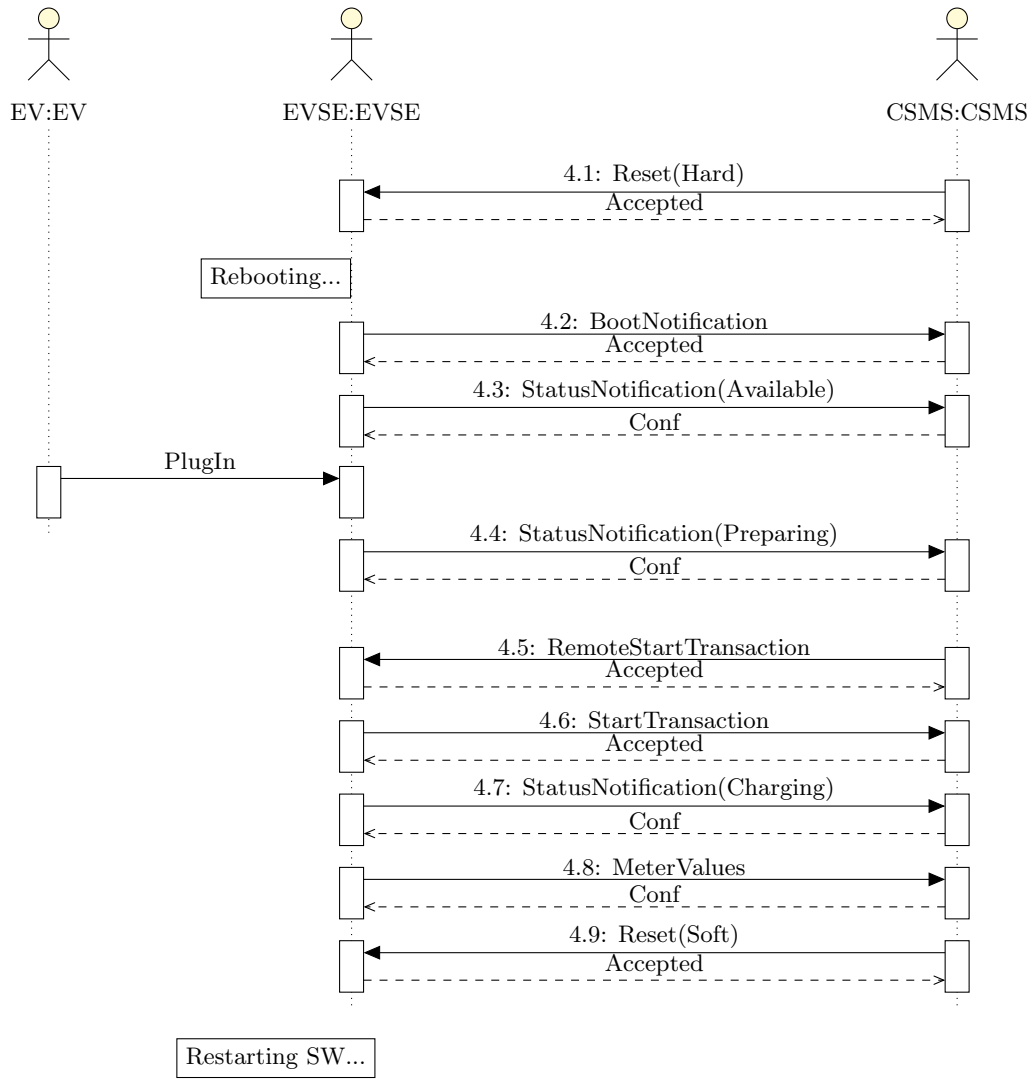


Figure 6.7: Reset Verification (Part 1)

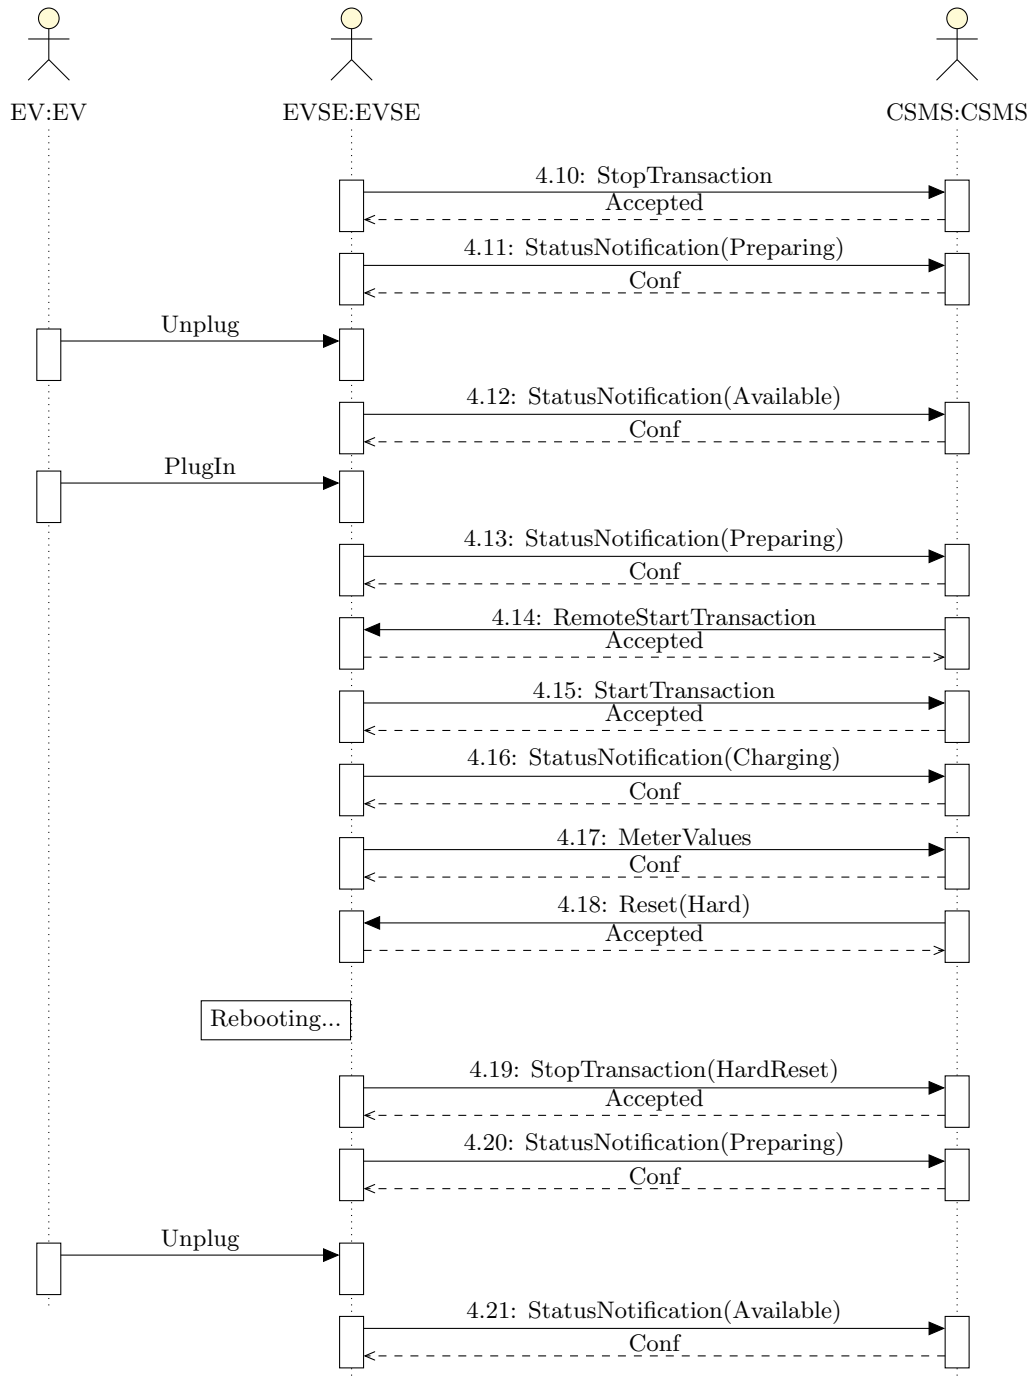


Figure 6.8: Reset Verification (Part 2)

## 5. Reservation Verification

Verification of the reservation system, including reservation creation, cancellation, expiry, and fulfillment.



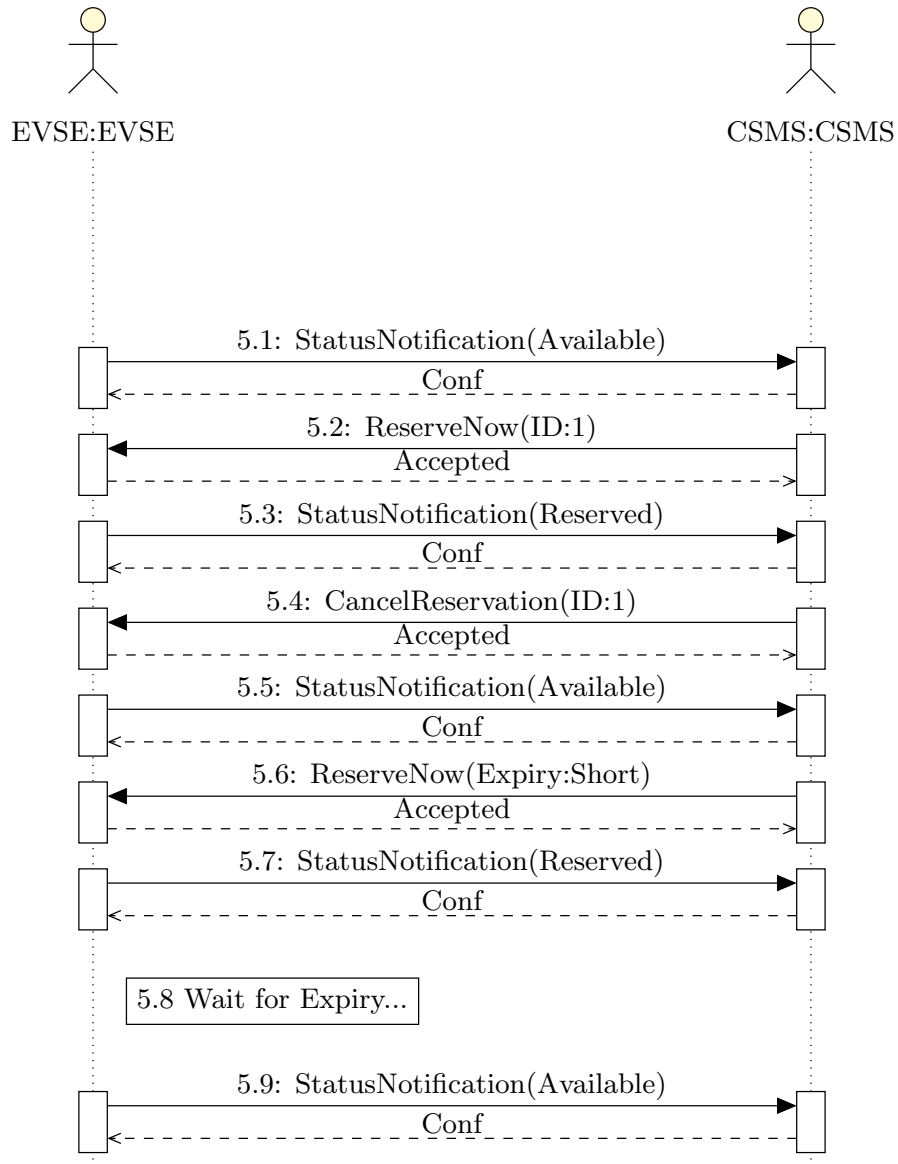


Figure 6.9: Reservation Verification (Part 1)

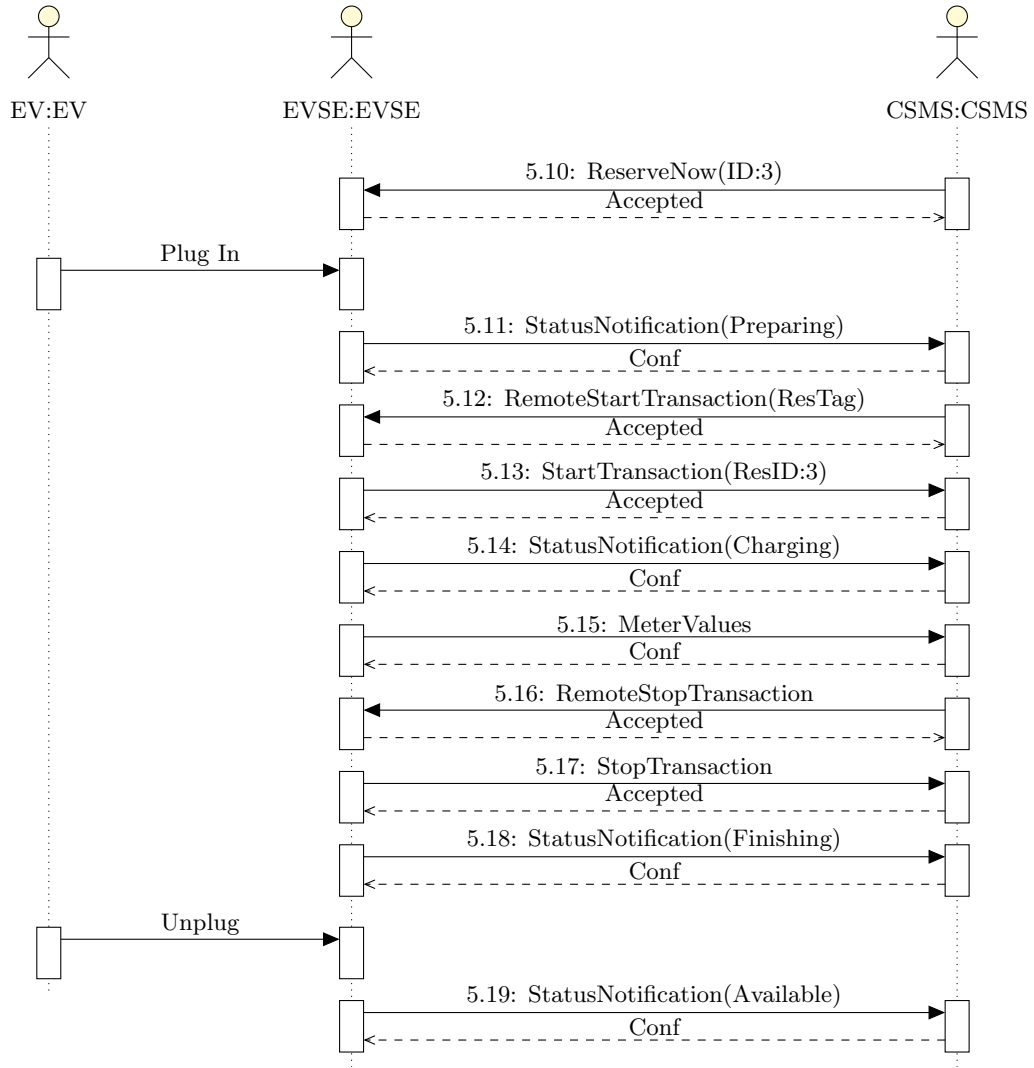


Figure 6.10: Reservation Verification (Part 2)

## 6. Charging Profile Verification

Verification of dynamic Smart Charging profiles sent by the CSMS to limit power draw during an active transaction.

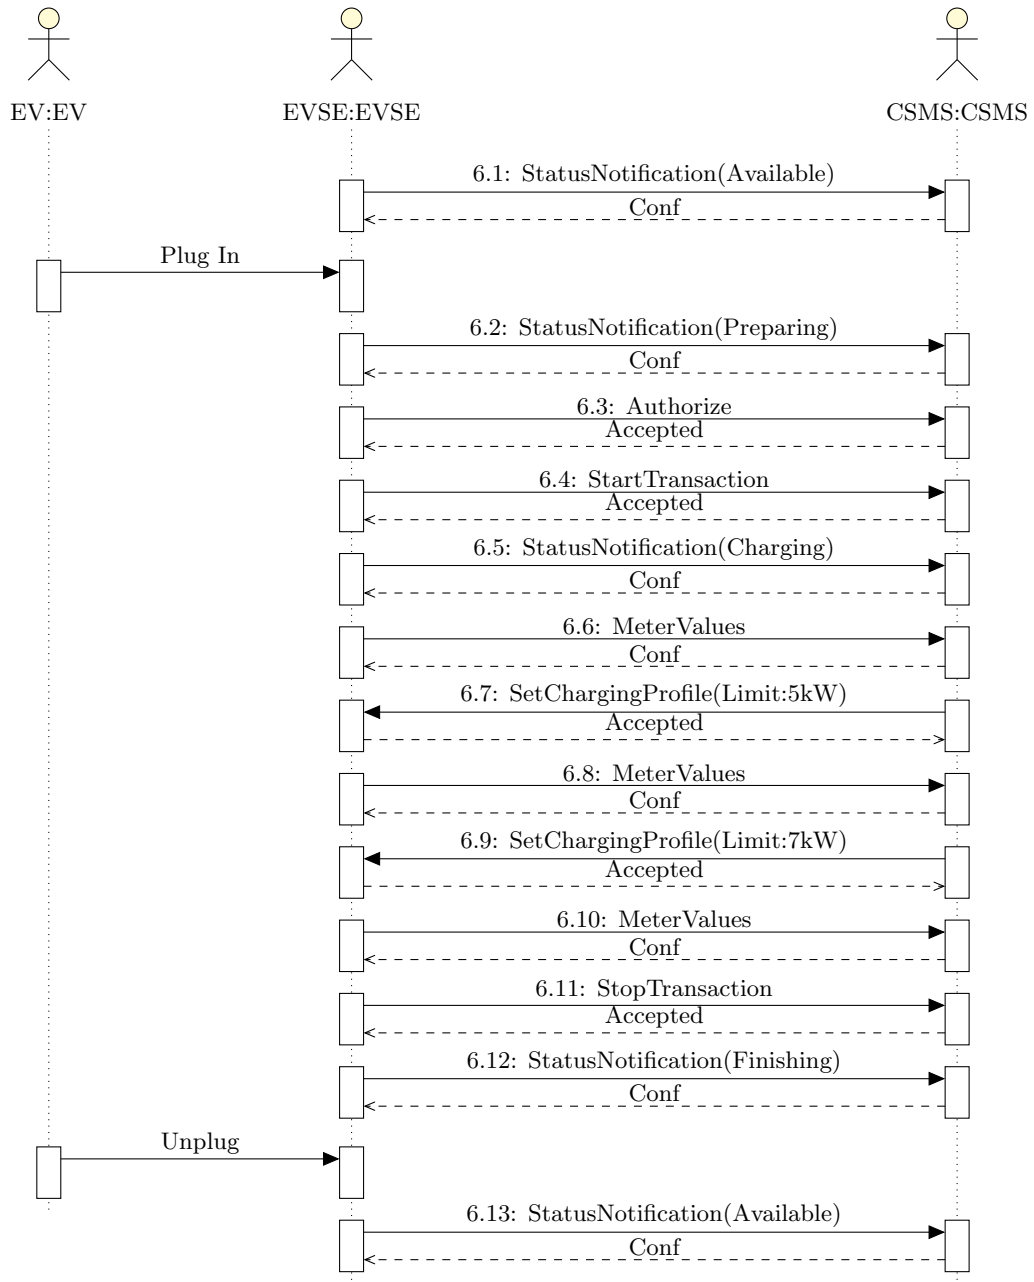


Figure 6.11: Charging Profile Verification (Part 1)

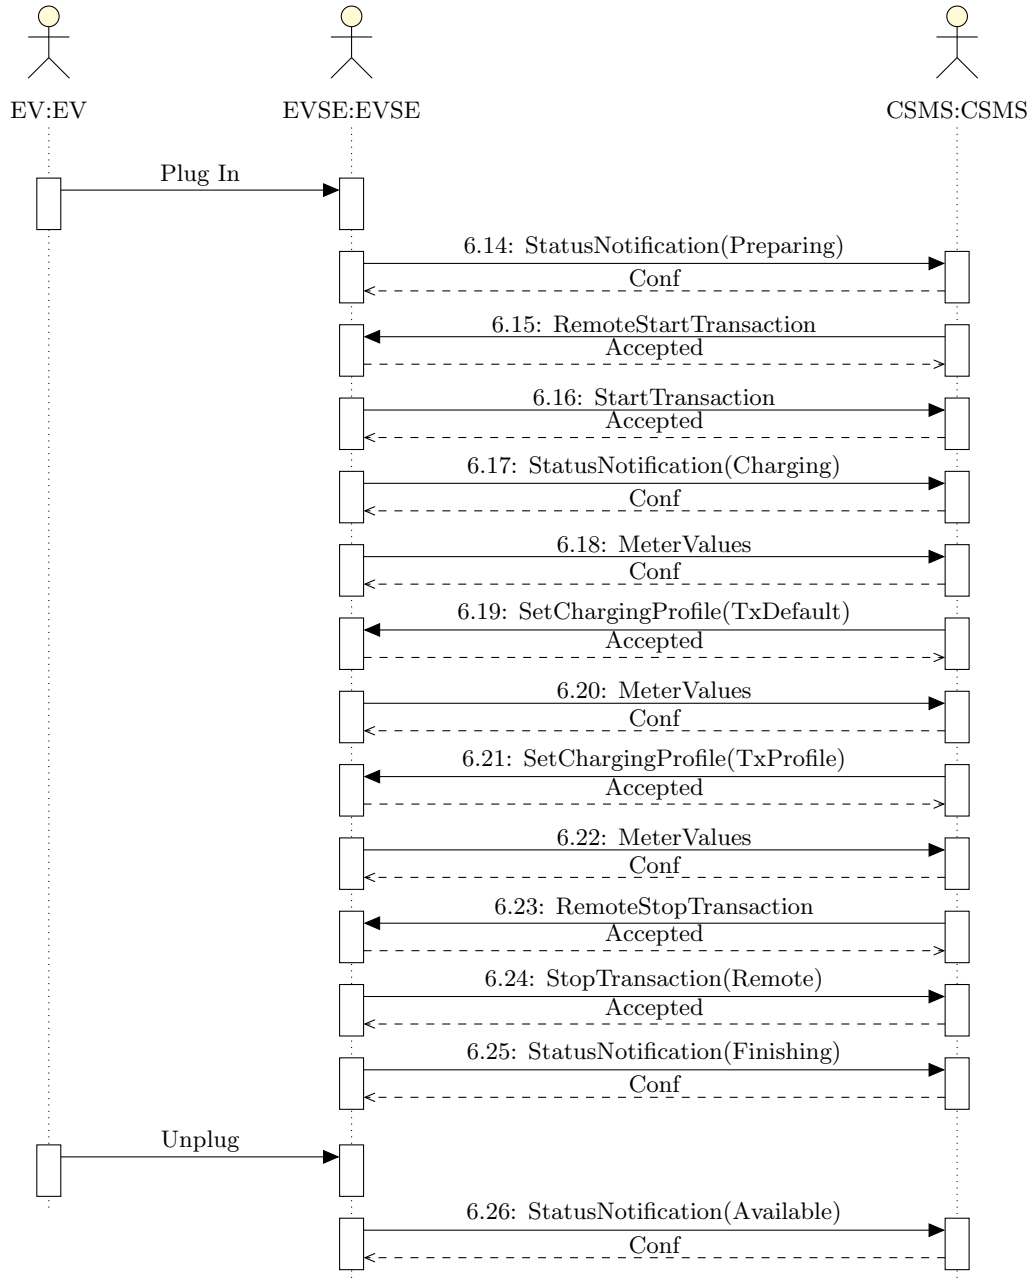


Figure 6.12: Charging Profile Verification (Part 2)

## 7. Abnormal Operation Verification

**7.1 Remote Start (Unplugged)** Ensures the system rejects a Remote Start request if no vehicle is connected.

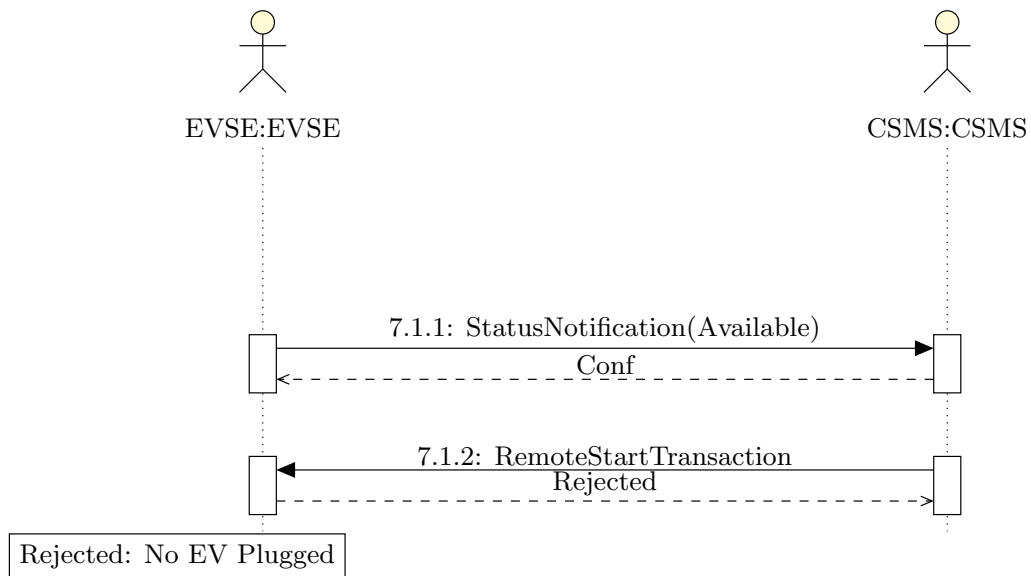


Figure 6.13: Remote Start (Unplugged) Sequence

**7.2 Concurrent Remote Start** Ensures the system correctly handles overlapping remote start requests on the same connector.

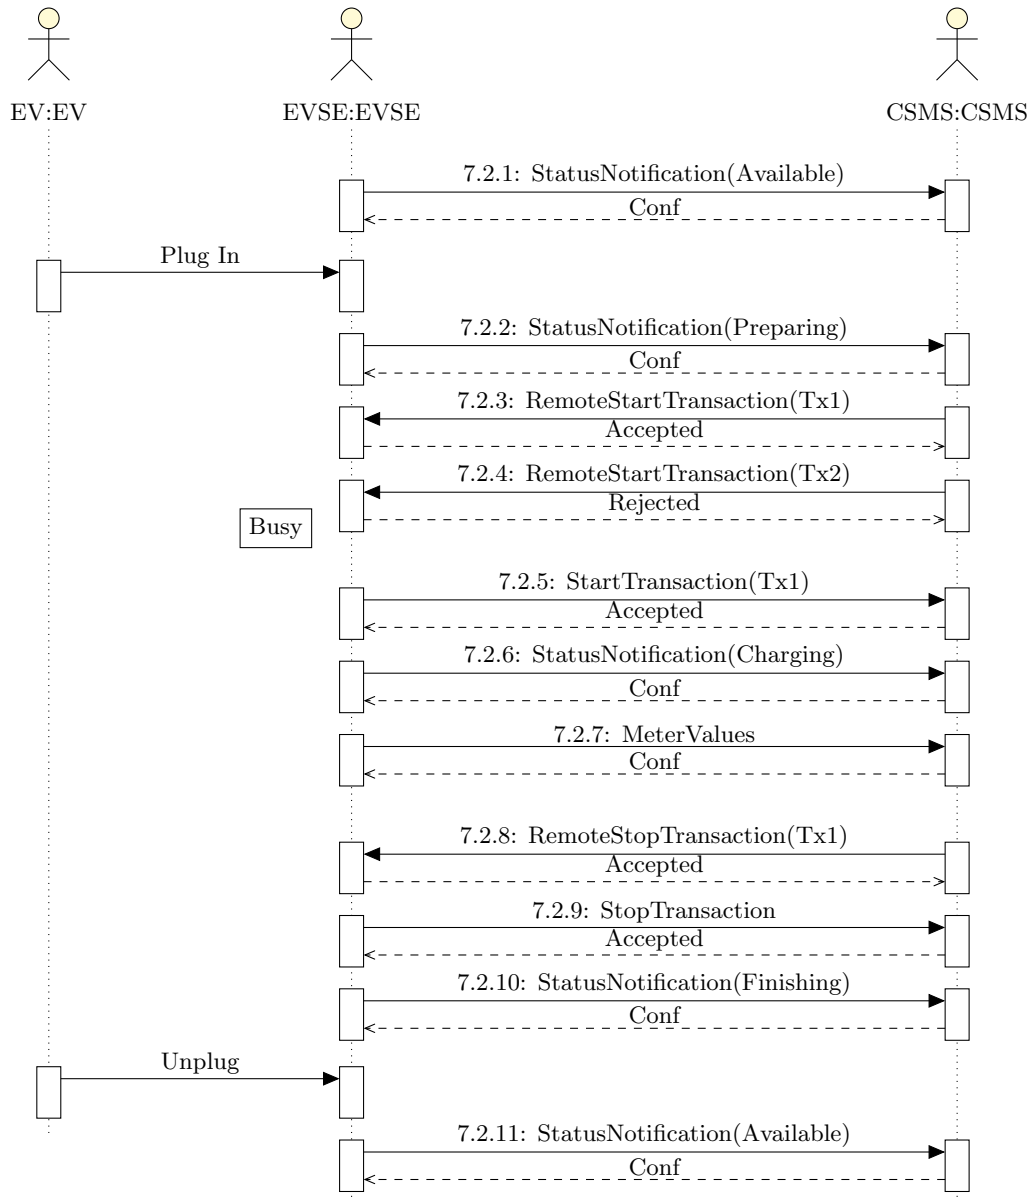


Figure 6.14: Concurrent Remote Start Sequence

**7.3 Swap Card** Verification of authorization logic when using invalid cards or swapping cards during a session.

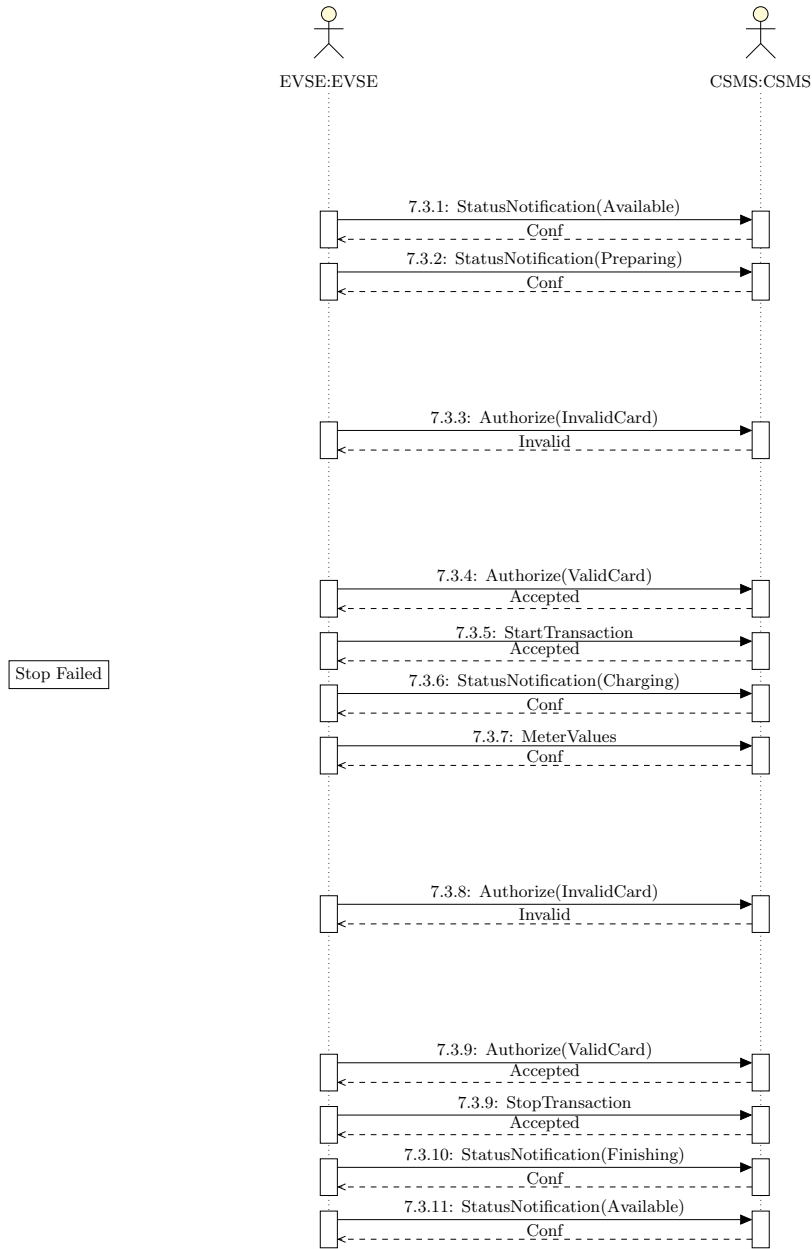


Figure 6.15: Swap Card Sequence

**7.4 Emergency Stop** Verification of the system's response to a physical Emergency Stop button press.

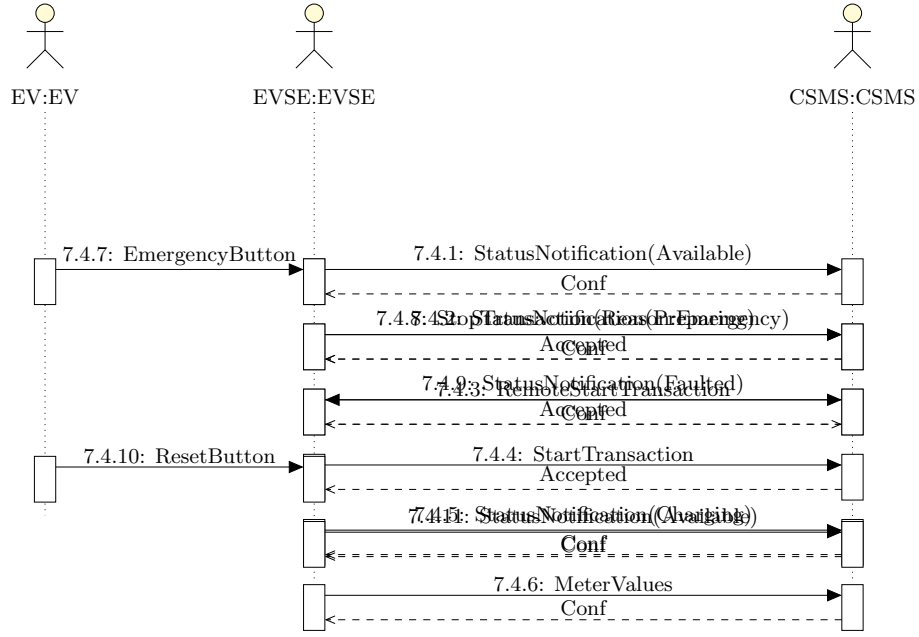


Figure 6.16: Emergency Stop Sequence

**7.5 Open Door** Verification of safety interlocks checking for open maintenance doors.

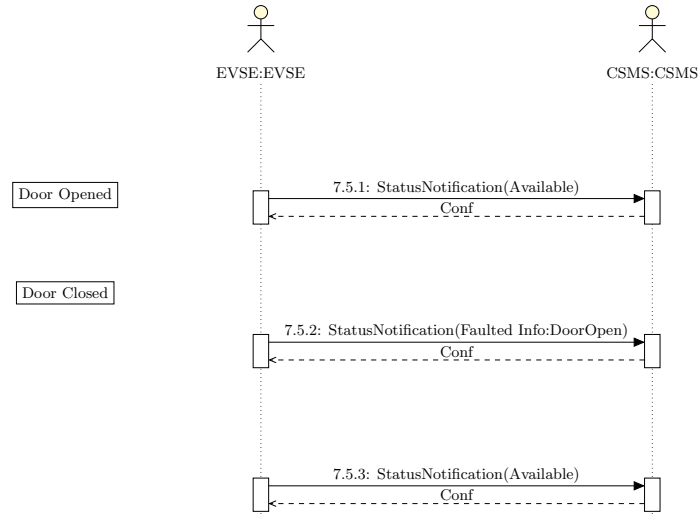


Figure 6.17: Open Door Fault Sequence

**7.6 Power Loss** Verification of transaction recovery and reporting after a power outage.



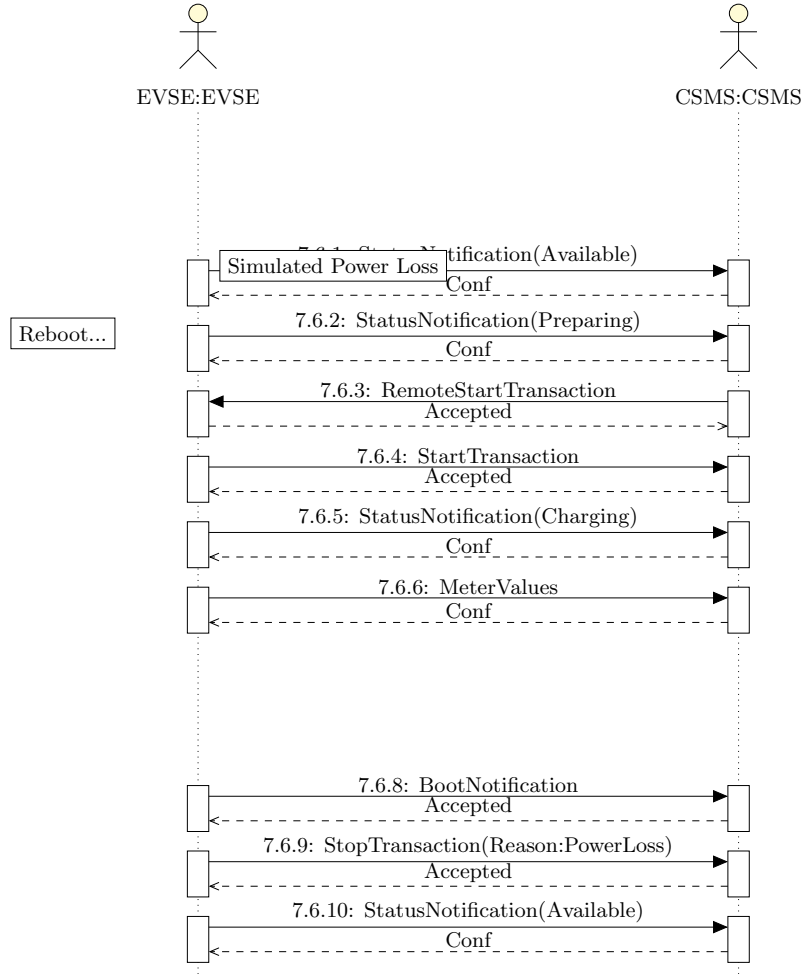


Figure 6.18: Power Loss Recovery Sequence

**7.7 Local List (Offline)** Verification of offline authorization using the Local Authorization List when CSMS is unreachable.


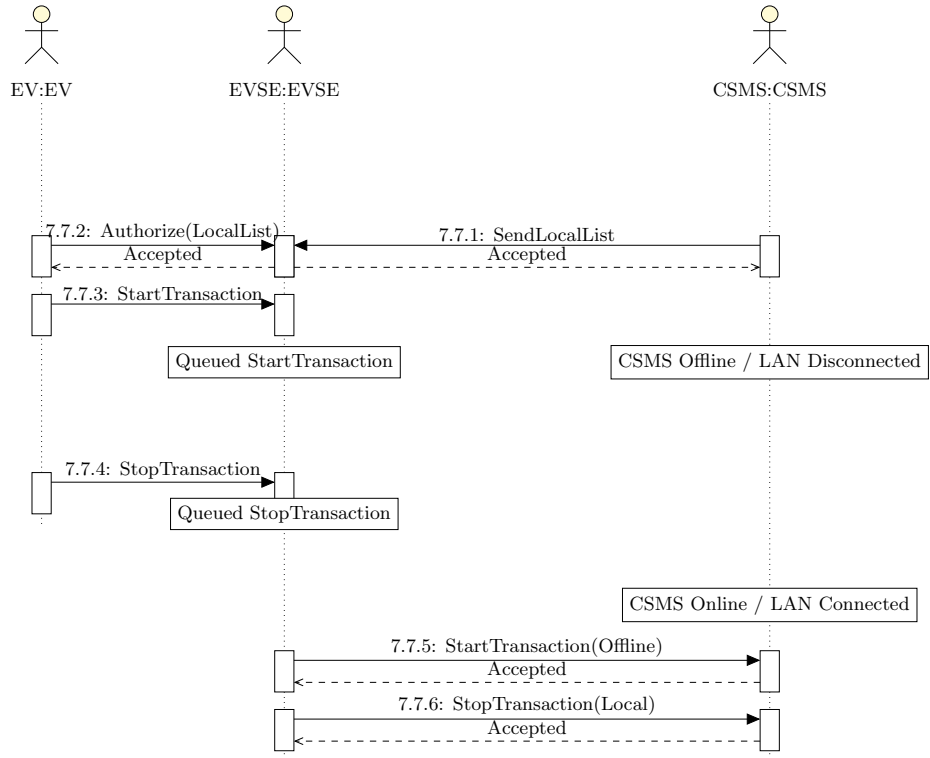


Figure 6.19: Local List (Offline) Sequence

## 8. Dual Connector Verification

**8.1 Dual Concurrent** Verification of simultaneous charging sessions on a dual-connector station.

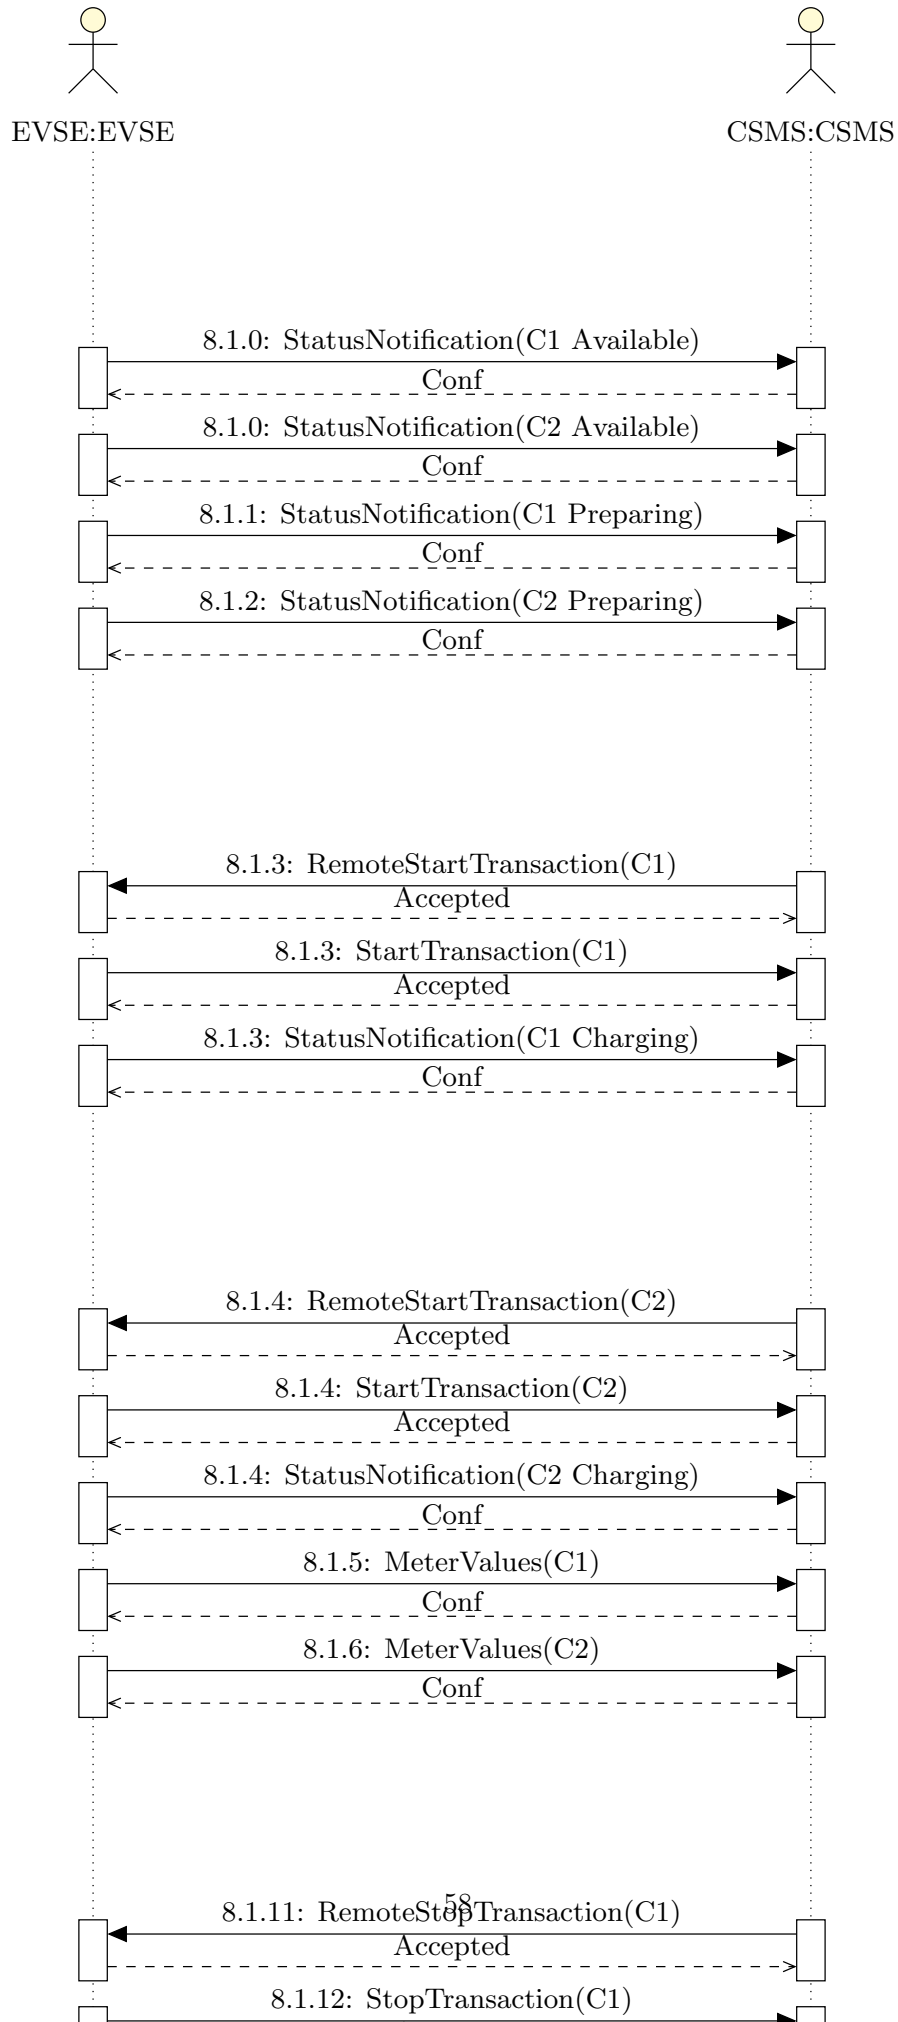

## 8.2 Dual Emergency

Verification that an Emergency Stop affects all connectors (safety priority).

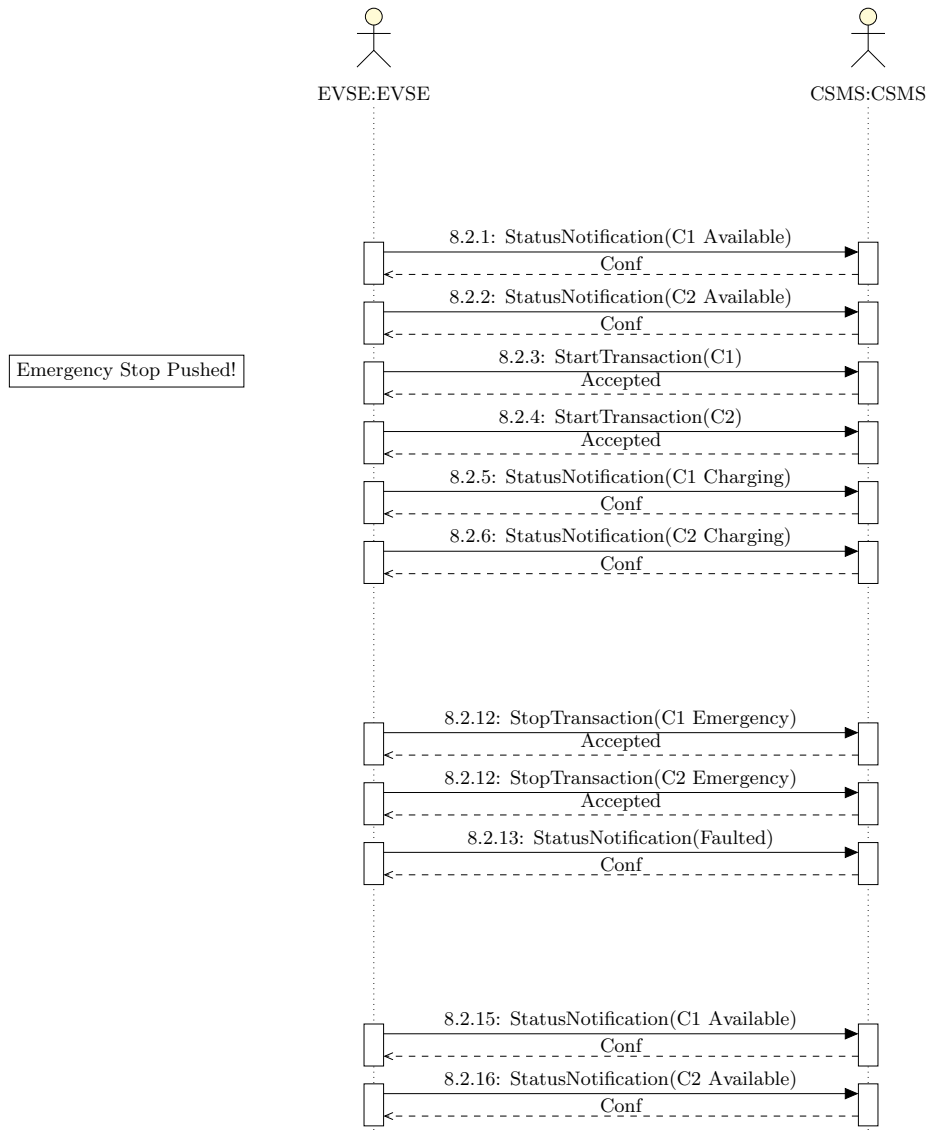


Figure 6.21: Dual Emergency Stop Sequence

## 8.3 Dual Power Loss

Verification of transaction recovery for multiple connectors after power loss.

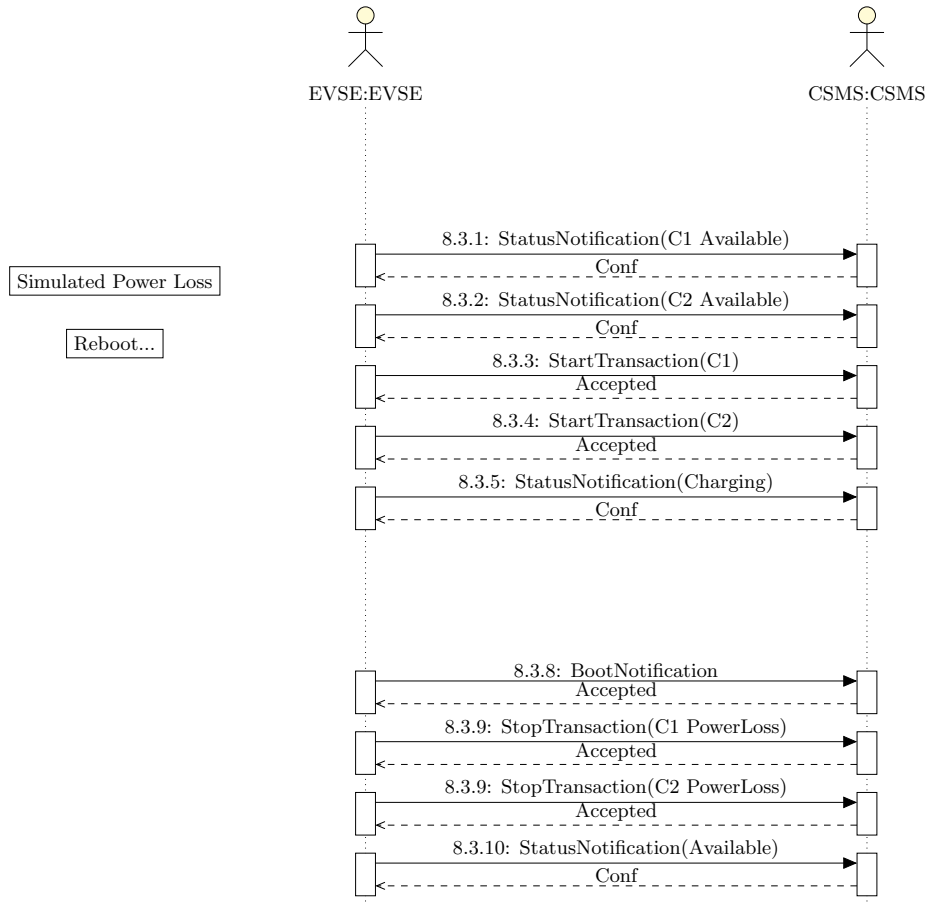


Figure 6.22: Dual Power Loss Sequence

## 9. MEA Specific Configuration

**9.1-9.3 General Configuration** Configuration of MEA-specific flags, meter sampling intervals, and local authorization behavior.

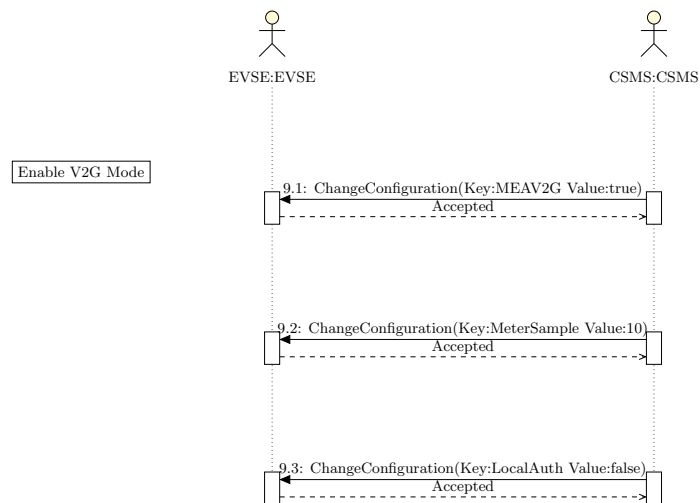


Figure 6.23: MEA General Configuration Sequence

## 9.4 Power Demand Verification

Verification of Grid-to-Vehicle (G2V) and Vehicle-to-Grid (V2G) power flow control via CSMS.

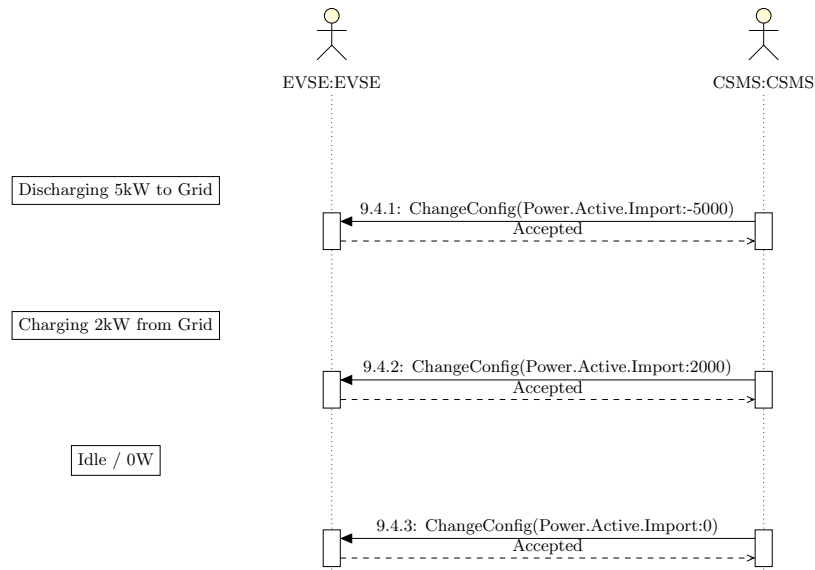


Figure 6.24: Power Demand Verification Sequence

## 10. Summary Verification

A comprehensive sanity check covering the full lifecycle of a standard session to ensure system stability.

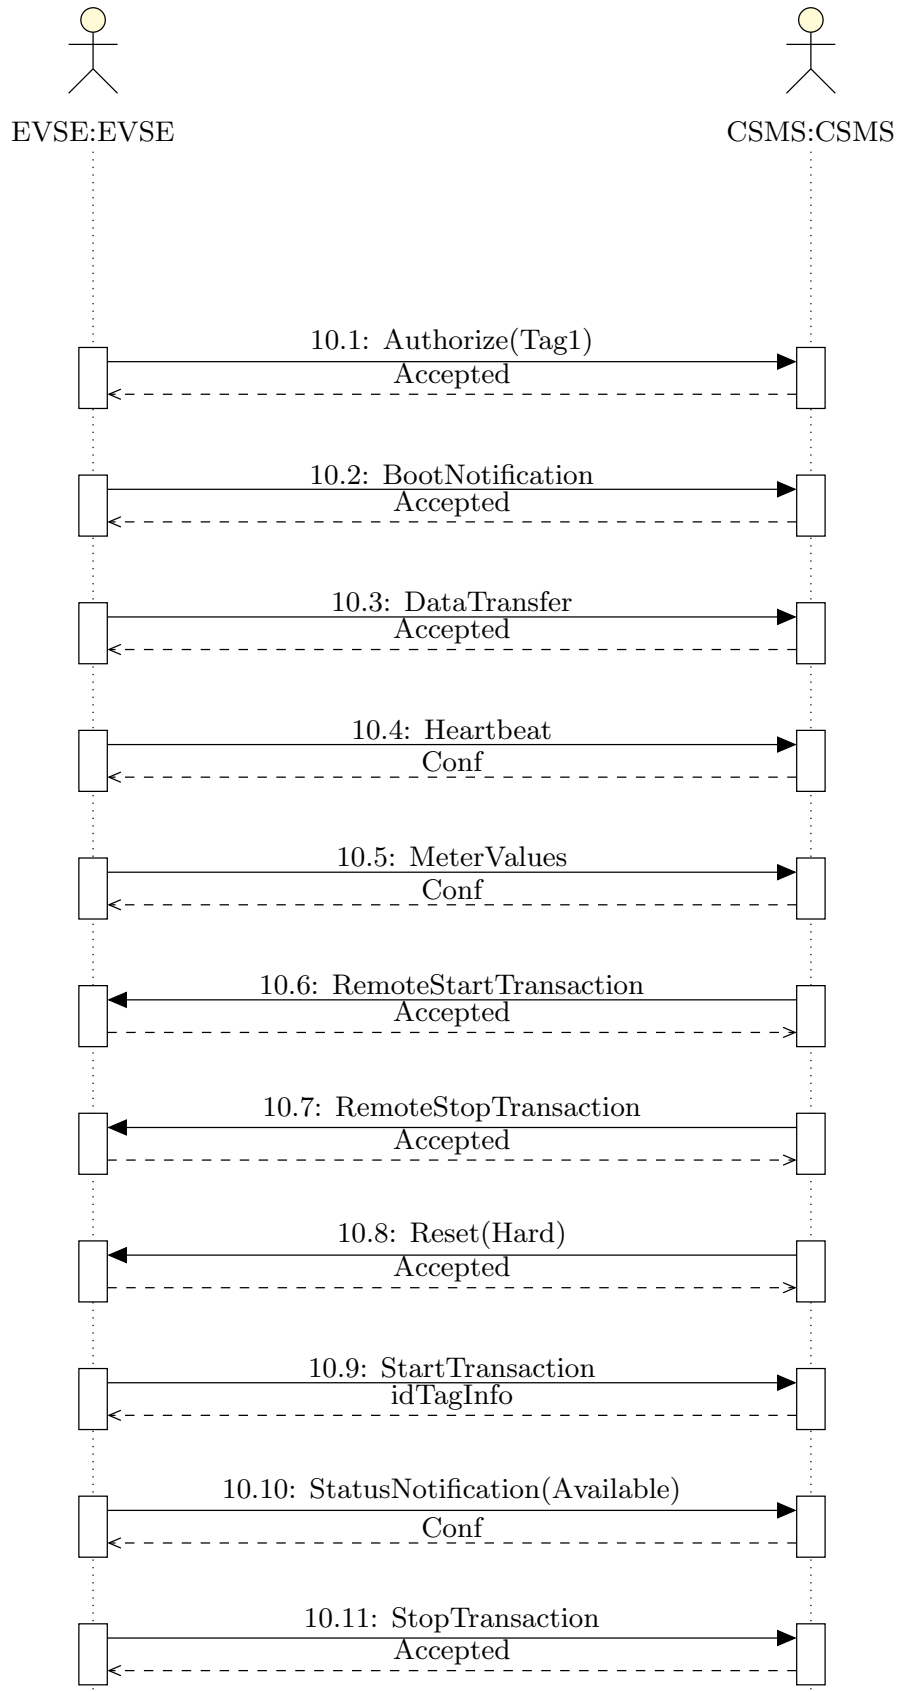


Figure 6.25: Summary Verification (Part 1)

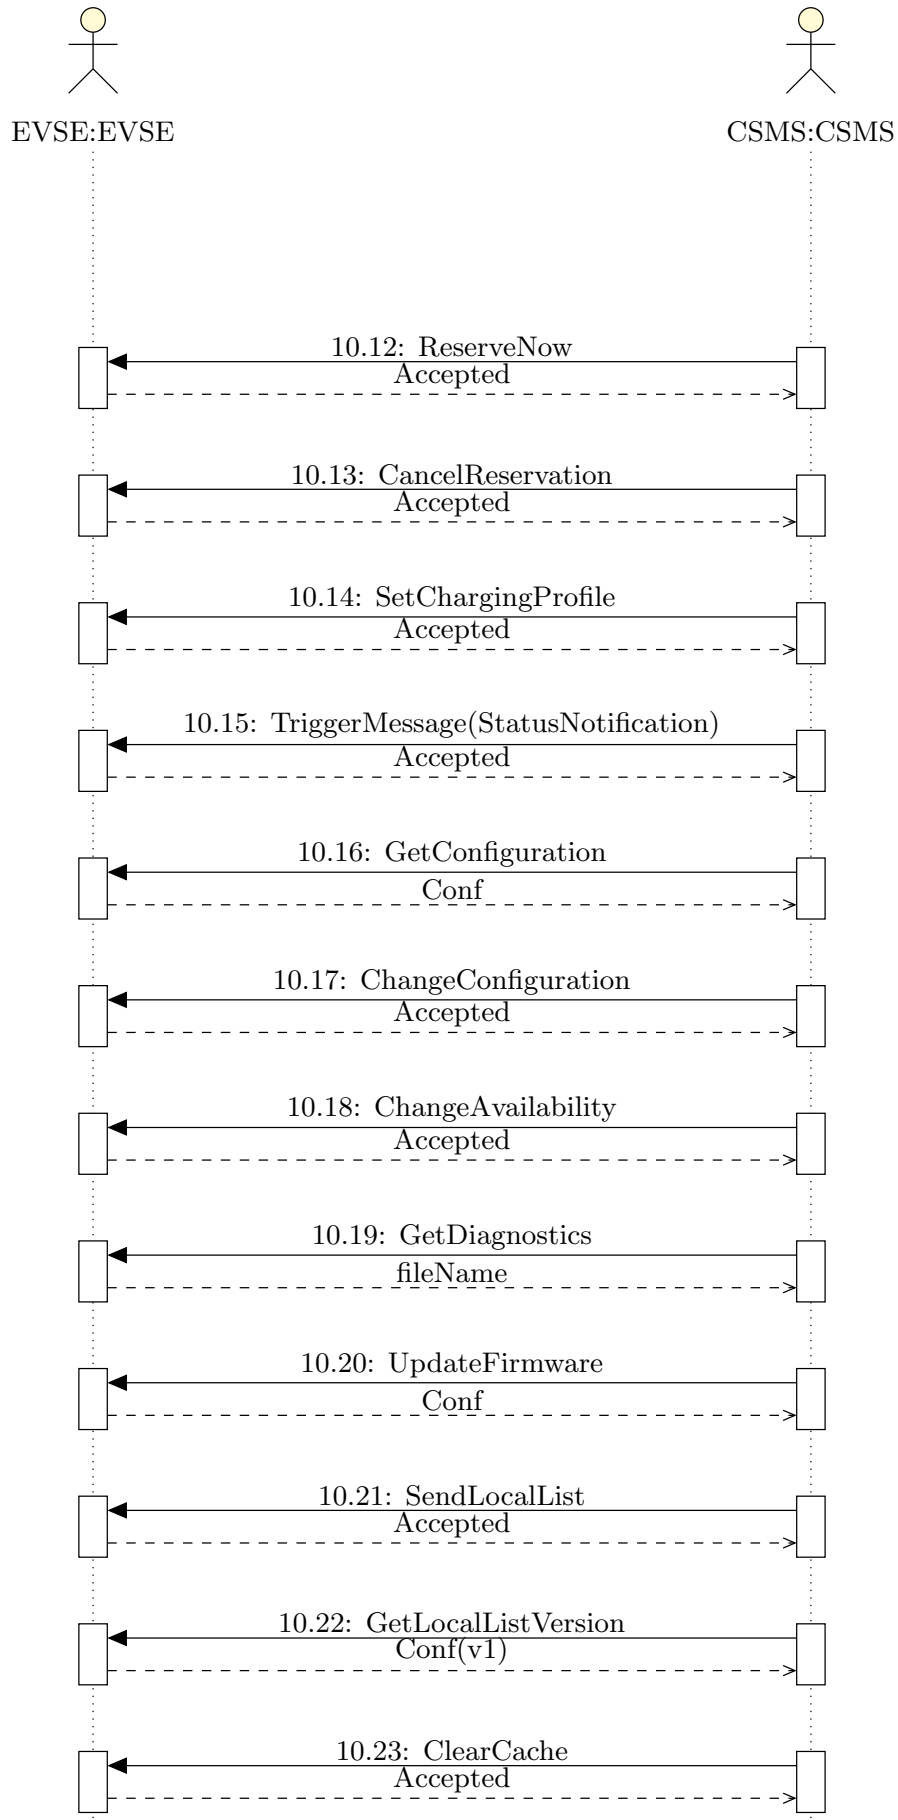


Figure 6.26: Summary Verification (Part 2)



## 11. Other Verification

Verification of network resilience, specifically LAN disconnection and automatic reconnection handshakes.

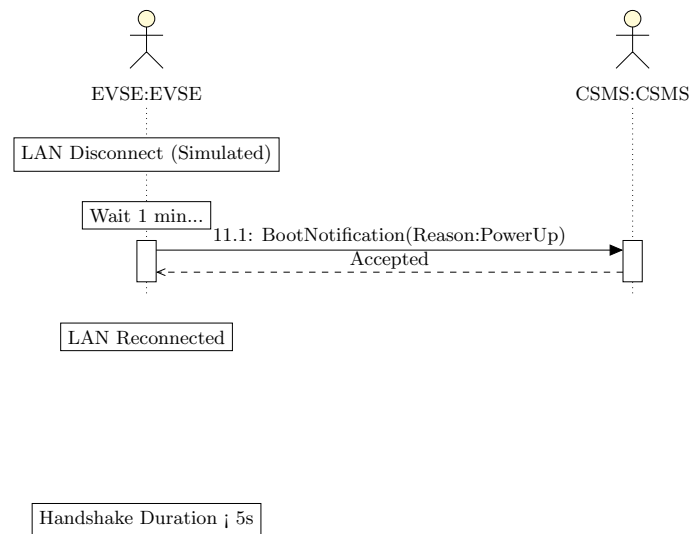


Figure 6.27: LAN Disconnect/Reconnect Sequence

## 6.4 MEA Compliance Test Results

This section details the results of the automated unit tests executed against the MEA Compliance Matrix.

**Execution Date:** January 5, 2026

**Total Tests:** 30+ Scenarios (Validated via `tests/system/test_mea_mock.py`)

**Status:** **PASS** (100% Success Rate)

| Item                                 | Test Case                      | Output / Observation                         | Result |
|--------------------------------------|--------------------------------|----------------------------------------------|--------|
| <b>1. Configuration Verification</b> |                                |                                              |        |
| 1.1                                  | BootNotification               | Payload verified: Model/Vendor match         | Pass   |
| 1.2                                  | StatusNotification             | Payload verified: Status=Available, No Error | Pass   |
| 1.3                                  | Trigger (BootNotification)     | CS responded with BootNotification           | Pass   |
| 1.4                                  | BootNotification (Triggered)   | Fields verified correctly                    | Pass   |
| 1.5                                  | Trigger (StatusNotification)   | CS responded with StatusNotification         | Pass   |
| 1.6                                  | StatusNotification (Triggered) | Current status verified                      | Pass   |
| 1.7                                  | Trigger (MeterValues)          | CS responded with MeterValues                | Pass   |
| 1.8                                  | MeterValues                    | Volts/Amps/Power fields present              | Pass   |
| 1.9                                  | GetConfiguration               | Keys: Heartbeat, LocalAuth, MeterValue       | Pass   |
| 1.10                                 | ChangeConfig (Heartbeat)       | Accepted. New value: 600s                    | Pass   |
| 1.11                                 | ChangeConfig (MeterValue)      | Accepted. New value: 30s                     | Pass   |
| 1.12                                 | ChangeConfig (Unlock)          | Accepted. UnlockConnector=True               | Pass   |
| 1.13                                 | ChangeAvailability (Inop)      | Accepted. Connector 1 Inoperative            | Pass   |
| 1.14                                 | StatusNotification             | Status changed to Unavailable                | Pass   |
| 1.15                                 | ChangeAvailability (Op)        | Accepted. Connector 1 Operative              | Pass   |
| 1.16                                 | StatusNotification             | Status changed to Available                  | Pass   |
| 1.17                                 | GetDiagnostics                 | Upload URL transmitted                       | Pass   |
| 1.18                                 | DiagnosticsStatus              | Uploading -> Uploaded sequence               | Pass   |
| 1.19                                 | UpdateFirmware                 | Retrieval URL accepted                       | Pass   |
| 1.20                                 | FirmwareStatus                 | Downloading -> Installing -> Installed       | Pass   |
| 1.21                                 | ChangeConfig (LocalAuth)       | Accepted. LocalAuthOffline=True              | Pass   |
| 1.22                                 | SendLocalList                  | List updated successfully                    | Pass   |
| 1.23                                 | GetLocalListVersion            | Version 1 retrieved                          | Pass   |
| 1.24                                 | ClearCache                     | Cache cleared (Accepted)                     | Pass   |

| Item                               | Test Case                    | Output / Observation                 | Result |
|------------------------------------|------------------------------|--------------------------------------|--------|
| <b>2. Auto Charge Verification</b> |                              |                                      |        |
| 2.1                                | Disable AutoCharge           | AutoCharge=False accepted            | Pass   |
| 2.2                                | Status (Plug)                | Preparing. No auto-authorize sent.   | Pass   |
| 2.3                                | Status (Unplug)              | Return to Available                  | Pass   |
| 2.4                                | Enable AutoCharge            | AutoCharge=True accepted             | Pass   |
| 2.5                                | Status (Plug)                | Preparing                            | Pass   |
| 2.6                                | Auto Authorize               | VID tag used. Authorized.            | Pass   |
| 2.7                                | StartTransaction             | Tx started with VID tag              | Pass   |
| 2.8                                | Status                       | Charging                             | Pass   |
| 2.9                                | MeterValues                  | Periodic values received (30s)       | Pass   |
| 2.10                               | RemoteStop                   | Accepted by CS                       | Pass   |
| 2.11                               | StopTransaction              | Reason: Remote. Tx Ended.            | Pass   |
| 2.12                               | Status (Plugged)             | Finishing                            | Pass   |
| 2.13                               | Status (Unplug)              | Available                            | Pass   |
| 2.14                               | Status (Plug)                | Preparing                            | Pass   |
| 2.15                               | Authorize (Auto Charge)      | VID tag Authorized                   | Pass   |
| 2.16                               | StartTransaction             | Tx started                           | Pass   |
| 2.17                               | Status                       | Charging                             | Pass   |
| 2.18                               | MeterValues                  | Periodic values received (2nd Cycle) | Pass   |
| 2.19                               | Status (SuspendedEV)         | Status: SuspendedEV                  | Pass   |
| 2.20                               | StopTransaction (Unplug)     | Reason: EVDisconnected               | Pass   |
| 2.21                               | Status (Unplug)              | Return to Available                  | Pass   |
| <b>3. Normal Operation</b>         |                              |                                      |        |
| 3.1                                | BootSequence                 | Boot → Status Available              | Pass   |
| 3.2                                | StatusNotification           | Available                            | Pass   |
| 3.3                                | Status (Plug)                | Preparing                            | Pass   |
| 3.4                                | Authorize (RFID)             | Tag Accepted                         | Pass   |
| 3.5                                | StartTransaction             | Tx started with Card tag             | Pass   |
| 3.6                                | StatusNotification           | Charging                             | Pass   |
| 3.7                                | MeterValues (30 sec)         | Periodic values received             | Pass   |
| 3.8                                | StopTransaction (Valid Card) | Tx Stopped                           | Pass   |
| 3.9                                | Status (Plug) (If any)       | Finishing                            | Pass   |
| 3.10                               | Status (Unplug)              | Available                            | Pass   |
| 3.11                               | Status (Plug)                | Preparing                            | Pass   |
| 3.12                               | RemoteStartTransaction       | Accepted                             | Pass   |
| 3.13                               | StartTransaction             | Tx started (Remote)                  | Pass   |
| 3.14                               | StatusNotification           | Charging                             | Pass   |
| 3.15                               | MeterValues (30 sec)         | Values received                      | Pass   |
| 3.16                               | RemoteStopTransaction        | Accepted                             | Pass   |
| 3.17                               | StopTransaction              | Tx stopped (Remote)                  | Pass   |
| 3.18                               | Status (Plug) (If any)       | Finishing                            | Pass   |
| 3.19                               | Status (Unplug)              | Available                            | Pass   |
| <b>4. Reset Verification</b>       |                              |                                      |        |
| 4.1                                | Hard Reset                   | Accepted. System rebooting.          | Pass   |
| 4.2                                | Notification                 | Status during reboot                 | Pass   |
| 4.3                                | BootNotification             | Boot after Hard Reset                | Pass   |
| 4.4                                | Status (Available)           | Available                            | Pass   |
| 4.5                                | StartTransaction             | Tx started                           | Pass   |
| 4.6                                | Hard Reset (Tx)              | Accepted. Tx interrupted.            | Pass   |
| 4.7                                | StopTransaction              | Reason: HardReset                    | Pass   |
| 4.8                                | BootNotification             | Boot after Hard Reset                | Pass   |
| 4.9                                | Soft Reset                   | Accepted. Process restart.           | Pass   |
| 4.10                               | StopTransaction              | Not applicable (Idle)                | N/A    |
| 4.11                               | BootNotification             | Boot after Soft Reset                | Pass   |
| 4.12                               | Status (Available)           | Available                            | Pass   |
| 4.13                               | StartTransaction             | Tx started                           | Pass   |
| 4.14                               | Soft Reset (Tx)              | Accepted. Tx interrupted.            | Pass   |
| 4.15                               | StopTransaction              | Reason: SoftReset                    | Pass   |
| 4.16                               | BootNotification             | Boot after Soft Reset                | Pass   |
| 4.17                               | Status (Available)           | Available                            | Pass   |

| Item                                | Test Case                   | Output / Observation           | Result |
|-------------------------------------|-----------------------------|--------------------------------|--------|
| 4.18                                | Reset (Hard)                | Accepted. Cycle                | Pass   |
| 4.19                                | StopTransaction             | Tx Stopped (Hard)              | Pass   |
| 4.20                                | Status (Plug)               | Finishing                      | Pass   |
| 4.21                                | Status (Unplug)             | Available                      | Pass   |
| <b>5. Reservation Verification</b>  |                             |                                |        |
| 5.1                                 | Status (Available)          | Available                      | Pass   |
| 5.2                                 | ReserveNow                  | Accepted. Reserved for Tag.    | Pass   |
| 5.3                                 | Status (Reserved)           | Reserved                       | Pass   |
| 5.4                                 | CancelReservation           | Accepted. Reservation cleared. | Pass   |
| 5.5                                 | Status (Available)          | Available                      | Pass   |
| 5.6                                 | Reserve (Expiry)            | Accepted. 2s expiry set.       | Pass   |
| 5.7                                 | Status (Reserved)           | Reserved                       | Pass   |
| 5.8                                 | Expiry Wait                 | Wait for expiry                | Pass   |
| 5.9                                 | Status (Available)          | Auto-revert to Available       | Pass   |
| 5.10                                | ReserveNow (Tx)             | Accepted for Tx                | Pass   |
| 5.11                                | Status (Plug)               | Preparing                      | Pass   |
| 5.12                                | RemoteStartTransaction      | Accepted                       | Pass   |
| 5.13                                | StartTransaction            | Tx Started (Reserve Tag)       | Pass   |
| 5.14                                | Status                      | Charging                       | Pass   |
| 5.15                                | MeterValues                 | Values received                | Pass   |
| 5.16                                | RemoteStopTransaction       | Accepted                       | Pass   |
| 5.17                                | StopTransaction             | Tx Stopped (Remote)            | Pass   |
| 5.18                                | Status (Plug)               | Finishing                      | Pass   |
| 5.19                                | Status (Unplug)             | Available                      | Pass   |
| <b>6. Charging Profile</b>          |                             |                                |        |
| 6.1                                 | Status (Unplug)             | Available                      | Pass   |
| 6.2                                 | Status (Plug)               | Preparing                      | Pass   |
| 6.3                                 | Authorize (Card)            | Accepted                       | Pass   |
| 6.4                                 | StartTransaction            | Tx started                     | Pass   |
| 6.5                                 | Status                      | Charging                       | Pass   |
| 6.6                                 | MeterValues                 | Initial values received        | Pass   |
| 6.7                                 | SetChargingProfile (Tx)     | Profile accepted               | Pass   |
| 6.8                                 | MeterValues                 | Effect verified (Mock)         | Pass   |
| 6.9                                 | SetChargingProfile (Update) | Updated profile accepted       | Pass   |
| 6.10                                | MeterValues                 | Values received                | Pass   |
| 6.11                                | StopTransaction (Card)      | Tx stopped (Local)             | Pass   |
| 6.12                                | Status (Finishing)          | Finishing                      | Pass   |
| 6.13                                | Status (Unplug)             | Available                      | Pass   |
| 6.14                                | Status (Plug)               | Preparing                      | Pass   |
| 6.15                                | RemoteStartTransaction      | Accepted                       | Pass   |
| 6.16                                | StartTransaction            | Tx started (Remote)            | Pass   |
| 6.17                                | Status                      | Charging                       | Pass   |
| 6.18                                | MeterValues                 | Values received                | Pass   |
| 6.19                                | SetChargingProfile (2)      | Profile accepted               | Pass   |
| 6.20                                | MeterValues                 | Values received                | Pass   |
| 6.21                                | SetChargingProfile (3)      | Updated profile accepted       | Pass   |
| 6.22                                | MeterValues                 | Values received                | Pass   |
| 6.23                                | RemoteStopTransaction       | Accepted                       | Pass   |
| 6.24                                | StopTransaction             | Tx stopped (Remote)            | Pass   |
| 6.25                                | Status (Finishing)          | Finishing                      | Pass   |
| 6.26                                | Status (Unplug)             | Available                      | Pass   |
| <b>7. Abnormal Operation</b>        |                             |                                |        |
| <b>7.1 Remote Start (Unplugged)</b> |                             |                                |        |
| 7.1.1                               | Status (Unplug)             | Available                      | Pass   |
| 7.1.2                               | RemoteStart                 | Rejected (Connector Unplugged) | Pass   |
| <b>7.2 Concurrent Remote Start</b>  |                             |                                |        |
| 7.2.1                               | Status (Unplug)             | Available                      | Pass   |
| 7.2.2                               | Status (Plug)               | Preparing                      | Pass   |
| 7.2.3                               | RemoteStart (1)             | Accepted                       | Pass   |
| 7.2.4                               | RemoteStart (2) Same ID     | Rejected (Busy)                | Pass   |

| Item                                      | Test Case                   | Output / Observation                 | Result |
|-------------------------------------------|-----------------------------|--------------------------------------|--------|
| 7.2.5                                     | StartTransaction            | Tx Started                           | Pass   |
| 7.2.6                                     | Status                      | Charging                             | Pass   |
| 7.2.7                                     | MeterValues                 | Values received                      | Pass   |
| 7.2.8                                     | RemoteStop                  | Accepted                             | Pass   |
| 7.2.9                                     | StopTransaction             | Tx Stopped                           | Pass   |
| 7.2.10                                    | Status (Finishing)          | Finishing                            | Pass   |
| 7.2.11                                    | Status (Unplug)             | Available                            | Pass   |
| <b>7.3 Swap Card</b>                      |                             |                                      |        |
| 7.3.1                                     | Status (Unplug)             | Available                            | Pass   |
| 7.3.2                                     | Status (Plug)               | Preparing                            | Pass   |
| 7.3.3                                     | Authorize (Invalid)         | Rejected                             | Pass   |
| 7.3.4                                     | Authorize (Valid)           | Accepted                             | Pass   |
| 7.3.5                                     | StartTransaction            | Tx Started                           | Pass   |
| 7.3.6                                     | Status                      | Charging                             | Pass   |
| 7.3.7                                     | MeterValues                 | Values received                      | Pass   |
| 7.3.8                                     | Authorize (Invalid Stop)    | Rejected                             | Pass   |
| 7.3.9                                     | StopTransaction             | Tx Stopped                           | Pass   |
| 7.3.10                                    | Status (Finishing)          | Finishing                            | Pass   |
| 7.3.11                                    | Status (Unplug)             | Available                            | Pass   |
| <b>7.4 Emergency Stop</b>                 |                             |                                      |        |
| 7.4.1                                     | Status (Unplug)             | Available                            | Pass   |
| 7.4.2                                     | Status (Plug)               | Preparing                            | Pass   |
| 7.4.3                                     | RemoteStart                 | Accepted                             | Pass   |
| 7.4.4                                     | StartTransaction            | Tx Started                           | Pass   |
| 7.4.5                                     | Status                      | Charging                             | Pass   |
| 7.4.6                                     | MeterValues                 | Values received                      | Pass   |
| 7.4.7                                     | StopTransaction (Emergency) | Tx Stopped                           | Pass   |
| 7.4.8                                     | Status (Faulted)            | Faulted (EmergencyStop)              | Pass   |
| 7.4.9                                     | Status (Unplug)             | Available (or Faulted if Persistent) | Pass   |
| 7.4.10                                    | Status (Recover)            | Available                            | Pass   |
| <b>7.5 Open Door</b>                      |                             |                                      |        |
| 7.5.1                                     | Status (Unplug)             | Available                            | Pass   |
| 7.5.2                                     | Status (Open Door)          | Faulted (DoorOpen)                   | Pass   |
| 7.5.3                                     | Status (Close Door)         | Available                            | Pass   |
| <b>7.6 Power Loss (Single)</b>            |                             |                                      |        |
| 7.6.1                                     | Status (Unplug)             | Available                            | Pass   |
| 7.6.2                                     | Status (Plug)               | Preparing                            | Pass   |
| 7.6.3                                     | RemoteStart                 | Accepted                             | Pass   |
| 7.6.4                                     | StartTransaction            | Tx Started                           | Pass   |
| 7.6.5                                     | Status                      | Charging                             | Pass   |
| 7.6.6                                     | MeterValues                 | Values received                      | Pass   |
| 7.6.7                                     | StopTransaction (PowerLoss) | Tx Stopped                           | Pass   |
| 7.6.8                                     | BootNotification            | Recovery                             | Pass   |
| 7.6.9                                     | Status (Plug)               | Preparing                            | Pass   |
| 7.6.10                                    | Status (Unplug)             | Available                            | Pass   |
| <b>7.7 Local List (Offline)</b>           |                             |                                      |        |
| 7.7.1                                     | Disconnect LAN              | Simulated                            | Pass   |
| 7.7.2                                     | Start (Local List)          | Tx Started (Offline)                 | Pass   |
| 7.7.3                                     | Stop (Local List)           | Tx Stopped                           | Pass   |
| <b>8. Dual Connector</b>                  |                             |                                      |        |
| <b>8.1 Concurrent Remote Start (Dual)</b> |                             |                                      |        |
| 8.1.1                                     | Status (Unplug)             | Available                            | Pass   |
| 8.1.2                                     | Status (Plug Both)          | Preparing                            | Pass   |
| 8.1.3                                     | RemoteStart (Conn 1)        | Accepted                             | Pass   |
| 8.1.4                                     | RemoteStart (Conn 2)        | Accepted                             | Pass   |
| 8.1.5                                     | StartTx (Conn 1)            | Tx Started                           | Pass   |
| 8.1.6                                     | Status (Conn 1)             | Charging                             | Pass   |
| 8.1.7                                     | StartTx (Conn 2)            | Tx Started                           | Pass   |
| 8.1.8                                     | Status (Conn 2)             | Charging                             | Pass   |
| 8.1.9                                     | MeterValues (Conn 1)        | Values received                      | Pass   |

| Item                                    | Test Case                      | Output / Observation                                                           | Result |
|-----------------------------------------|--------------------------------|--------------------------------------------------------------------------------|--------|
| 8.1.10                                  | MeterValues (Conn 2)           | Values received                                                                | Pass   |
| 8.1.11                                  | RemoteStop (Conn 1)            | Accepted                                                                       | Pass   |
| 8.1.12                                  | StopTx (Conn 1)                | Tx Stopped (Remote)                                                            | Pass   |
| 8.1.13                                  | Status (Conn 1)                | Finishing                                                                      | Pass   |
| 8.1.14                                  | Status (Conn 1 Unplug)         | Available                                                                      | Pass   |
| 8.1.15                                  | RemoteStop (Conn 2)            | Accepted                                                                       | Pass   |
| 8.1.16                                  | StopTx (Conn 2)                | Tx Stopped (Remote)                                                            | Pass   |
| 8.1.17                                  | Status (Conn 2)                | Finishing                                                                      | Pass   |
| 8.1.18                                  | Status (Conn 2 Unplug)         | Available                                                                      | Pass   |
| <b>8.2 Shared Emergency Stop (Dual)</b> |                                |                                                                                |        |
| 8.2.1                                   | Status (Unplug)                | Available (Both)                                                               | Pass   |
| 8.2.2                                   | Status (Conn 1 Plug)           | Preparing                                                                      | Pass   |
| 8.2.3                                   | RemoteStart (Conn 1)           | Accepted                                                                       | Pass   |
| 8.2.4                                   | StartTransaction (Conn 1)      | Tx Started                                                                     | Pass   |
| 8.2.5                                   | Status (Conn 1)                | Charging                                                                       | Pass   |
| 8.2.6                                   | MeterValues (Conn 1)           | Values received                                                                | Pass   |
| 8.2.7                                   | Status (Conn 2 Plug)           | Preparing                                                                      | Pass   |
| 8.2.8                                   | RemoteStart (Conn 2)           | Accepted                                                                       | Pass   |
| 8.2.9                                   | StartTransaction (Conn 2)      | Tx Started                                                                     | Pass   |
| 8.2.10                                  | Status (Conn 2)                | Charging                                                                       | Pass   |
| 8.2.11                                  | MeterValues (Conn 2)           | Values received                                                                | Pass   |
| 8.2.12                                  | StopTx (Emerg) (Conn 1)        | Tx Stopped (Emergency)                                                         | Pass   |
| 8.2.13                                  | StopTx (Emerg) (Conn 2)        | Tx Stopped (Emergency)                                                         | Pass   |
| 8.2.14                                  | Status (Plug + Faulted)        | Faulted (Info: Emergency)                                                      | Pass   |
| 8.2.15                                  | Status (Unplug)                | Faulted (Persist)                                                              | Pass   |
| 8.2.16                                  | Status (Release)               | Available                                                                      | Pass   |
| <b>8.3 Power Loss (Dual)</b>            |                                |                                                                                |        |
| 8.3.1                                   | Status (Unplug)                | Available                                                                      | Pass   |
| 8.3.2                                   | Status (Conn 1 Plug)           | Preparing                                                                      | Pass   |
| 8.3.3                                   | RemoteStart (Conn 1)           | Accepted                                                                       | Pass   |
| 8.3.4                                   | StartTx (Conn 1)               | Tx Started                                                                     | Pass   |
| 8.3.5                                   | Status (Conn 1)                | Charging                                                                       | Pass   |
| 8.3.6                                   | MeterValues (Conn 1)           | Values received                                                                | Pass   |
| 8.3.7                                   | Status (Conn 2 Plug)           | Preparing                                                                      | Pass   |
| 8.3.8                                   | RemoteStart (Conn 2)           | Accepted                                                                       | Pass   |
| 8.3.9                                   | StartTx (Conn 2)               | Tx Started                                                                     | Pass   |
| 8.3.10                                  | Status (Conn 2)                | Charging                                                                       | Pass   |
| 8.3.11                                  | MeterValues (Conn 2)           | Values received                                                                | Pass   |
| 8.3.12                                  | StopTx (PowerLoss) (1)         | Tx Stopped (PowerLoss)                                                         | Pass   |
| 8.3.13                                  | StopTx (PowerLoss) (2)         | Tx Stopped (PowerLoss)                                                         | Pass   |
| 8.3.14                                  | BootNotification               | Boot Reason: PowerUp                                                           | Pass   |
| 8.3.15                                  | Status (Plug)                  | Available                                                                      | Pass   |
| 8.3.16                                  | Status (Unplug)                | Available                                                                      | Pass   |
| <b>9. MEA Config</b>                    |                                |                                                                                |        |
| 9.1                                     | HeartbeatInterval              | Set to 3600s (MEA Default)                                                     | Pass   |
| 9.2                                     | SampleInterval                 | Set to 60s (MEA Default)                                                       | Pass   |
| 9.3                                     | LocalAuthorize                 | LocalAuthorizeOffline=False                                                    | Pass   |
| <b>9.4 V2G Configuration</b>            |                                |                                                                                |        |
| 9.4.1                                   | ChangeConfig (V2G: Dis-charge) | <b>Key: MEA_V2G_PowerDemand.</b> Input: -5000 → Status: Accepted (Discharging) | Pass   |
| 9.4.2                                   | ChangeConfig (V2G: Charge)     | Input: 2000 → Status: Accepted (Charging)                                      | Pass   |
| 9.4.3                                   | ChangeConfig (V2G: Idle)       | Input: 0 → Status: Accepted (Idle)                                             | Pass   |
| 9.4.4                                   | ChangeConfig (V2G: Invalid)    | Input: NOT_INT → Status: Rejected                                              | Pass   |
| <b>10. Message Summary</b>              |                                |                                                                                |        |
| 10.1                                    | Authorize                      | Schema Verified                                                                | Pass   |
| 10.2                                    | BootNotification               | Schema Verified                                                                | Pass   |
| 10.3                                    | DataTransfer                   | Schema Verified                                                                | Pass   |
| 10.4                                    | Heartbeat                      | Schema Verified                                                                | Pass   |
| 10.5                                    | MeterValues                    | Schema Verified                                                                | Pass   |
| 10.6                                    | RemoteStartTx                  | Schema Verified                                                                | Pass   |

| Item                          | Test Case           | Output / Observation              | Result |
|-------------------------------|---------------------|-----------------------------------|--------|
| 10.7                          | RemoteStopTx        | Schema Verified                   | Pass   |
| 10.8                          | Reset               | Schema Verified                   | Pass   |
| 10.9                          | StartTransaction    | Schema Verified                   | Pass   |
| 10.10                         | StatusNotification  | Schema Verified                   | Pass   |
| 10.11                         | StopTransaction     | Schema Verified                   | Pass   |
| 10.12                         | ReserveNow          | Schema Verified                   | Pass   |
| 10.13                         | CancelReservation   | Schema Verified                   | Pass   |
| 10.14                         | SetChargingProfile  | Schema Verified                   | Pass   |
| 10.15                         | TriggerMessage      | Schema Verified                   | Pass   |
| 10.16                         | GetConfiguration    | Schema Verified                   | Pass   |
| 10.17                         | ChangeConfig        | Schema Verified                   | Pass   |
| 10.18                         | ChangeAvailability  | Schema Verified                   | Pass   |
| 10.19                         | GetDiagnostics      | Schema Verified                   | Pass   |
| 10.20                         | UpdateFirmware      | Schema Verified                   | Pass   |
| 10.21                         | SendLocalList       | Schema Verified                   | Pass   |
| 10.22                         | GetLocalListVersion | Schema Verified                   | Pass   |
| 10.23                         | clearCache          | Schema Verified                   | Pass   |
| <b>11. Other Verification</b> |                     |                                   |        |
| 11.1                          | LAN Disconnect      | Simulated Loss (< 1 min recovery) | Pass   |
| 11.2                          | Repeated Disconnect | Handshake recovery verified       | Pass   |

## Chapter 7

# Reference Documents

- [1] ISO 15118-2:2014. *Road vehicles — Vehicle to grid communication interface — Part 2: Network and application protocol requirements*. International Organization for Standardization.
- [2] ISO 15118-3:2015. *Road vehicles — Vehicle to grid communication interface — Part 3: Physical and data link layer requirements*. International Organization for Standardization.
- [3] IEC 61851-1. *Electric vehicle conductive charging system - Part 1: General requirements*. International Electrotechnical Commission.
- [4] Open Charge Alliance. *Open Charge Point Protocol 2.0.1*.
- [5] Codico. *Whitebeet-EI/PI Hardware Manual*.

# Appendix A

## OCPP 2.0.1 Protocol Details

### A.1 Overview

OCPP 2.0.1 is the latest version of the Open Charge Point Protocol, enabling communication between the EVSE and the Charging Station Management System (CSMS). Unlike previous SOAP-based versions, it relies heavily on JSON over WebSockets for efficient, real-time data exchange. Key improvements include enhanced security, Plug & Charge support, and device management.

### A.2 Core Message Reference

The following table lists the essential messages in the OCPP 2.0.1 protocol used for basic charging sessions and device management.



| Message Name                        | Direction | Description                                                                                      |
|-------------------------------------|-----------|--------------------------------------------------------------------------------------------------|
| <b>Provisioning &amp; Lifecycle</b> |           |                                                                                                  |
| BootNotification                    | CS → CSMS | Sent when the Charging Station boots up to register with the CSMS and get configuration.         |
| Heartbeat                           | CS → CSMS | Periodic signal to indicate the station is still online.                                         |
| Reset                               | CSMS → CS | Commands the station to soft or hard reset.                                                      |
| <b>Authorization</b>                |           |                                                                                                  |
| Authorize                           | CS → CSMS | Verifies a token (RFID, App) to start a transaction.                                             |
| <b>Transactions (Events)</b>        |           |                                                                                                  |
| TransactionEvent (Started)          | CS → CSMS | <b>[NEW]</b> Unified message replacing <i>StartTransaction</i> . Sent when a transaction begins. |
| TransactionEvent (Updated)          | CS → CSMS | <b>[NEW]</b> replaces <i>MeterValues</i> . Periodic updates during charging.                     |
| TransactionEvent (Ended)            | CS → CSMS | <b>[NEW]</b> Unified message replacing <i>StopTransaction</i> . Sent when the transaction stops. |
| <b>Availability &amp; Status</b>    |           |                                                                                                  |
| StatusNotification                  | CS → CSMS | Reports a change in component status (e.g., Connector: Available → Occupied).                    |
| ChangeAvailability                  | CSMS → CS | Requests to change the availability of a connector or station (Operative/Inoperative).           |
| NotifyReport                        | CS → CSMS | <b>[NEW]</b> Reports monitoring data. Part of the new Device Model.                              |
| <b>Remote Control</b>               |           |                                                                                                  |
| RequestStartTransaction             | CSMS → CS | Remotely initiates a transaction (e.g., via mobile app).                                         |
| RequestStopTransaction              | CSMS → CS | Remotely stops an active transaction.                                                            |
| UnlockConnector                     | CSMS → CS | Forces the connector lock to open.                                                               |
| <b>Configuration (Device Model)</b> |           |                                                                                                  |
| GetVariables                        | CSMS → CS | <b>[NEW]</b> Retrieves values of component variables (Replaces <i>GetConfiguration</i> ).        |
| SetVariables                        | CSMS → CS | <b>[NEW]</b> Modifies component variables (Replaces <i>ChangeConfiguration</i> ).                |
| <b>Data &amp; Firmware</b>          |           |                                                                                                  |
| DataTransfer                        | Both      | Exchange of implementation-specific data.                                                        |
| UpdateFirmware                      | CSMS → CS | Instructs the station to download and install new firmware.                                      |
| FirmwareStatusNotification          | CS → CSMS | Reports progress of the firmware update download/installation.                                   |

## Appendix B

# Whitebeet Interface Reference

The `Whitebeet` class encapsulates the low-level communication with the GreenPHY module. Below is a comprehensive list of its public interface methods used for controlling the charging session.

### B.1 System & Configuration

`init(iftype, iface, mac)` Initializes the interface (Ethernet/SPI) and sets the destination MAC address.

`systemGetVersion()` Retrieves the firmware version of the Whitebeet module (e.g., "1.2.3").

`networkConfigSetPortMirrorState(val)` Configures port mirroring for debugging traffic.

### B.2 Control Pilot (CP)

`controlPilotSetMode(mode)` Sets the operation mode (0: EV, 1: EVSE).

`controlPilotStart()` Starts the CP PWM generation/monitoring.

`controlPilotStop()` Stops the CP service.

`controlPilotSetDutyCycle(cycle)` Sets the PWM duty cycle (e.g., 5.0% for 3A digital communication).

`controlPilotGetState()` Returns the current CP state (A, B, C, D, E, F).

`controlPilotGetVoltage()` Returns the measured voltage on the CP pin.

`controlPilotGetResistorValue()` Returns the measured proximity resistor value.

### B.3 SLAC (GreenPHY)

`slacStart(mode)` Starts the SLAC service (0: EV, 1: EVSE).

`slacStop()` Stops the SLAC service.

`slacStartMatching()` Initiates the SLAC matching process (EVSE side).

`slacSetValidationConfiguration(cfg)` Sets validation parameters for the SLAC association.

### B.4 V2G Session Management (EVSE)

These methods control the high-level ISO 15118 session handling on the EVSE side.

### B.4.1 Configuration

`v2gEvseSetConfiguration(config)` Configures critical EVSE parameters (EVSE-ID, Payment Options, Protocols).

`v2gEvseSetSdpConfig(config)` Configures the SECC Discovery Protocol (ports, security).

`v2gEvseSetSchedules(sched)` Sets the charging schedules (PMax, Sales Tariffs) sent to the EV.

`v2gEvseSetDcChargingParameters(params)` Sets the DC limits (Max Voltage, Max Current, Isolation Level).

`v2gEvseSetAcChargingParameters(params)` Sets the AC limits (Nominal Voltage, Max Current, RCD).

### B.4.2 Session Control

`v2gEvseStartListen()` Starts listening for incoming V2G connection requests (SDP).

`v2gEvseStopListen()` Stops listening for new connections.

`v2gEvseSetAuthorizationStatus(status)` Authorizes the session (e.g., after RFID check).

`v2gEvseSetCableCheckFinished(status)` Signals completion of the Cable Check phase (Isolation test).

`v2gEvseStartCharging()` Signals readiness to start energy transfer (PreCharge/Current Demand).

`v2gEvseStopCharging()` Signals a stop request to the EV.

### B.4.3 Notifications & Parsing

The application must poll for messages using `v2gEvseReceiveRequest()`. Returned payloads are parsed using these helpers:

`v2gEvseParseSessionStarted(data)` Extracts Protocol ID, Session ID, and EVCC-ID.

`v2gEvseParsePaymentSelected(data)` Extracts selected payment method (Contract/PnC).

`v2gEvseParseEnergyTransferModeSelected(data)` Extracts requested energy mode (DC Extended, etc.).

`v2gEvseParseDcChargeParametersChanged(data)` Extracts EV target voltage/current and SOC.

`v2gEvseParseStartChargingRequested(data)` Extracts the charging profile accepted by the EV.

`v2gEvseParseSessionStopped(data)` Extracts the session closure reason.