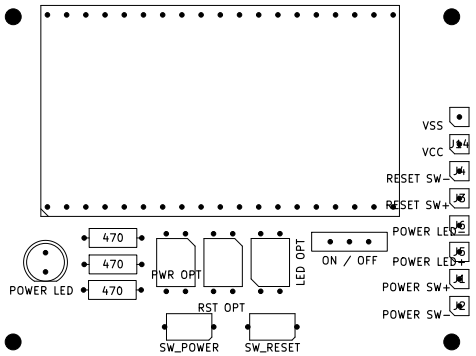
VSS
VCC
RESET SW-
RESET SW+
POWER LED-
POWER LED+
POWER SW+
POWER SW-
J4
J3
J2
J1
470
470
470
POWER LED
PWR OPT
LED OPT
ON / OFF
RST OPT
SW_POWER
SW_RESET