1 Tools

2 Overall view

3 STOP button

Use a flat-blade screwdriver to gently pry the back of the red STOP button to remove the STOP button.

Tip: The button contains two magnets. Problems with the STOP button function can be checked here.

4 Battery Pack

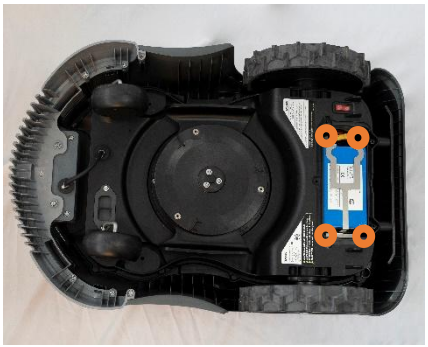

Remove the 5 and 4 screws shown respectively.

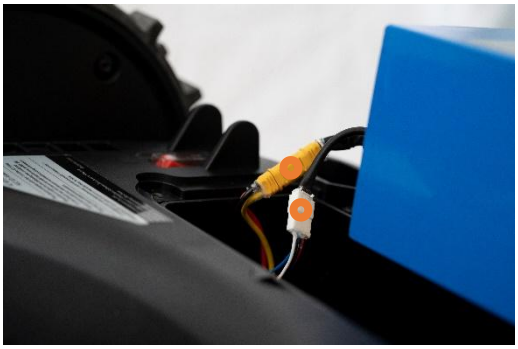

Take out the battery pack. Disconnect the power cable and signal cable as shown to remove the battery pack.

5 Base assembly

5.1 Motherboard

Gently pry open the inner side of the decorative cover at the 6 locations shown in the figure to remove the decorative cover.

Remove the 4 orange-marked screws and lift up the floating cover assembly.

Tip: If the collision function is abnormal, you can check the 4 blue-marked magnets. The groove of the floating cover needs to be aligned with the boss of the swing foot during installation.

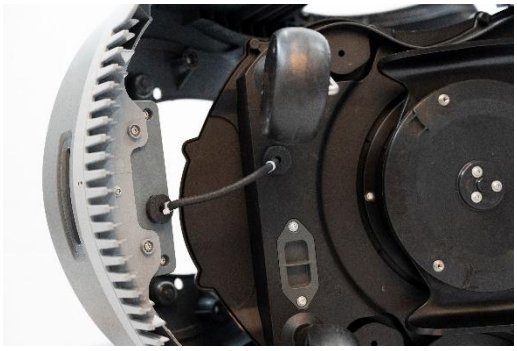
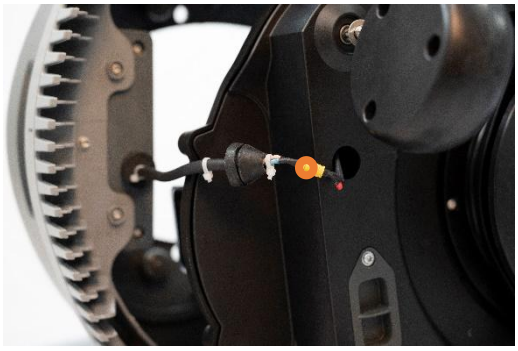

Gently pull the charging cable at the bottom of the machine, pull the yellow-marked interface out of the base, disconnect the interface and completely remove the floating cover.

Tip: Be careful not to let the yellow connector slide into the base when installing.

Remove the 14 screws marked in orange and blue to lift the top cover assembly.

Tip: As shown in the right picture, the blue-marked screw needs to be installed with an O-ring and a gasket. Missing them during installation will affect the waterproof function.

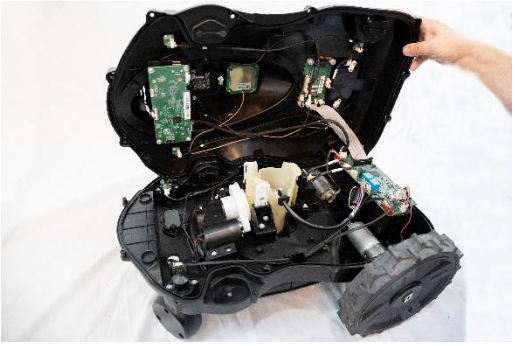

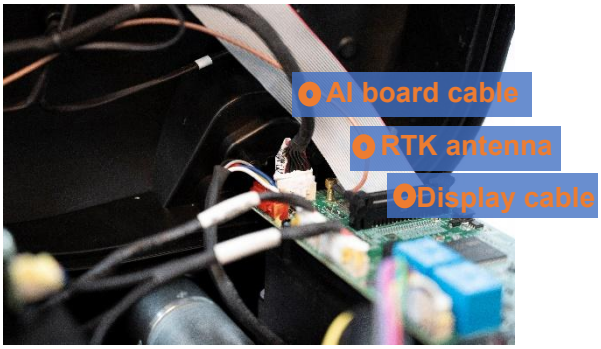

Open the fixed cover from the side, disconnect the display cable, AI board cable and RTK antenna respectively, and remove the fixed cover.

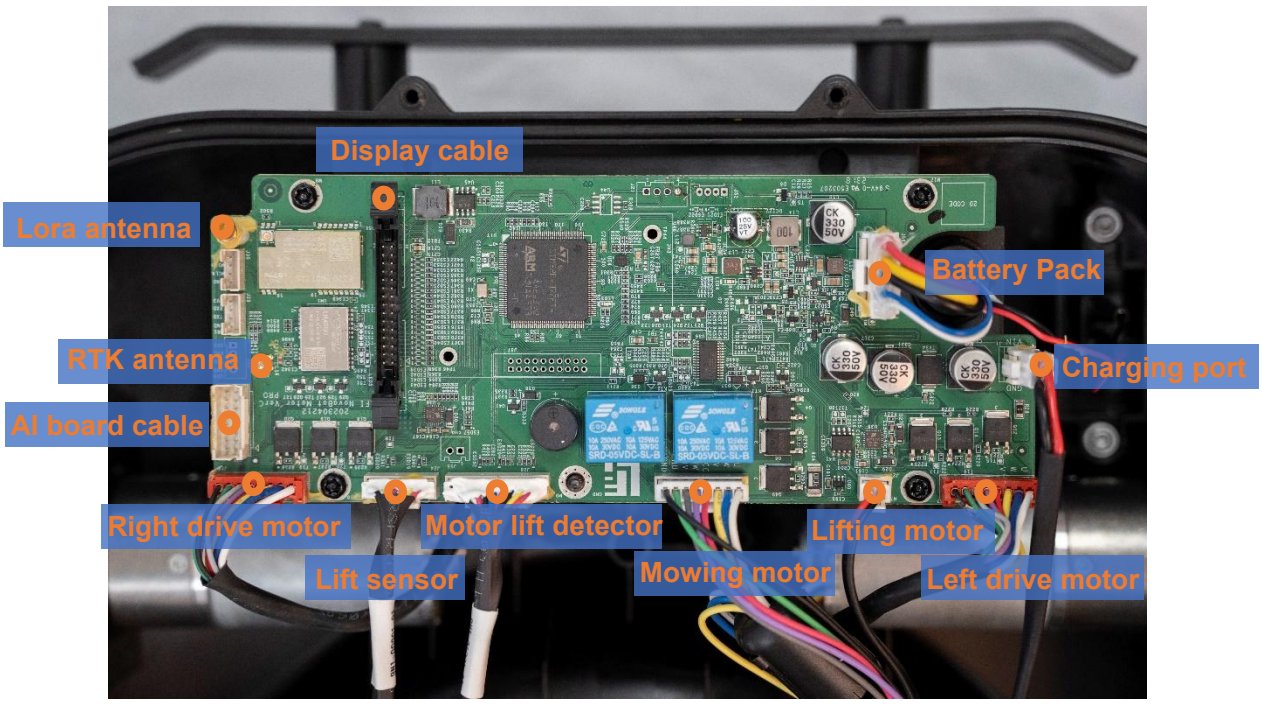

The wiring of the main control board is shown above.

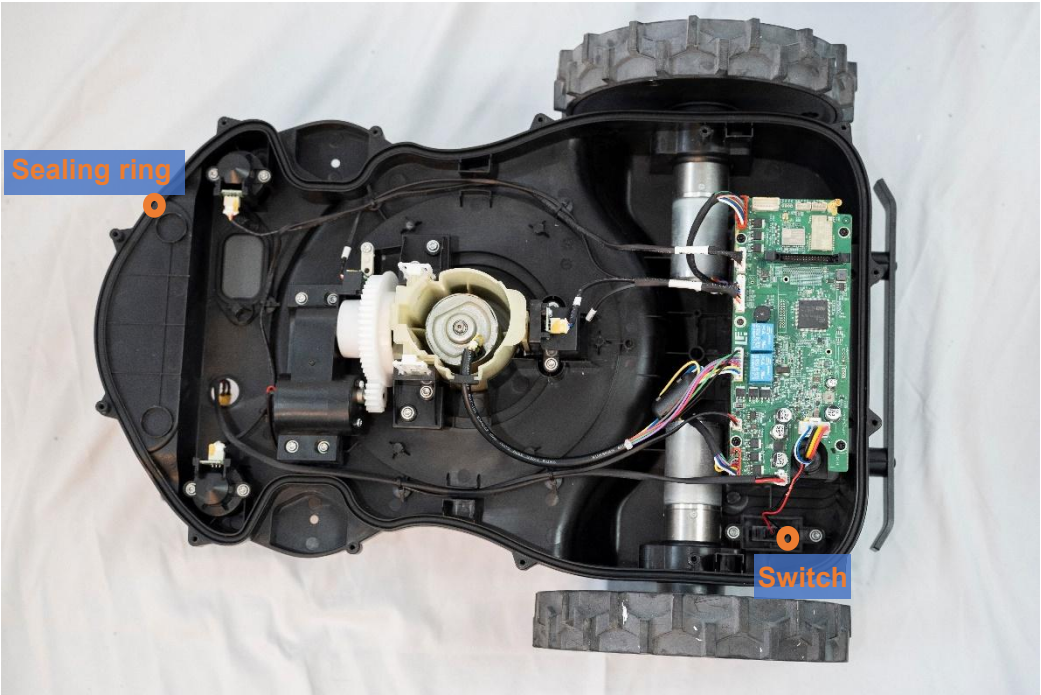

Tip: The sealing ring around the base must be installed in place, otherwise it will affect waterproofing.

5.2 Lift detection Hall

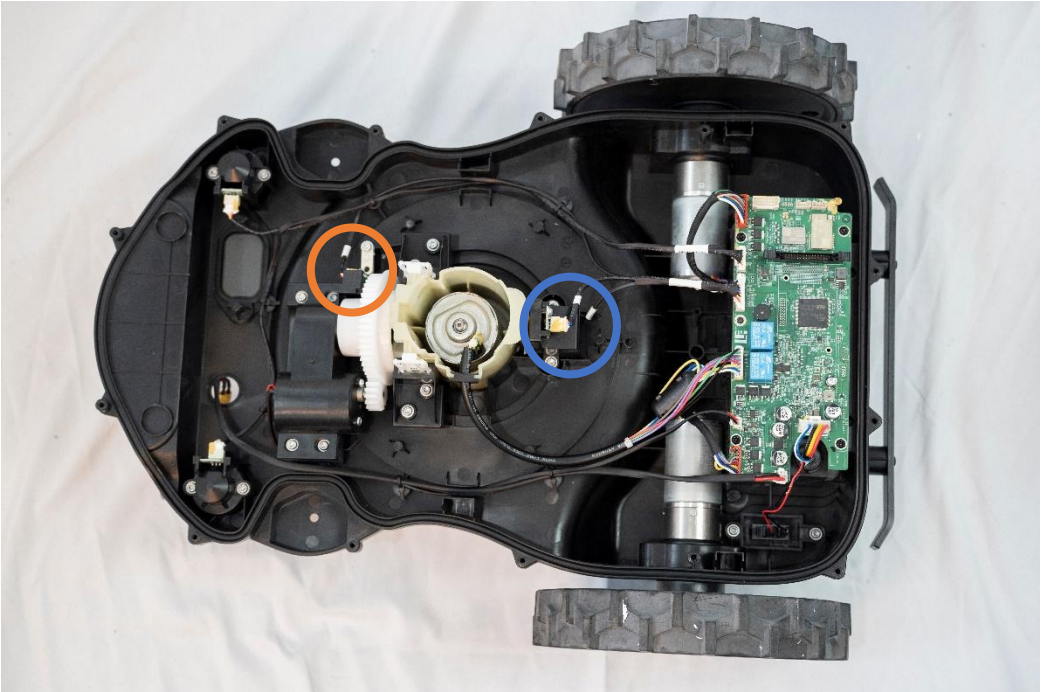

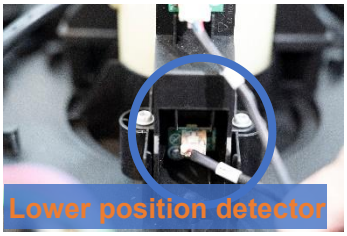

The Hall sensor needs to be installed in the position shown in the figure. Installation in the wrong direction will result in malfunction.

Tip: Problems related to the rising and falling positions and functions of the mower motor can be solved by checking these three Halls and the corresponding magnets.

5.3 Lifting motor

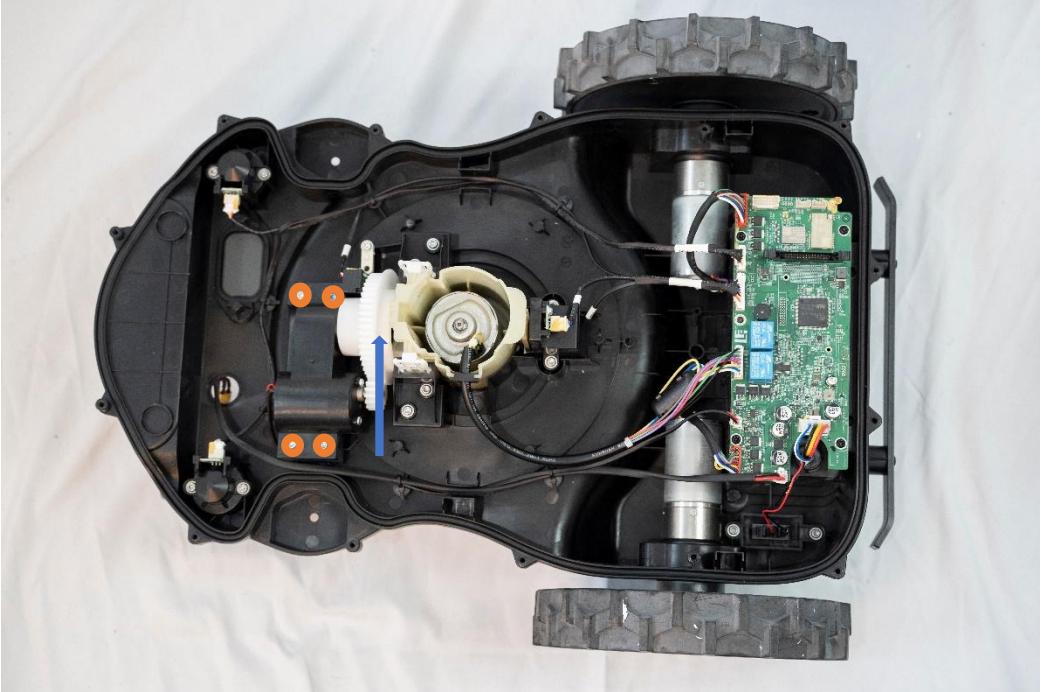

Remove the 4 orange marked screws to remove the lift motor.

Tip: When removing the lifting motor, you need to rotate the gear upwards to lower the mowing motor first, and then lift the lifting motor and the mowing motor together to take out the lifting motor.

5.4 Lifting Halls

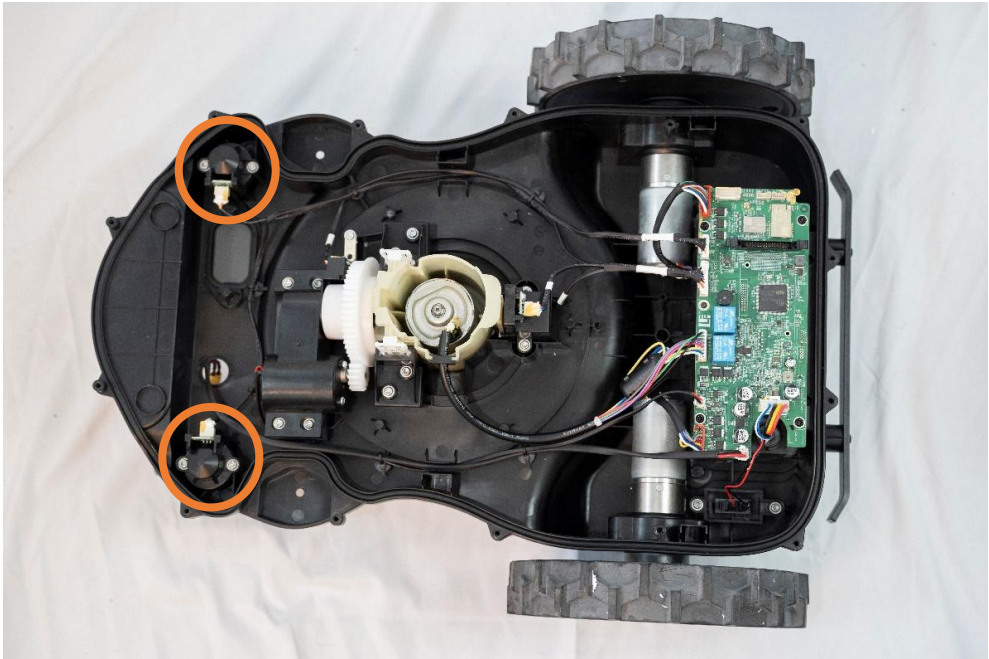

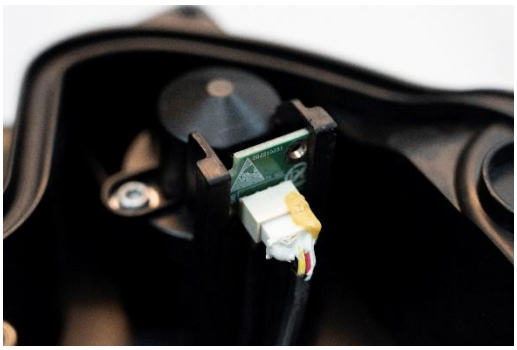

The Hall sensor needs to be installed in the position shown in the figure. Installation in the wrong direction will result in malfunction.

Tip: You can check these two Halls or corresponding magnets to solve the problems related to the mower lift sensor.

5.5 Front wheel

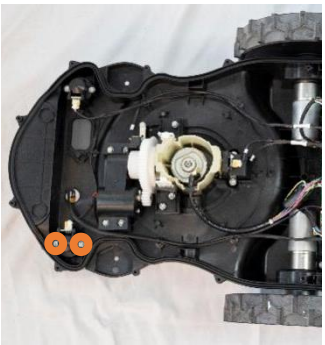

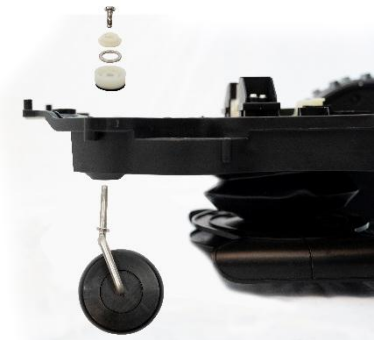

Remove the 2 orange-marked screws and the 1 blue-marked screw to remove the front wheel assembly. The parts of the front wheel assembly must be installed in the order shown in the figure.

6 Upper cover assembly

6.1 Upper cover assembly

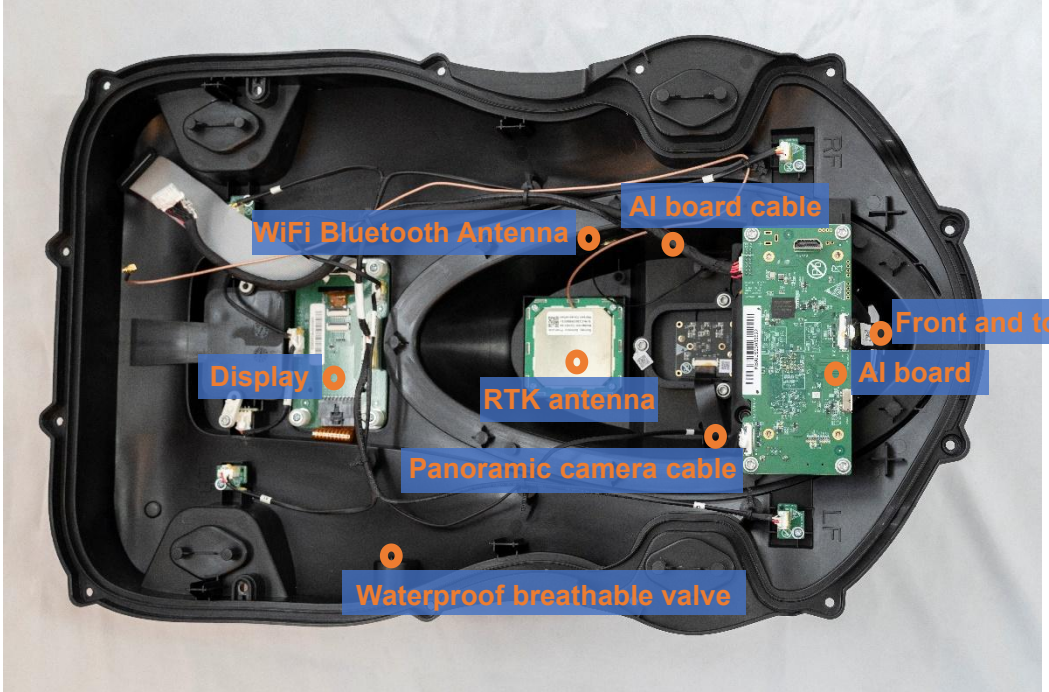

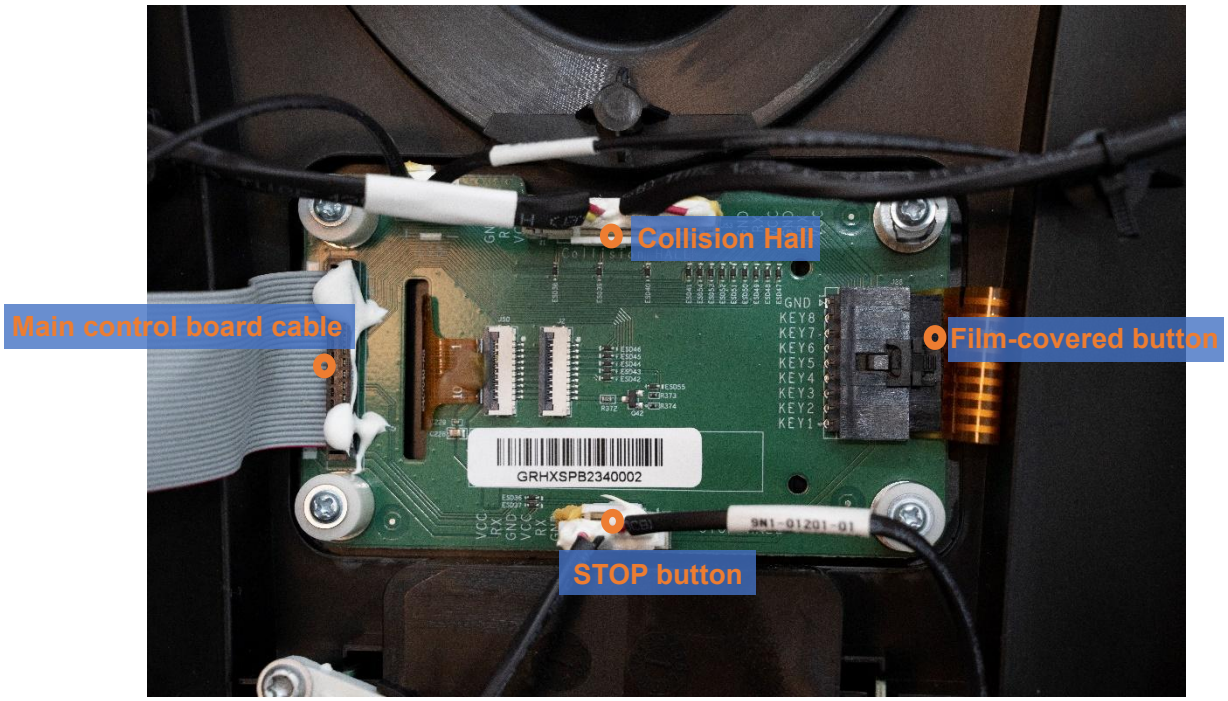

6.2 Collision Hall

The Hall sensors need to be installed as shown in the figure. Installation in the wrong direction will cause the collision function to fail.

Tip: You can check these 4 Halls or corresponding magnets to solve the problems related to the mower collision sensors.

6.3 STOP button Hall

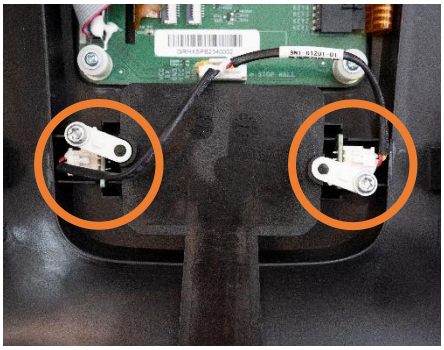

The Hall sensors need to be installed as shown in the figure. Wrong installation direction will cause the STOP function to fail.

Tip: You can check these 2 Halls or corresponding magnets to solve the problems related to the mower's STOP function.

6.4 Panoramic optical module

Remove the 3 orange-marked screws.

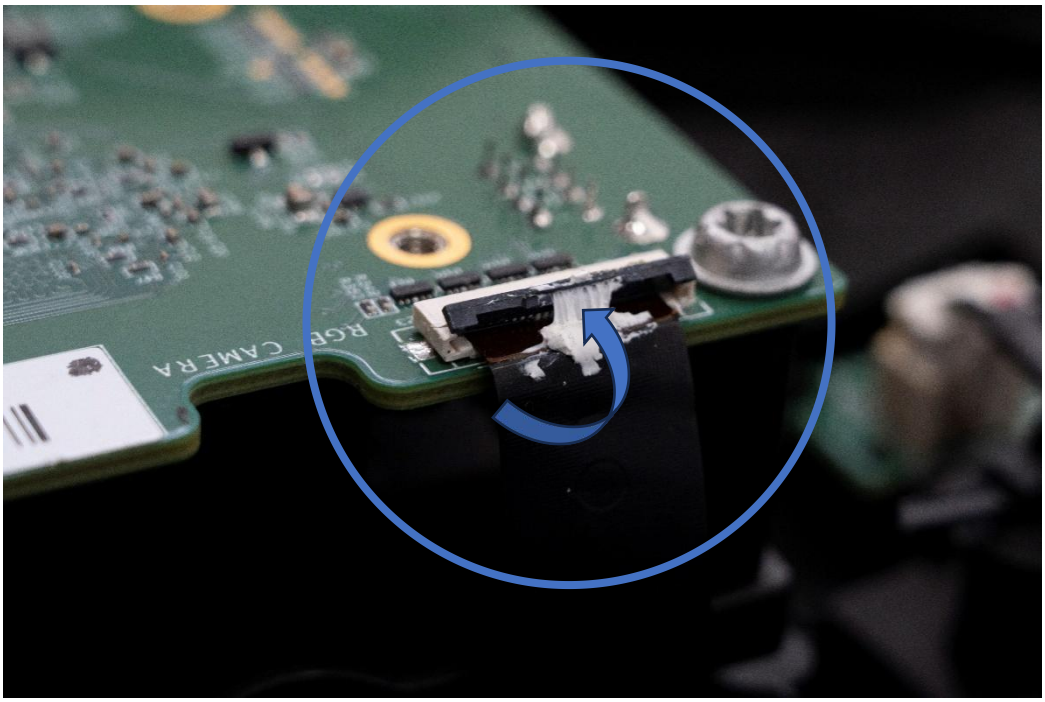

Remove the glue from the panoramic camera cable marked in blue, rotate the black pressure plate of the cable upwards, and gently pull the cable outwards to disconnect the panoramic camera cable. Then you can remove the panoramic camera assembly.

Tips: The panoramic camera module can be removed after rotating 90 degrees. The connecting wire is attached to the shell with double-sided tape. Please pay attention when removing it.

6.5 Transparent cover assembly

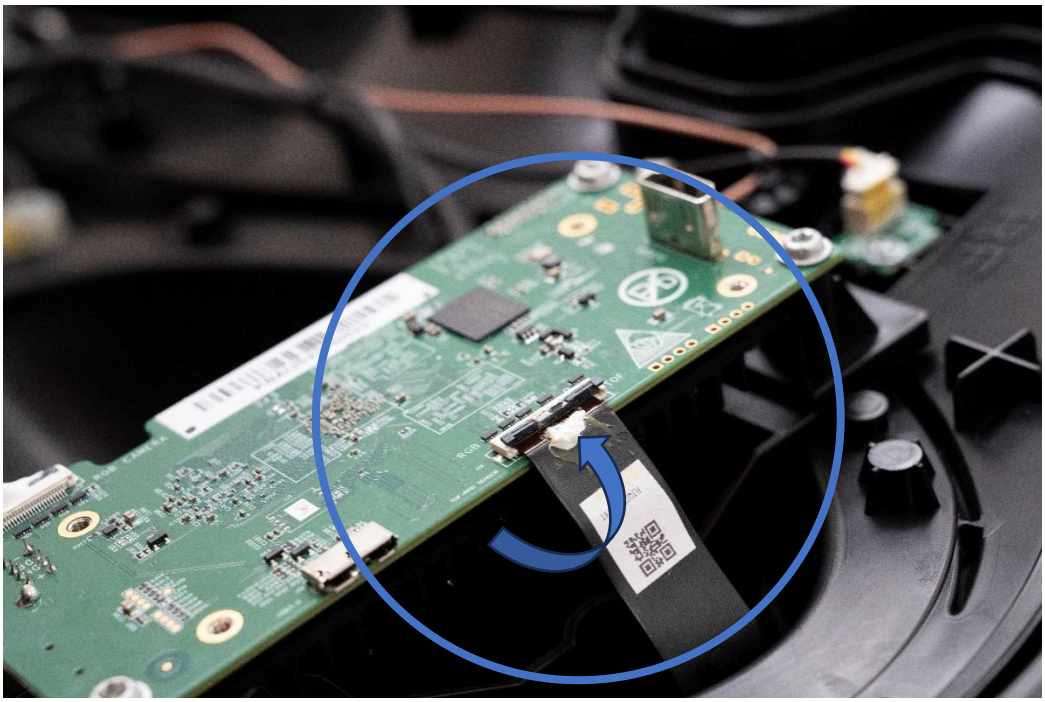

Remove the blue-marked glue from the front and tof camera cables, rotate the black pressure plate of the cable upwards, and gently pull the cable outwards to disconnect it.

Remove the 9 screws shown in the picture to remove the transparent cover assembly.

Tip: When removing the connecting wire, please note that the connecting wire at the blue mark is adhered to the outer shell with double-sided tape.

6.6 Fill Light

Remove the 4 orange-marked screws, disconnect the panoramic camera cable and the front tof camera cable marked in blue, and tear off the wifi antenna to remove the AI board.

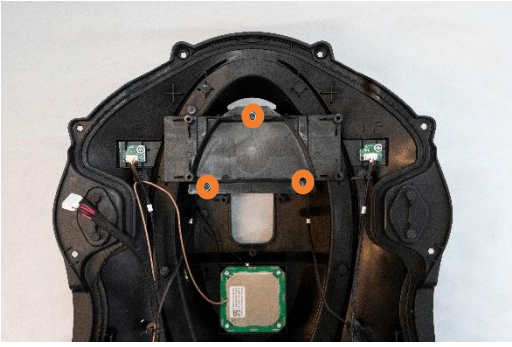
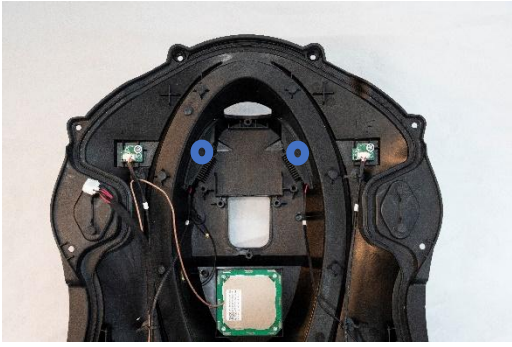

Remove the 3 orange-marked screws. The blue marks are fill lights.

7 Drive motors

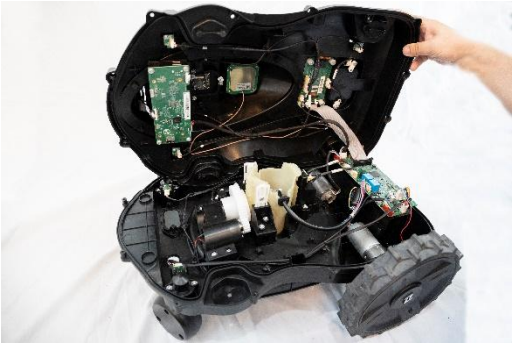
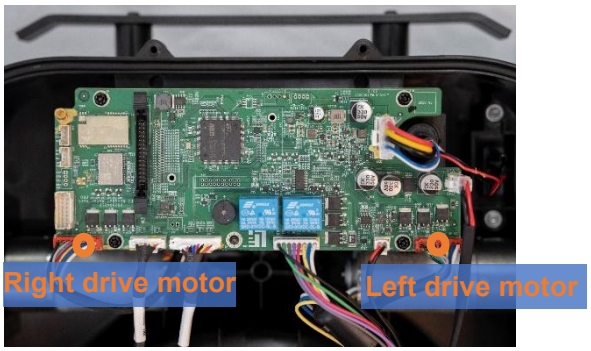

Open the fixed cover according to step 5.1 and disconnect the connection wires between the drive motor and the main control board as needed.

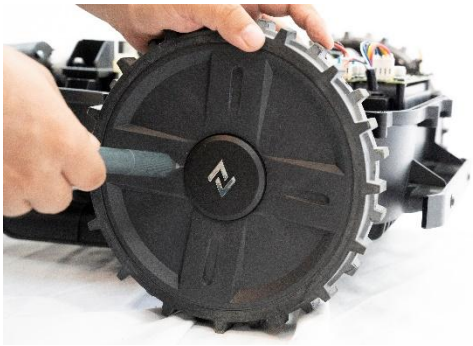

Use a flat-blade screwdriver to gently pry the rear wheel decorative cover, and remove the 3 screws marked in orange to remove the rear wheel.

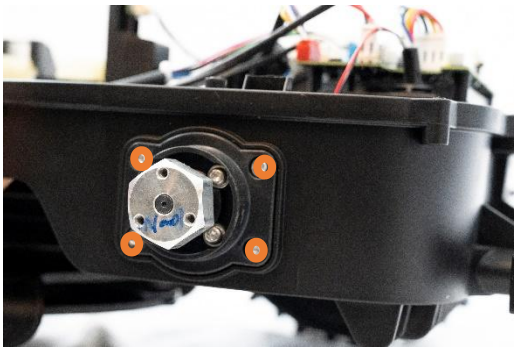
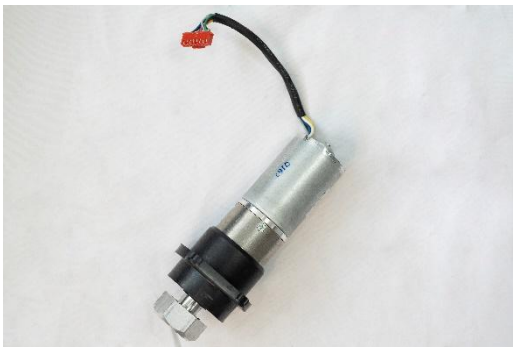

Remove the 4 orange-marked screws to dismantle the drive motor. Be careful not to miss the O-ring on the motor.

8 Mowing motor

Remove 3 and 4 screws respectively to remove the cutter head and protective cover.

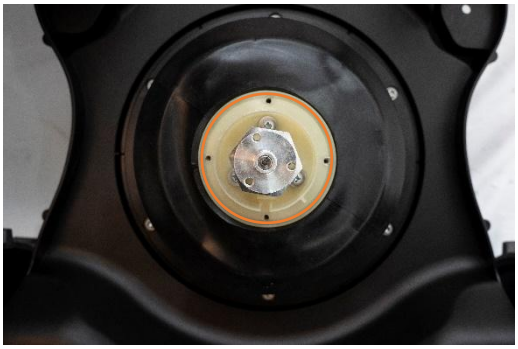

Tip: The rubber protective cover used for sealing needs to be fixed in the groove during installation, otherwise it is easy to leak.

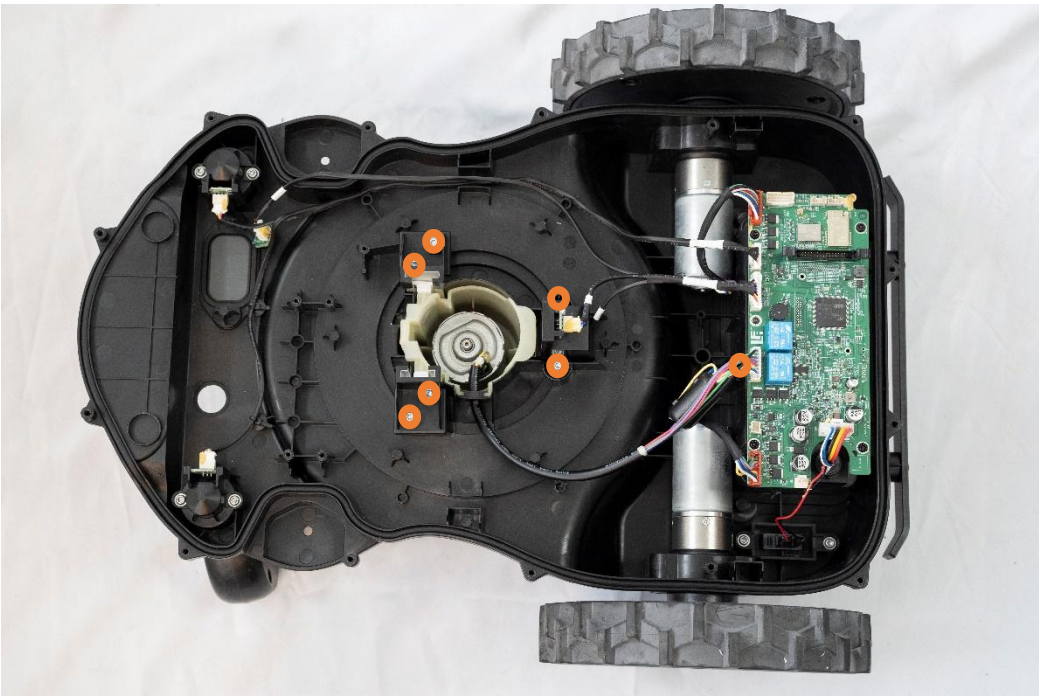

Follow steps 5.1 to 5.3 to remove the lifting motor, disconnect the mowing motor from the main control board, and remove the 6 screws shown in the figure to remove the mowing motor assembly.

9 Charging Station

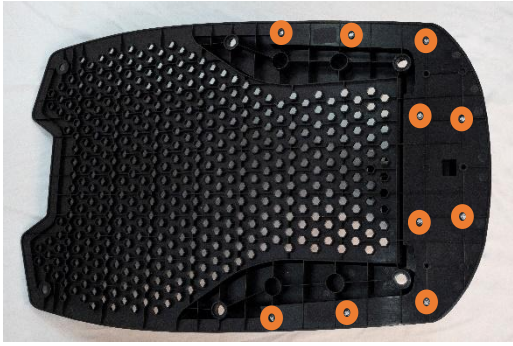

Remove the 4 screws on the upper cover. Then remove the 10 screws on the base.

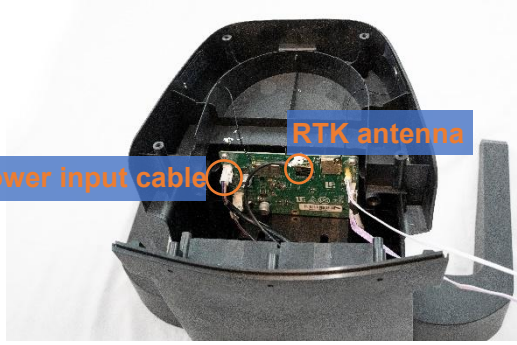
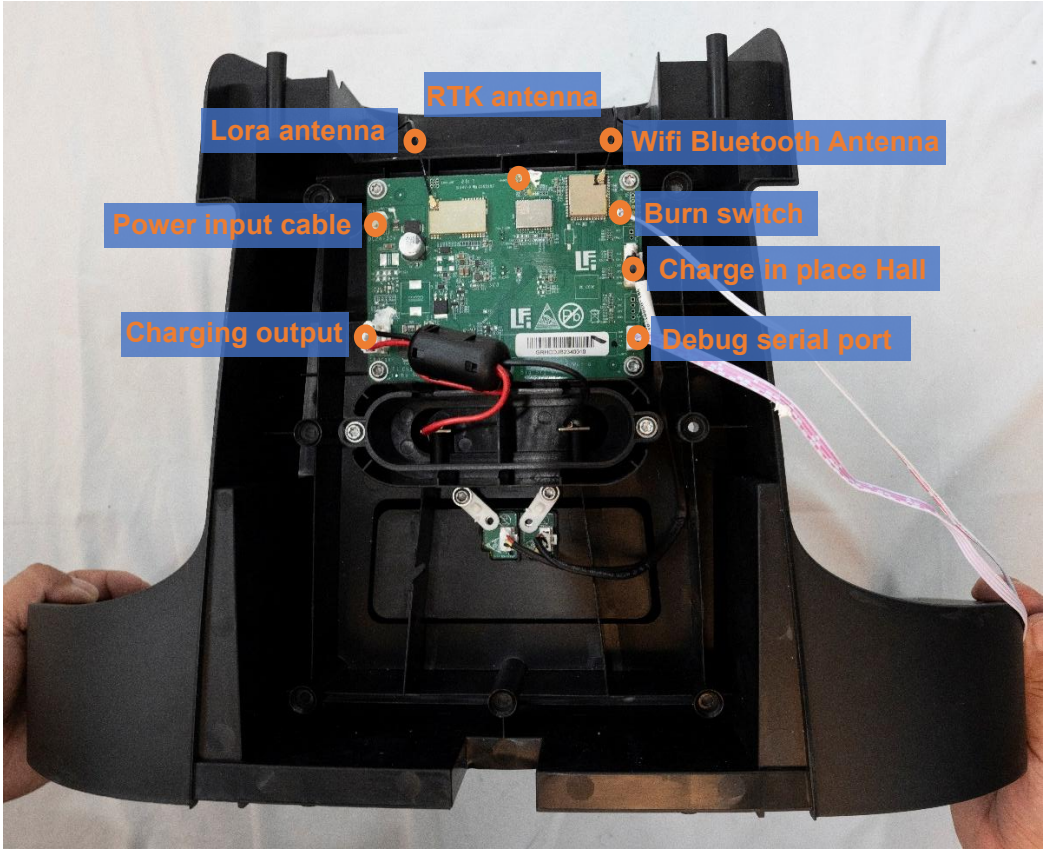
Remove the 7 screws shown in the figure, disconnect the RTK antenna and power input cables, and then remove the back cover.