This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

### *Device Specifications:*

Device Type: Audio Processor
Manufacturer: Active Audio
Firmware Version: N/A
Model(s): NUT, NUT 8x8

### *Tested on the Following Software and Firmware Versions:*

| IP Link Pro Control Processor Firmware | Touch Link Panel Firmware | GS Version |
|---|---|---|
| 2.04.0000-b007 | 2.01.0001-b001 | 1.2.2 |

### *Version History*

| Module Version | Date | Notes |
|---|---|---|
| 1_0_1_0 | 1/11/2017 | Initial Version |

### *Module Notes*

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- When the Extron module is used in combination with the software provided by Active Audio discrepancies can occur. This happens when values are entered in the Active Audio software which are not supported by the device itself.
- The Extron module supports a wider range then is supported by Active Audio in their software, this range is however fully supported by the model itself, so a choice was made to support this wider range in the Extron module.

### *Control Commands, States, and Qualifiers:*

| | | |
|---|---|---|
| **InputLevel** | -110 to 24 in steps of 2 | |
| **['Input']** | '1' – '8' | |
| **MasterLevel** | -110 to 24 in steps of 2 | |
| **MuteInput** | 'On' | 'Off' |
| **['Input']** | '1' – '8' | |
| **MuteMaster** | 'On' | 'Off' |
| **MuteOutput** | 'On' | 'Off' |
| **['Output']** | '1' – '8' | |
| **OutputLevel** | -98 to 24 in steps of 2 | |
| **['Output']** | '1' – '8' | |
| **PresetRecall** | '1' – '16' | |
| **PresetSave** | '1' – '16' | |

### *Status Available:*

| | | |
|---|---|---|
| **ConnectionStatus** | 'Connected' | 'Disconnected' |
| **InputLevel** | -110 to 24 in steps of 2 | |
| **['Input']** | '1' – '8' | |
| **MasterLevel** | -110 to 24 in steps of 2 | |
| **MuteInput** | 'On' | 'Off' |
| **['Input']** | '1' – '8' | |
| **MuteMaster** | 'On' | 'Off' |
| **MuteOutput** | 'On' | 'Off' |
| **['Output']** | '1' – '8' | |
| **OutputLevel** | -98 to 24 in steps of 2 | |
| **['Output']** | '1' – '8' | |

### *Cable and Adapter Requirements:*

Captive Screw to Male DB9 RS-232 Serial Cable

### *Notes for the Device:*

### *Serial communication:*

**Port Type:** RS-232
**Baud Rate:** 9600
**Data Bits:** 8

**Parity:** None
**Stop Bits:** One
**Flow Control:** None

### *Pin Assignments Diagram*

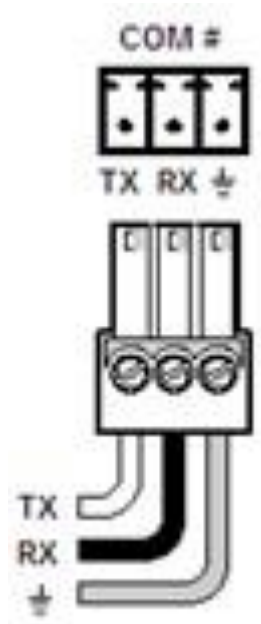


| Signal | Main Cable | Pin | Signal |
|---|---|---|---|
| TxD | ⟶ | 3 | RxD |
| RxD | ⟵ | 2 | TxD |
| GND | —— | 5 | GND |


### *General Notes:*

### *Network communication:*

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

| | |
|---|---|
| **Port Type:** | Ethernet |
| **Default Listen Port:** | 30304 |
| **Default Reply Port:** | 30304 |
| **Logon Credentials Supported:** | No |
| **Multi-Connection Capabilities:** | Undetermined |
| **Port Changeability:** | Yes |

### *Ethernet Module Configuration Description:*

Please refer to user manual for settings and changes to the network communication

### *Notes for the Device:*

## Appendix A. Set Commands

| | |
|---|---|
| Input Level -110 Input 1 | SG 2 -110.0\x0D |
| Input Level -110 Input 2 | SG 3 -110.0\x0D |
| Input Level -110 Input 3 | SG 4 -110.0\x0D |
| Input Level -110 Input 4 | SG 5 -110.0\x0D |
| Input Level -110 Input 5 | SG 6 -110.0\x0D |
| Input Level -110 Input 6 | SG 7 -110.0\x0D |
| Input Level -110 Input 7 | SG 8 -110.0\x0D |
| Input Level -110 Input 8 | SG 9 -110.0\x0D |
| Input Level 24 Input 1 | SG 2 24.0\x0D |
| Input Level 24 Input 2 | SG 3 24.0\x0D |
| Input Level 24 Input 3 | SG 4 24.0\x0D |
| Input Level 24 Input 4 | SG 5 24.0\x0D |
| Input Level 24 Input 5 | SG 6 24.0\x0D |
| Input Level 24 Input 6 | SG 7 24.0\x0D |
| Input Level 24 Input 7 | SG 8 24.0\x0D |
| Input Level 24 Input 8 | SG 9 24.0\x0D |
| Master Level -110 | SG 1 -110\x0D |
| Master Level 24 | SG 1 24\x0D |
| Mute Input Off Input 1 | SM 2 0\x0D |
| Mute Input Off Input 2 | SM 3 0\x0D |
| Mute Input Off Input 3 | SM 4 0\x0D |
| Mute Input Off Input 4 | SM 5 0\x0D |
| Mute Input Off Input 5 | SM 6 0\x0D |
| Mute Input Off Input 6 | SM 7 0\x0D |
| Mute Input Off Input 7 | SM 8 0\x0D |
| Mute Input Off Input 8 | SM 9 0\x0D |
| Mute Input On Input 1 | SM 2 1\x0D |
| Mute Input On Input 2 | SM 3 1\x0D |
| Mute Input On Input 3 | SM 4 1\x0D |
| Mute Input On Input 4 | SM 5 1\x0D |
| Mute Input On Input 5 | SM 6 1\x0D |
| Mute Input On Input 6 | SM 7 1\x0D |
| Mute Input On Input 7 | SM 8 1\x0D |
| Mute Input On Input 8 | SM 9 1\x0D |
| Mute Master Off | SM 1 0\x0D |
| Mute Master On | SM 1 1\x0D |
| Mute Output Off Output 1 | SM 10 0\x0D |
| Mute Output Off Output 2 | SM 11 0\x0D |
| Mute Output Off Output 3 | SM 12 0\x0D |
| Mute Output Off Output 4 | SM 13 0\x0D |
| Mute Output Off Output 5 | SM 14 0\x0D |
| Mute Output Off Output 6 | SM 15 0\x0D |
| Mute Output Off Output 7 | SM 16 0\x0D |
| Mute Output Off Output 8 | SM 17 0\x0D |
| Mute Output On Output 1 | SM 10 1\x0D |

| | |
|---|---|
| Mute Output On Output 2 | SM 11 1\x0D |
| Mute Output On Output 3 | SM 12 1\x0D |
| Mute Output On Output 4 | SM 13 1\x0D |
| Mute Output On Output 5 | SM 14 1\x0D |
| Mute Output On Output 6 | SM 15 1\x0D |
| Mute Output On Output 7 | SM 16 1\x0D |
| Mute Output On Output 8 | SM 17 1\x0D |
| Output Level 24 Output 1 | SG 10 24.0\x0D |
| Output Level 24 Output 2 | SG 11 24.0\x0D |
| Output Level 24 Output 3 | SG 12 24.0\x0D |
| Output Level 24 Output 4 | SG 13 24.0\x0D |
| Output Level 24 Output 5 | SG 14 24.0\x0D |
| Output Level 24 Output 6 | SG 15 24.0\x0D |
| Output Level 24 Output 7 | SG 16 24.0\x0D |
| Output Level 24 Output 8 | SG 17 24.0\x0D |
| Output Level -98 Output 1 | SG 10 -98.0\x0D |
| Output Level -98 Output 2 | SG 11 -98.0\x0D |
| Output Level -98 Output 3 | SG 12 -98.0\x0D |
| Output Level -98 Output 4 | SG 13 -98.0\x0D |
| Output Level -98 Output 5 | SG 14 -98.0\x0D |
| Output Level -98 Output 6 | SG 15 -98.0\x0D |
| Output Level -98 Output 7 | SG 16 -98.0\x0D |
| Output Level -98 Output 8 | SG 17 -98.0\x0D |
| Preset Recall 1 | GP 1\x0D |
| Preset Recall 10 | GP 10\x0D |
| Preset Recall 11 | GP 11\x0D |
| Preset Recall 12 | GP 12\x0D |
| Preset Recall 13 | GP 13\x0D |
| Preset Recall 14 | GP 14\x0D |
| Preset Recall 15 | GP 15\x0D |
| Preset Recall 16 | GP 16\x0D |
| Preset Recall 2 | GP 2\x0D |
| Preset Recall 3 | GP 3\x0D |
| Preset Recall 4 | GP 4\x0D |
| Preset Recall 5 | GP 5\x0D |
| Preset Recall 6 | GP 6\x0D |
| Preset Recall 7 | GP 7\x0D |
| Preset Recall 8 | GP 8\x0D |
| Preset Recall 9 | GP 9\x0D |
| Preset Save 1 | SP 1\x0D |
| Preset Save 10 | SP 10\x0D |
| Preset Save 11 | SP 11\x0D |
| Preset Save 12 | SP 12\x0D |
| Preset Save 13 | SP 13\x0D |
| Preset Save 14 | SP 14\x0D |
| Preset Save 15 | SP 15\x0D |
| Preset Save 16 | SP 16\x0D |
| Preset Save 2 | SP 2\x0D |

| | |
|---|---|
| Preset Save 3 | SP 3\x0D |
| Preset Save 4 | SP 4\x0D |
| Preset Save 5 | SP 5\x0D |
| Preset Save 6 | SP 6\x0D |
| Preset Save 7 | SP 7\x0D |
| Preset Save 8 | SP 8\x0D |
| Preset Save 9 | SP 9\x0D |

## Appendix B. Query Commands

| | |
|---|---|
| Input Level Input 1 | GG 2\x0D |
| Input Level Input 2 | GG 3\x0D |
| Input Level Input 3 | GG 4\x0D |
| Input Level Input 4 | GG 5\x0D |
| Input Level Input 5 | GG 6\x0D |
| Input Level Input 6 | GG 7\x0D |
| Input Level Input 7 | GG 8\x0D |
| Input Level Input 8 | GG 9\x0D |
| Master Level | GG 1\x0D |
| Mute Input Input 1 | GM 2\x0D |
| Mute Input Input 2 | GM 3\x0D |
| Mute Input Input 3 | GM 4\x0D |
| Mute Input Input 4 | GM 5\x0D |
| Mute Input Input 5 | GM 6\x0D |
| Mute Input Input 6 | GM 7\x0D |
| Mute Input Input 7 | GM 8\x0D |
| Mute Input Input 8 | GM 9\x0D |
| Mute Master | GM 1\x0D |
| Mute Output Output 1 | GM 2\x0D |
| Mute Output Output 2 | GM 3\x0D |
| Mute Output Output 3 | GM 4\x0D |
| Mute Output Output 4 | GM 5\x0D |
| Mute Output Output 5 | GM 6\x0D |
| Mute Output Output 6 | GM 7\x0D |
| Mute Output Output 7 | GM 8\x0D |
| Mute Output Output 8 | GM 9\x0D |
| Output Level Output 1 | GG 10\x0D |
| Output Level Output 2 | GG 11\x0D |
| Output Level Output 3 | GG 12\x0D |
| Output Level Output 4 | GG 13\x0D |
| Output Level Output 5 | GG 14\x0D |
| Output Level Output 6 | GG 15\x0D |
| Output Level Output 7 | GG 16\x0D |
| Output Level Output 8 | GG 17\x0D |