

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Lighting Control
 Manufacturer: AAIOT
 Firmware Version: N/A
 Model(s): RDM-02DAC01R

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.1.0

Version History

Module Version	Date	Notes
1_0_0_0	1/23/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- All commands support the qualifier 'Module ID'. When the qualifier is set to the value 'Broadcast' status is not supported.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RDM-02DAC01R')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RDM-02DAC01R')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command DimmingPort	Value 'Open'	Value 'Close'	Value 'Invert'
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'	Qualifier Value 'Broadcast'	
Qualifier Key 'Port'	Qualifier Value '1' – '2'		
# DimmingPort example InterfaceName.Set('DimmingPort', 'Open', {'Module ID': '1', 'Port': '1'})			
Command PresetRecall	Value '0' – '9'		
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'	Qualifier Value 'Broadcast'	
# PresetRecall example InterfaceName.Set('PresetRecall', '0', {'Module ID': '1'})			
Command PresetSave	Value '0' – '9'		
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'	Qualifier Value 'Broadcast'	
# PresetSave example InterfaceName.Set('PresetSave', '0', {'Module ID': '1'})			
Command SetBrightness	Value 0 – 127		
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'	Qualifier Value 'Broadcast'	
Qualifier Key 'Port'	Qualifier Value '1' – '16'		
Qualifier Key 'Gradient'	Qualifier Value 0 to 255 in steps of 1		
# SetBrightness example InterfaceName.Set('SetBrightness', 127, {'Module ID': '1', 'Port': '1', 'Gradient': 255})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command BrightnessStatus	Value 0 – 127
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'
Qualifier Key 'Port'	Qualifier Value '1' – '2'
# BrightnessStatus examples InterfaceName.Update('BrightnessStatus', {'Module ID': '1', 'Port': '1'}) Value = InterfaceName.ReadStatus('BrightnessStatus', {'Module ID': '1', 'Port': '1'}) InterfaceName.SubscribeStatus('BrightnessStatus', None, FeedbackHandler)	
Command ConnectionStatus	Value 'Connected' 'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)	
Command VersionNumber	Qualifier Value 'String'
Qualifier Key 'Module ID'	Qualifier Value '1' – '128'
# VersionNumber examples InterfaceName.Update('VersionNumber', {'Module ID': '1'}) Value = InterfaceName.ReadStatus('VersionNumber') InterfaceName.SubscribeStatus('VersionNumber', None, FeedbackHandler)	

Cable and Adapter Requirements

Please consult manufacturer for Cable and Adapter Requirements.

Notes for the Device

Serial communication

Port Type: RS-485

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

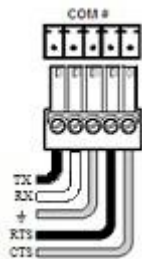

Please consult manufacturer for Pin Assignments Diagram.

Set Brightness 0 Module ID 128 Port 1 Gradient 0	\xCA \x802\x03\x01\x00\x00\xAC
Set Brightness 0 Module ID 128 Port 1 Gradient 255	\xCA \x802\x03\x01\x00\xFF\xAC
Set Brightness 0 Module ID 128 Port 16 Gradient 0	\xCA \x802\x03\x10\x00\x00\xAC
Set Brightness 0 Module ID 128 Port 16 Gradient 255	\xCA \x802\x03\x10\x00\xFF\xAC
Set Brightness 127 Module ID 1 Port 1 Gradient 0	\xCA \x012\x03\x01\x7F\x00\xAC
Set Brightness 127 Module ID 1 Port 1 Gradient 255	\xCA \x012\x03\x01\x7F\xFF\xAC
Set Brightness 127 Module ID 1 Port 16 Gradient 0	\xCA \x012\x03\x10\x7F\x00\xAC
Set Brightness 127 Module ID 1 Port 16 Gradient 255	\xCA \x012\x03\x10\x7F\xFF\xAC
Set Brightness 127 Module ID 128 Port 1 Gradient 0	\xCA \x802\x03\x01\x7F\x00\xAC
Set Brightness 127 Module ID 128 Port 1 Gradient 255	\xCA \x802\x03\x01\x7F\xFF\xAC
Set Brightness 127 Module ID 128 Port 16 Gradient 0	\xCA \x802\x03\x10\x7F\x00\xAC
Set Brightness 127 Module ID 128 Port 16 Gradient 255	\xCA \x802\x03\x10\x7F\xFF\xAC

Appendix B. Update Commands

Brightness Status Module ID 1 Port 1	\xCA \x01 \x01\x01\xAC
Brightness Status Module ID 1 Port 2	\xCA \x01 \x01\x01\xAC
Brightness Status Module ID 128 Port 1	\xCA \x80 \x01\x01\xAC
Brightness Status Module ID 128 Port 2	\xCA \x80 \x01\x01\xAC
Version Number	\xCA \x01\xBB\x01\x01\xAC