

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
 Manufacturer: Avocor
 Firmware Version: N/A
 Model(s): AVF-7550, AVF-6550, AVF-8650

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	10/14/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AVF-7550')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AVF-7550')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='AVF-7550')</code>

Control Commands

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format with Qualifier:

InterfaceName.Set(Command, Value)

Command AspectRatio	Value 'Native (Point To Point)' 'Letterbox'	Value 'Full Screen (16:9)' 'Auto'	Value 'Pillarbox (4:3)'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Native (Point To Point)')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command AutoImage ¹	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command Freeze	Value None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command Input	Value 'VGA' 'HDMI 3' 'IPC/OPS'	Value 'HDMI 1' 'HDMI 4' 'WPS'	Value 'HDMI 2' 'Display Port'
# Input example InterfaceName.Set('Input', 'VGA')			
Command MenuNavigation	Value 'Menu' 'Down' 'OK'	Value 'Info' 'Left' 'Exit'	Value 'Up' 'Right'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command PictureMode	Value 'User' 'Cinema'	Value 'Sport' 'Vivid'	Value 'Game'
# PictureMode example InterfaceName.Set('PictureMode', 'User')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ For VGA input only.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Native (Point To Point)' 'Letterbox'	Value 'Full Screen (16:9)' 'Auto'	Value 'Pillarbox (4:3)'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 3' 'IPC/OPS'	Value 'HDMI 1' 'HDMI 4' 'WPS'	Value 'HDMI 2' 'Display Port'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command PictureMode	Value 'User' 'Cinema'	Value 'Sport' 'Vivid'	Value 'Game'
# PictureMode example InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command Power	Value 'On'	Value 'Off'
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command Volume	Value 0 to 100 in steps of 1	
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable


Notes for the Device

Serial communication


Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

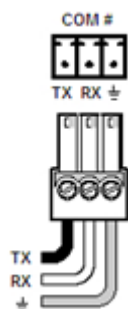

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

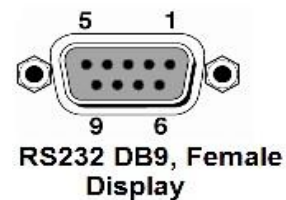

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Auto	\x07\x01\x02ASP\x04\x08\x0D
Aspect Ratio Full Screen (16:9)	\x07\x01\x02ASP\x01\x08\x0D
Aspect Ratio Letterbox	\x07\x01\x02ASP\x03\x08\x0D
Aspect Ratio Native (Point To Point)	\x07\x01\x02ASP\x00\x08\x0D
Aspect Ratio Pillarbox (4:3)	\x07\x01\x02ASP\x02\x08\x0D
Audio Mute Off	\x07\x01\x02MUT\x00\x08\x0D
Audio Mute On	\x07\x01\x02MUT\x01\x08\x0D
Auto Image None	\x07\x01\x02ADJ\x00\x08\x0D
Executive Mode Off	\x07\x01\x02KLC\x00\x08\x0D
Executive Mode On	\x07\x01\x02KLC\x01\x08\x0D
Freeze None	\x07\x01\x02RCU\x18\x08\x0D
Input Display Port	\x07\x01\x02MIN\x0D\x08\x0D
Input HDMI 1	\x07\x01\x02MIN\x09\x08\x0D
Input HDMI 2	\x07\x01\x02MIN\x0A\x08\x0D
Input HDMI 3	\x07\x01\x02MIN\x0B\x08\x0D
Input HDMI 4	\x07\x01\x02MIN\x0C\x08\x0D
Input IPC/OPS	\x07\x01\x02MIN\x0E\x08\x0D
Input VGA	\x07\x01\x02MIN\x00\x08\x0D
Input WPS	\x07\x01\x02MIN\x13\x08\x0D
Menu Navigation Down	\x07\x01\x02RCU\x03\x08\x0D
Menu Navigation Exit	\x07\x01\x02RCU\x07\x08\x0D
Menu Navigation Info	\x07\x01\x02RCU\x01\x08\x0D
Menu Navigation Left	\x07\x01\x02RCU\x04\x08\x0D
Menu Navigation Menu	\x07\x01\x02RCU\x00\x08\x0D
Menu Navigation OK	\x07\x01\x02RCU\x06\x08\x0D
Menu Navigation Right	\x07\x01\x02RCU\x05\x08\x0D
Menu Navigation Up	\x07\x01\x02RCU\x02\x08\x0D
Picture Mode Cinema	\x07\x01\x02SCM\x03\x08\x0D
Picture Mode Game	\x07\x01\x02SCM\x02\x08\x0D
Picture Mode Sport	\x07\x01\x02SCM\x01\x08\x0D
Picture Mode User	\x07\x01\x02SCM\x00\x08\x0D
Picture Mode Vivid	\x07\x01\x02SCM\x04\x08\x0D
Power Off	\x07\x01\x02POW\x00\x08\x0D
Power On	\x07\x01\x02POW\x01\x08\x0D
Volume 0	\x07\x01\x02VOL\x00\x08\x0D
Volume 100	\x07\x01\x02VOLd\x08\x0D

Appendix B. Update Commands

Aspect Ratio	\x07\x01\x01ASP\x08\x0D
Audio Mute	\x07\x01\x01MUT\x08\x0D
Executive Mode	\x07\x01\x01KLC\x08\x0D
Input	\x07\x01\x01MIN\x08\x0D
Picture Mode	\x07\x01\x01SCM\x08\x0D
Power	\x07\x01\x01POW\x08\x0D
Volume	\x07\x01\x01VOL\x08\x0D