

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
Manufacturer: Audac
Firmware Version: N/A
Model(s): AMP523, RM523

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_0_0	3/9/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

Bass	-14 to 14 in steps of 2		
Input	'Line 1' 'Line 4'	'Line 2' 'WLI-WMI/MIC'	'Line 3'
MasterVolume	-80 to 0 in steps of 1		
Mic_WMIVolume	-80 to 0 in steps of 1		
Mute	'On'	'Off'	
SaveSettings	'String'		
Treble	-14 to 14 in steps of 2		
WLIVolume	-80 to 0 in steps of 1		

Status Available:

Bass	-14 to 14 in steps of 2		
ConnectionStatus	'Connected'	'Disconnected'	
Input	'Line 1' 'Line 4'	'Line 2' 'WLI-WMI/MIC'	'Line 3'
MasterVolume	-80 to 0 in steps of 1		
Mic_WMIVolume	-80 to 0 in steps of 1		
Mute	'On'	'Off'	
AllStatuses	None		
Treble	-14 to 14 in steps of 2		
WLIVolume	-80 to 0 in steps of 1		

Cable and Adapter Requirements:

Captive Screw to Male DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:

Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

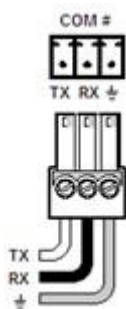

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type: Ethernet

Default Port: 5001

Logon Credentials No

Supported:

Multi-Connection Yes

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Bass 14	# X001 F001 SB01 14 U \x0D\x0A
Bass -14	# X001 F001 SB01 0 U \x0D\x0A
Input Line 1	# X001 F001 SR01 1 U \x0D\x0A
Input Line 2	# X001 F001 SR01 2 U \x0D\x0A
Input Line 3	# X001 F001 SR01 3 U \x0D\x0A
Input Line 4	# X001 F001 SR01 4 U \x0D\x0A
Input WLI-WMI/MIC	# X001 F001 SR01 5 U \x0D\x0A
Master Volume 0	# X001 F001 SV01 0 U \x0D\x0A
Master Volume -80	# X001 F001 SV01 80 U \x0D\x0A
Mic/WMI Volume 0	# X001 F001 SVM 0 U \x0D\x0A
Mic/WMI Volume -80	# X001 F001 SVM 80 U \x0D\x0A
Mute Off	# X001 F001 SM01 0 U \x0D\x0A
Mute On	# X001 F001 SM01 1 U \x0D\x0A
Save Settings None	# X001 F001 SAVE 0 U \x0D\x0A
Treble 14	# X001 F001 ST01 14 U \x0D\x0A
Treble -14	# X001 F001 ST01 0 U \x0D\x0A
WLI Volume -80	# X001 F001 SVL 80 U \x0D\x0A

Appendix B. Update Commands

All Statuses ¹	# X001 F001 GSA 0 U \x0D\x0A
All Statuses ²	# R001 F001 GSA 0 U \x0D\x0A

¹ AMP523 model

² RS523 model