

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
Manufacturer: Audac
Firmware Version: V1.96
Model(s): M2

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.03.0000-b006	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_0_2_0	11/16/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- DeviceAddress must be set to the address of the device. Valid values are between 1 and 100. The default value is 1. Example: InterfaceName.DeviceAddress = '4'

Control Commands, States, and Qualifiers:

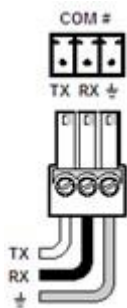
GlobalSceneRouting	'1' – '8'		
Save	None		
ZoneBass	-9 to 9 in steps of 1 dB		
['Zone']	'1' – '8'		
ZoneInputRouting	'Direct Input 1'	'Direct Input 2'	'Direct Input 3'
	'Direct Input 4'	'Direct Input 5'	'Direct Input 6'
	'Direct Input 7'	'Direct Input 8'	'Wall Plate Input 1'
	'Wall Plate Input 2'	'Wall Plate Input 3'	'Wall Plate Input 4'
	'Wall Plate Input 5'	'Wall Plate Input 6'	'Wall Plate Input 7'
	'Wall Plate Input 8'	'Fiber Input 1'	'Fiber Input 2'
	'Fiber Input 3'	'Fiber Input 4'	'Fiber Input 5'
	'Fiber Input 6'	'Fiber Input 7'	'Fiber Input 8'
	'Prio 1'	'Prio 2'	'Internal sine generator'
	'Internal white noise generator'	'Internal pink noise generator'	'Direct Input 9'
['Zone']	'1' – '8'	'All'	
ZoneMute	'On'	'Off'	
['Zone']	'1' – '8'	'All'	
ZoneSceneRouting	'1' – '8'		
['Zone']	'1' – '8'		
ZoneTreble	-9 to 9 in steps of 1 dB		
['Zone']	'1' – '8'		
ZoneVolume	-70 to 0 in steps of 1 dB		
['Zone']	'1' – '8'	'All'	

Status Available:

ConnectionStatus	'Connected'		'Disconnected'
ZoneBass	-9 to 9 in steps of 1 dB		
['Zone']	'1' – '8'		
ZoneInputRouting	'Direct Input 1'	'Direct Input 2'	'Direct Input 3'
	'Direct Input 4'	'Direct Input 5'	'Direct Input 6'
	'Direct Input 7'	'Direct Input 8'	'Wall Plate Input 1'
	'Wall Plate Input 2'	'Wall Plate Input 3'	'Wall Plate Input 4'
	'Wall Plate Input 5'	'Wall Plate Input 6'	'Wall Plate Input 7'
	'Wall Plate Input 8'	'Fiber Input 1'	'Fiber Input 2'
	'Fiber Input 3'	'Fiber Input 4'	'Fiber Input 5'
	'Fiber Input 6'	'Fiber Input 7'	'Fiber Input 8'
	'Prio 1'	'Prio 2'	'Internal sine generator'
	'Internal white noise generator'	'Internal pink noise generator'	'Direct Input 9'
'Other'			
['Zone']	'1' – '8'		
ZoneMute	'On'		'Off'
['Zone']	'1' – '8'		
ZoneTreble	-9 to 9 in steps of 1 dB		
['Zone']	'1' – '8'		
ZoneVolume	-70 to 0 in steps of 1 dB		
['Zone']	'1' – '8'		

Cable and Adapter Requirements:Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:**Port Type:** RS-232**Baud Rate:** 19200**Data Bits:** 8**Parity:** None**Stop Bits:** One**Flow Control:** None**Pin Assignments Diagram**

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

**General Notes:**

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type: Ethernet

Default Port: 5001

Logon Credentials No

Supported:

Multi-Connection Yes

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

GlobalSceneRouting 1	# M001 F001 SR0 61 U \r\n
GlobalSceneRouting 2	# M001 F001 SR0 62 U \r\n
GlobalSceneRouting 3	# M001 F001 SR0 63 U \r\n
GlobalSceneRouting 4	# M001 F001 SR0 64 U \r\n
GlobalSceneRouting 5	# M001 F001 SR0 65 U \r\n
GlobalSceneRouting 6	# M001 F001 SR0 66 U \r\n
GlobalSceneRouting 7	# M001 F001 SR0 67 U \r\n
GlobalSceneRouting 8	# M001 F001 SR0 68 U \r\n
ZoneBass Zone 1 9	# M001 F001 SB1 9 U \r\n
ZoneBass Zone 1 -9	# M001 F001 SB1 -9 U \r\n
ZoneBass Zone 2 9	# M001 F001 SB2 9 U \r\n
ZoneBass Zone 2 -9	# M001 F001 SB2 -9 U \r\n
ZoneBass Zone 3 9	# M001 F001 SB3 9 U \r\n
ZoneBass Zone 3 -9	# M001 F001 SB3 -9 U \r\n
ZoneBass Zone 4 9	# M001 F001 SB4 9 U \r\n
ZoneBass Zone 4 -9	# M001 F001 SB4 -9 U \r\n
ZoneBass Zone 5 9	# M001 F001 SB5 9 U \r\n
ZoneBass Zone 5 -9	# M001 F001 SB5 -9 U \r\n
ZoneBass Zone 6 9	# M001 F001 SB6 9 U \r\n
ZoneBass Zone 6 -9	# M001 F001 SB6 -9 U \r\n
ZoneBass Zone 7 9	# M001 F001 SB7 9 U \r\n
ZoneBass Zone 7 -9	# M001 F001 SB7 -9 U \r\n
ZoneBass Zone 8 9	# M001 F001 SB8 9 U \r\n
ZoneBass Zone 8 -9	# M001 F001 SB8 -9 U \r\n
ZoneInputRouting Zone 1 Direct Input 1	# M001 F001 SR1 1 U \r\n
ZoneInputRouting Zone 1 Direct Input 2	# M001 F001 SR1 2 U \r\n
ZoneInputRouting Zone 1 Direct Input 3	# M001 F001 SR1 3 U \r\n
ZoneInputRouting Zone 1 Direct Input 4	# M001 F001 SR1 4 U \r\n
ZoneInputRouting Zone 1 Direct Input 5	# M001 F001 SR1 5 U \r\n
ZoneInputRouting Zone 1 Direct Input 6	# M001 F001 SR1 6 U \r\n
ZoneInputRouting Zone 1 Direct Input 7	# M001 F001 SR1 7 U \r\n
ZoneInputRouting Zone 1 Direct Input 8	# M001 F001 SR1 8 U \r\n
ZoneInputRouting Zone 1 Direct Input 9	# M001 F001 SR1 9 U \r\n
ZoneInputRouting Zone 1 Fiber Input 1	# M001 F001 SR1 25 U \r\n
ZoneInputRouting Zone 1 Fiber Input 2	# M001 F001 SR1 26 U \r\n
ZoneInputRouting Zone 1 Fiber Input 3	# M001 F001 SR1 27 U \r\n
ZoneInputRouting Zone 1 Fiber Input 4	# M001 F001 SR1 28 U \r\n
ZoneInputRouting Zone 1 Fiber Input 5	# M001 F001 SR1 29 U \r\n
ZoneInputRouting Zone 1 Fiber Input 6	# M001 F001 SR1 30 U \r\n
ZoneInputRouting Zone 1 Fiber Input 7	# M001 F001 SR1 31 U \r\n
ZoneInputRouting Zone 1 Fiber Input 8	# M001 F001 SR1 32 U \r\n
ZoneInputRouting Zone 1 Internal pink noise generator	# M001 F001 SR1 16 U \r\n
ZoneInputRouting Zone 1 Internal sine generator	# M001 F001 SR1 14 U \r\n
ZoneInputRouting Zone 1 Internal white noise generator	# M001 F001 SR1 15 U \r\n
ZoneInputRouting Zone 1 Prio 1	# M001 F001 SR1 12 U \r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone 1 Prio 2	# M001 F001 SR1 13 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 1	# M001 F001 SR1 17 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 2	# M001 F001 SR1 18 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 3	# M001 F001 SR1 19 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 4	# M001 F001 SR1 20 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 5	# M001 F001 SR1 21 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 6	# M001 F001 SR1 22 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 7	# M001 F001 SR1 23 U r\n
ZoneInputRouting Zone 1 Wall Plate Input 8	# M001 F001 SR1 24 U r\n
ZoneInputRouting Zone 2 Direct Input 1	# M001 F001 SR2 1 U r\n
ZoneInputRouting Zone 2 Direct Input 2	# M001 F001 SR2 2 U r\n
ZoneInputRouting Zone 2 Direct Input 3	# M001 F001 SR2 3 U r\n
ZoneInputRouting Zone 2 Direct Input 4	# M001 F001 SR2 4 U r\n
ZoneInputRouting Zone 2 Direct Input 5	# M001 F001 SR2 5 U r\n
ZoneInputRouting Zone 2 Direct Input 6	# M001 F001 SR2 6 U r\n
ZoneInputRouting Zone 2 Direct Input 7	# M001 F001 SR2 7 U r\n
ZoneInputRouting Zone 2 Direct Input 8	# M001 F001 SR2 8 U r\n
ZoneInputRouting Zone 2 Direct Input 9	# M001 F001 SR2 9 U r\n
ZoneInputRouting Zone 2 Fiber Input 1	# M001 F001 SR2 25 U r\n
ZoneInputRouting Zone 2 Fiber Input 2	# M001 F001 SR2 26 U r\n
ZoneInputRouting Zone 2 Fiber Input 3	# M001 F001 SR2 27 U r\n
ZoneInputRouting Zone 2 Fiber Input 4	# M001 F001 SR2 28 U r\n
ZoneInputRouting Zone 2 Fiber Input 5	# M001 F001 SR2 29 U r\n
ZoneInputRouting Zone 2 Fiber Input 6	# M001 F001 SR2 30 U r\n
ZoneInputRouting Zone 2 Fiber Input 7	# M001 F001 SR2 31 U r\n
ZoneInputRouting Zone 2 Fiber Input 8	# M001 F001 SR2 32 U r\n
ZoneInputRouting Zone 2 Internal pink noise generator	# M001 F001 SR2 16 U r\n
ZoneInputRouting Zone 2 Internal sine generator	# M001 F001 SR2 14 U r\n
ZoneInputRouting Zone 2 Internal white noise generator	# M001 F001 SR2 15 U r\n
ZoneInputRouting Zone 2 Prio 1	# M001 F001 SR2 12 U r\n
ZoneInputRouting Zone 2 Prio 2	# M001 F001 SR2 13 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 1	# M001 F001 SR2 17 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 2	# M001 F001 SR2 18 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 3	# M001 F001 SR2 19 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 4	# M001 F001 SR2 20 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 5	# M001 F001 SR2 21 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 6	# M001 F001 SR2 22 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 7	# M001 F001 SR2 23 U r\n
ZoneInputRouting Zone 2 Wall Plate Input 8	# M001 F001 SR2 24 U r\n
ZoneInputRouting Zone 3 Direct Input 1	# M001 F001 SR3 1 U r\n
ZoneInputRouting Zone 3 Direct Input 2	# M001 F001 SR3 2 U r\n
ZoneInputRouting Zone 3 Direct Input 3	# M001 F001 SR3 3 U r\n
ZoneInputRouting Zone 3 Direct Input 4	# M001 F001 SR3 4 U r\n
ZoneInputRouting Zone 3 Direct Input 5	# M001 F001 SR3 5 U r\n
ZoneInputRouting Zone 3 Direct Input 6	# M001 F001 SR3 6 U r\n
ZoneInputRouting Zone 3 Direct Input 7	# M001 F001 SR3 7 U r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone 3 Direct Input 8	# M001 F001 SR3 8 U r\n
ZoneInputRouting Zone 3 Direct Input 9	# M001 F001 SR3 9 U r\n
ZoneInputRouting Zone 3 Fiber Input 1	# M001 F001 SR3 25 U r\n
ZoneInputRouting Zone 3 Fiber Input 2	# M001 F001 SR3 26 U r\n
ZoneInputRouting Zone 3 Fiber Input 3	# M001 F001 SR3 27 U r\n
ZoneInputRouting Zone 3 Fiber Input 4	# M001 F001 SR3 28 U r\n
ZoneInputRouting Zone 3 Fiber Input 5	# M001 F001 SR3 29 U r\n
ZoneInputRouting Zone 3 Fiber Input 6	# M001 F001 SR3 30 U r\n
ZoneInputRouting Zone 3 Fiber Input 7	# M001 F001 SR3 31 U r\n
ZoneInputRouting Zone 3 Fiber Input 8	# M001 F001 SR3 32 U r\n
ZoneInputRouting Zone 3 Internal pink noise generator	# M001 F001 SR3 16 U r\n
ZoneInputRouting Zone 3 Internal sine generator	# M001 F001 SR3 14 U r\n
ZoneInputRouting Zone 3 Internal white noise generator	# M001 F001 SR3 15 U r\n
ZoneInputRouting Zone 3 Prio 1	# M001 F001 SR3 12 U r\n
ZoneInputRouting Zone 3 Prio 2	# M001 F001 SR3 13 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 1	# M001 F001 SR3 17 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 2	# M001 F001 SR3 18 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 3	# M001 F001 SR3 19 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 4	# M001 F001 SR3 20 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 5	# M001 F001 SR3 21 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 6	# M001 F001 SR3 22 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 7	# M001 F001 SR3 23 U r\n
ZoneInputRouting Zone 3 Wall Plate Input 8	# M001 F001 SR3 24 U r\n
ZoneInputRouting Zone 4 Direct Input 1	# M001 F001 SR4 1 U r\n
ZoneInputRouting Zone 4 Direct Input 2	# M001 F001 SR4 2 U r\n
ZoneInputRouting Zone 4 Direct Input 3	# M001 F001 SR4 3 U r\n
ZoneInputRouting Zone 4 Direct Input 4	# M001 F001 SR4 4 U r\n
ZoneInputRouting Zone 4 Direct Input 5	# M001 F001 SR4 5 U r\n
ZoneInputRouting Zone 4 Direct Input 6	# M001 F001 SR4 6 U r\n
ZoneInputRouting Zone 4 Direct Input 7	# M001 F001 SR4 7 U r\n
ZoneInputRouting Zone 4 Direct Input 8	# M001 F001 SR4 8 U r\n
ZoneInputRouting Zone 4 Direct Input 9	# M001 F001 SR4 9 U r\n
ZoneInputRouting Zone 4 Fiber Input 1	# M001 F001 SR4 25 U r\n
ZoneInputRouting Zone 4 Fiber Input 2	# M001 F001 SR4 26 U r\n
ZoneInputRouting Zone 4 Fiber Input 3	# M001 F001 SR4 27 U r\n
ZoneInputRouting Zone 4 Fiber Input 4	# M001 F001 SR4 28 U r\n
ZoneInputRouting Zone 4 Fiber Input 5	# M001 F001 SR4 29 U r\n
ZoneInputRouting Zone 4 Fiber Input 6	# M001 F001 SR4 30 U r\n
ZoneInputRouting Zone 4 Fiber Input 7	# M001 F001 SR4 31 U r\n
ZoneInputRouting Zone 4 Fiber Input 8	# M001 F001 SR4 32 U r\n
ZoneInputRouting Zone 4 Internal pink noise generator	# M001 F001 SR4 16 U r\n
ZoneInputRouting Zone 4 Internal sine generator	# M001 F001 SR4 14 U r\n
ZoneInputRouting Zone 4 Internal white noise generator	# M001 F001 SR4 15 U r\n
ZoneInputRouting Zone 4 Prio 1	# M001 F001 SR4 12 U r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone 4 Prio 2	# M001 F001 SR4 13 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 1	# M001 F001 SR4 17 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 2	# M001 F001 SR4 18 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 3	# M001 F001 SR4 19 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 4	# M001 F001 SR4 20 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 5	# M001 F001 SR4 21 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 6	# M001 F001 SR4 22 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 7	# M001 F001 SR4 23 U \r\n
ZoneInputRouting Zone 4 Wall Plate Input 8	# M001 F001 SR4 24 U \r\n
ZoneInputRouting Zone 5 Direct Input 1	# M001 F001 SR5 1 U \r\n
ZoneInputRouting Zone 5 Direct Input 2	# M001 F001 SR5 2 U \r\n
ZoneInputRouting Zone 5 Direct Input 3	# M001 F001 SR5 3 U \r\n
ZoneInputRouting Zone 5 Direct Input 4	# M001 F001 SR5 4 U \r\n
ZoneInputRouting Zone 5 Direct Input 5	# M001 F001 SR5 5 U \r\n
ZoneInputRouting Zone 5 Direct Input 6	# M001 F001 SR5 6 U \r\n
ZoneInputRouting Zone 5 Direct Input 7	# M001 F001 SR5 7 U \r\n
ZoneInputRouting Zone 5 Direct Input 8	# M001 F001 SR5 8 U \r\n
ZoneInputRouting Zone 5 Direct Input 9	# M001 F001 SR5 9 U \r\n
ZoneInputRouting Zone 5 Fiber Input 1	# M001 F001 SR5 25 U \r\n
ZoneInputRouting Zone 5 Fiber Input 2	# M001 F001 SR5 26 U \r\n
ZoneInputRouting Zone 5 Fiber Input 3	# M001 F001 SR5 27 U \r\n
ZoneInputRouting Zone 5 Fiber Input 4	# M001 F001 SR5 28 U \r\n
ZoneInputRouting Zone 5 Fiber Input 5	# M001 F001 SR5 29 U \r\n
ZoneInputRouting Zone 5 Fiber Input 6	# M001 F001 SR5 30 U \r\n
ZoneInputRouting Zone 5 Fiber Input 7	# M001 F001 SR5 31 U \r\n
ZoneInputRouting Zone 5 Fiber Input 8	# M001 F001 SR5 32 U \r\n
ZoneInputRouting Zone 5 Internal pink noise generator	# M001 F001 SR5 16 U \r\n
ZoneInputRouting Zone 5 Internal sine generator	# M001 F001 SR5 14 U \r\n
ZoneInputRouting Zone 5 Internal white noise generator	# M001 F001 SR5 15 U \r\n
ZoneInputRouting Zone 5 Prio 1	# M001 F001 SR5 12 U \r\n
ZoneInputRouting Zone 5 Prio 2	# M001 F001 SR5 13 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 1	# M001 F001 SR5 17 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 2	# M001 F001 SR5 18 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 3	# M001 F001 SR5 19 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 4	# M001 F001 SR5 20 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 5	# M001 F001 SR5 21 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 6	# M001 F001 SR5 22 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 7	# M001 F001 SR5 23 U \r\n
ZoneInputRouting Zone 5 Wall Plate Input 8	# M001 F001 SR5 24 U \r\n
ZoneInputRouting Zone 6 Direct Input 1	# M001 F001 SR6 1 U \r\n
ZoneInputRouting Zone 6 Direct Input 2	# M001 F001 SR6 2 U \r\n
ZoneInputRouting Zone 6 Direct Input 3	# M001 F001 SR6 3 U \r\n
ZoneInputRouting Zone 6 Direct Input 4	# M001 F001 SR6 4 U \r\n
ZoneInputRouting Zone 6 Direct Input 5	# M001 F001 SR6 5 U \r\n
ZoneInputRouting Zone 6 Direct Input 6	# M001 F001 SR6 6 U \r\n
ZoneInputRouting Zone 6 Direct Input 7	# M001 F001 SR6 7 U \r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone 6 Direct Input 8	# M001 F001 SR6 8 U r\n
ZoneInputRouting Zone 6 Direct Input 9	# M001 F001 SR6 9 U r\n
ZoneInputRouting Zone 6 Fiber Input 1	# M001 F001 SR6 25 U r\n
ZoneInputRouting Zone 6 Fiber Input 2	# M001 F001 SR6 26 U r\n
ZoneInputRouting Zone 6 Fiber Input 3	# M001 F001 SR6 27 U r\n
ZoneInputRouting Zone 6 Fiber Input 4	# M001 F001 SR6 28 U r\n
ZoneInputRouting Zone 6 Fiber Input 5	# M001 F001 SR6 29 U r\n
ZoneInputRouting Zone 6 Fiber Input 6	# M001 F001 SR6 30 U r\n
ZoneInputRouting Zone 6 Fiber Input 7	# M001 F001 SR6 31 U r\n
ZoneInputRouting Zone 6 Fiber Input 8	# M001 F001 SR6 32 U r\n
ZoneInputRouting Zone 6 Internal pink noise generator	# M001 F001 SR6 16 U r\n
ZoneInputRouting Zone 6 Internal sine generator	# M001 F001 SR6 14 U r\n
ZoneInputRouting Zone 6 Internal white noise generator	# M001 F001 SR6 15 U r\n
ZoneInputRouting Zone 6 Prio 1	# M001 F001 SR6 12 U r\n
ZoneInputRouting Zone 6 Prio 2	# M001 F001 SR6 13 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 1	# M001 F001 SR6 17 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 2	# M001 F001 SR6 18 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 3	# M001 F001 SR6 19 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 4	# M001 F001 SR6 20 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 5	# M001 F001 SR6 21 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 6	# M001 F001 SR6 22 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 7	# M001 F001 SR6 23 U r\n
ZoneInputRouting Zone 6 Wall Plate Input 8	# M001 F001 SR6 24 U r\n
ZoneInputRouting Zone 7 Direct Input 1	# M001 F001 SR7 1 U r\n
ZoneInputRouting Zone 7 Direct Input 2	# M001 F001 SR7 2 U r\n
ZoneInputRouting Zone 7 Direct Input 3	# M001 F001 SR7 3 U r\n
ZoneInputRouting Zone 7 Direct Input 4	# M001 F001 SR7 4 U r\n
ZoneInputRouting Zone 7 Direct Input 5	# M001 F001 SR7 5 U r\n
ZoneInputRouting Zone 7 Direct Input 6	# M001 F001 SR7 6 U r\n
ZoneInputRouting Zone 7 Direct Input 7	# M001 F001 SR7 7 U r\n
ZoneInputRouting Zone 7 Direct Input 8	# M001 F001 SR7 8 U r\n
ZoneInputRouting Zone 7 Direct Input 9	# M001 F001 SR7 9 U r\n
ZoneInputRouting Zone 7 Fiber Input 1	# M001 F001 SR7 25 U r\n
ZoneInputRouting Zone 7 Fiber Input 2	# M001 F001 SR7 26 U r\n
ZoneInputRouting Zone 7 Fiber Input 3	# M001 F001 SR7 27 U r\n
ZoneInputRouting Zone 7 Fiber Input 4	# M001 F001 SR7 28 U r\n
ZoneInputRouting Zone 7 Fiber Input 5	# M001 F001 SR7 29 U r\n
ZoneInputRouting Zone 7 Fiber Input 6	# M001 F001 SR7 30 U r\n
ZoneInputRouting Zone 7 Fiber Input 7	# M001 F001 SR7 31 U r\n
ZoneInputRouting Zone 7 Fiber Input 8	# M001 F001 SR7 32 U r\n
ZoneInputRouting Zone 7 Internal pink noise generator	# M001 F001 SR7 16 U r\n
ZoneInputRouting Zone 7 Internal sine generator	# M001 F001 SR7 14 U r\n
ZoneInputRouting Zone 7 Internal white noise generator	# M001 F001 SR7 15 U r\n
ZoneInputRouting Zone 7 Prio 1	# M001 F001 SR7 12 U r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone 7 Prio 2	# M001 F001 SR7 13 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 1	# M001 F001 SR7 17 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 2	# M001 F001 SR7 18 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 3	# M001 F001 SR7 19 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 4	# M001 F001 SR7 20 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 5	# M001 F001 SR7 21 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 6	# M001 F001 SR7 22 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 7	# M001 F001 SR7 23 U r\n
ZoneInputRouting Zone 7 Wall Plate Input 8	# M001 F001 SR7 24 U r\n
ZoneInputRouting Zone 8 Direct Input 1	# M001 F001 SR8 1 U r\n
ZoneInputRouting Zone 8 Direct Input 2	# M001 F001 SR8 2 U r\n
ZoneInputRouting Zone 8 Direct Input 3	# M001 F001 SR8 3 U r\n
ZoneInputRouting Zone 8 Direct Input 4	# M001 F001 SR8 4 U r\n
ZoneInputRouting Zone 8 Direct Input 5	# M001 F001 SR8 5 U r\n
ZoneInputRouting Zone 8 Direct Input 6	# M001 F001 SR8 6 U r\n
ZoneInputRouting Zone 8 Direct Input 7	# M001 F001 SR8 7 U r\n
ZoneInputRouting Zone 8 Direct Input 8	# M001 F001 SR8 8 U r\n
ZoneInputRouting Zone 8 Direct Input 9	# M001 F001 SR8 9 U r\n
ZoneInputRouting Zone 8 Fiber Input 1	# M001 F001 SR8 25 U r\n
ZoneInputRouting Zone 8 Fiber Input 2	# M001 F001 SR8 26 U r\n
ZoneInputRouting Zone 8 Fiber Input 3	# M001 F001 SR8 27 U r\n
ZoneInputRouting Zone 8 Fiber Input 4	# M001 F001 SR8 28 U r\n
ZoneInputRouting Zone 8 Fiber Input 5	# M001 F001 SR8 29 U r\n
ZoneInputRouting Zone 8 Fiber Input 6	# M001 F001 SR8 30 U r\n
ZoneInputRouting Zone 8 Fiber Input 7	# M001 F001 SR8 31 U r\n
ZoneInputRouting Zone 8 Fiber Input 8	# M001 F001 SR8 32 U r\n
ZoneInputRouting Zone 8 Internal pink noise generator	# M001 F001 SR8 16 U r\n
ZoneInputRouting Zone 8 Internal sine generator	# M001 F001 SR8 14 U r\n
ZoneInputRouting Zone 8 Internal white noise generator	# M001 F001 SR8 15 U r\n
ZoneInputRouting Zone 8 Prio 1	# M001 F001 SR8 12 U r\n
ZoneInputRouting Zone 8 Prio 2	# M001 F001 SR8 13 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 1	# M001 F001 SR8 17 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 2	# M001 F001 SR8 18 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 3	# M001 F001 SR8 19 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 4	# M001 F001 SR8 20 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 5	# M001 F001 SR8 21 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 6	# M001 F001 SR8 22 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 7	# M001 F001 SR8 23 U r\n
ZoneInputRouting Zone 8 Wall Plate Input 8	# M001 F001 SR8 24 U r\n
ZoneInputRouting Zone All Direct Input 1	# M001 F001 SRALL 1^1^1^1^1^1^1^1 U r\n
ZoneInputRouting Zone All Direct Input 2	# M001 F001 SRALL 2^2^2^2^2^2^2^2 U r\n
ZoneInputRouting Zone All Direct Input 3	# M001 F001 SRALL 3^3^3^3^3^3^3^3 U r\n
ZoneInputRouting Zone All Direct Input 4	# M001 F001 SRALL 4^4^4^4^4^4^4^4 U r\n
ZoneInputRouting Zone All Direct Input 5	# M001 F001 SRALL 5^5^5^5^5^5^5^5 U r\n
ZoneInputRouting Zone All Direct Input 6	# M001 F001 SRALL 6^6^6^6^6^6^6^6 U r\n
ZoneInputRouting Zone All Direct Input 7	# M001 F001 SRALL 7^7^7^7^7^7^7^7 U r\n

Global Scripter Module Communication Sheet

ZoneInputRouting Zone All Direct Input 8	# M001 F001 SRALL 8^8^8^8^8^8^8^8 U \r\n
ZoneInputRouting Zone All Direct Input 9	# M001 F001 SRALL 9^9^9^9^9^9^9^9 U \r\n
ZoneInputRouting Zone All Fiber Input 1	# M001 F001 SRALL 25^25^25^25^25^25^25^25 U \r\n
ZoneInputRouting Zone All Fiber Input 2	# M001 F001 SRALL 26^26^26^26^26^26^26^26 U \r\n
ZoneInputRouting Zone All Fiber Input 3	# M001 F001 SRALL 27^27^27^27^27^27^27^27 U \r\n
ZoneInputRouting Zone All Fiber Input 4	# M001 F001 SRALL 28^28^28^28^28^28^28^28 U \r\n
ZoneInputRouting Zone All Fiber Input 5	# M001 F001 SRALL 29^29^29^29^29^29^29^29 U \r\n
ZoneInputRouting Zone All Fiber Input 6	# M001 F001 SRALL 30^30^30^30^30^30^30^30 U \r\n
ZoneInputRouting Zone All Fiber Input 7	# M001 F001 SRALL 31^31^31^31^31^31^31^31 U \r\n
ZoneInputRouting Zone All Fiber Input 8	# M001 F001 SRALL 32^32^32^32^32^32^32^32 U \r\n
ZoneInputRouting Zone All Internal pink noise generator	# M001 F001 SRALL 16^16^16^16^16^16^16^16 U \r\n
ZoneInputRouting Zone All Internal sine generator	# M001 F001 SRALL 14^14^14^14^14^14^14^14 U \r\n
ZoneInputRouting Zone All Internal white noise generator	# M001 F001 SRALL 15^15^15^15^15^15^15^15 U \r\n
ZoneInputRouting Zone All Prio 1	# M001 F001 SRALL 12^12^12^12^12^12^12^12 U \r\n
ZoneInputRouting Zone All Prio 2	# M001 F001 SRALL 13^13^13^13^13^13^13^13 U \r\n
ZoneInputRouting Zone All Wall Plate Input 1	# M001 F001 SRALL 17^17^17^17^17^17^17^17 U \r\n
ZoneInputRouting Zone All Wall Plate Input 2	# M001 F001 SRALL 18^18^18^18^18^18^18^18 U \r\n
ZoneInputRouting Zone All Wall Plate Input 3	# M001 F001 SRALL 19^19^19^19^19^19^19^19 U \r\n
ZoneInputRouting Zone All Wall Plate Input 4	# M001 F001 SRALL 20^20^20^20^20^20^20^20 U \r\n
ZoneInputRouting Zone All Wall Plate Input 5	# M001 F001 SRALL 21^21^21^21^21^21^21^21 U \r\n
ZoneInputRouting Zone All Wall Plate Input 6	# M001 F001 SRALL 22^22^22^22^22^22^22^22 U \r\n
ZoneInputRouting Zone All Wall Plate Input 7	# M001 F001 SRALL 23^23^23^23^23^23^23^23 U \r\n
ZoneInputRouting Zone All Wall Plate Input 8	# M001 F001 SRALL 24^24^24^24^24^24^24^24 U \r\n
ZoneMute Zone 1 Off	# M001 F001 SM1 0 U \r\n
ZoneMute Zone 1 On	# M001 F001 SM1 1 U \r\n
ZoneMute Zone 2 Off	# M001 F001 SM2 0 U \r\n
ZoneMute Zone 2 On	# M001 F001 SM2 1 U \r\n
ZoneMute Zone 3 Off	# M001 F001 SM3 0 U \r\n
ZoneMute Zone 3 On	# M001 F001 SM3 1 U \r\n
ZoneMute Zone 4 Off	# M001 F001 SM4 0 U \r\n
ZoneMute Zone 4 On	# M001 F001 SM4 1 U \r\n
ZoneMute Zone 5 Off	# M001 F001 SM5 0 U \r\n
ZoneMute Zone 5 On	# M001 F001 SM5 1 U \r\n
ZoneMute Zone 6 Off	# M001 F001 SM6 0 U \r\n
ZoneMute Zone 6 On	# M001 F001 SM6 1 U \r\n
ZoneMute Zone 7 Off	# M001 F001 SM7 0 U \r\n
ZoneMute Zone 7 On	# M001 F001 SM7 1 U \r\n
ZoneMute Zone 8 Off	# M001 F001 SM8 0 U \r\n
ZoneMute Zone 8 On	# M001 F001 SM8 1 U \r\n
ZoneMute Zone All Off	# M001 F001 SMALL 0^0^0^0^0^0^0^0 U \r\n
ZoneMute Zone All On	# M001 F001 SMALL 1^1^1^1^1^1^1^1 U \r\n
ZoneSceneRouting Zone 1 1	# M001 F001 SR1 51 U \r\n
ZoneSceneRouting Zone 1 2	# M001 F001 SR1 52 U \r\n
ZoneSceneRouting Zone 1 3	# M001 F001 SR1 53 U \r\n
ZoneSceneRouting Zone 1 4	# M001 F001 SR1 54 U \r\n
ZoneSceneRouting Zone 1 5	# M001 F001 SR1 55 U \r\n

Global Scripter Module Communication Sheet

ZoneSceneRouting Zone 1 6	# M001 F001 SR1 56 U r\n
ZoneSceneRouting Zone 1 7	# M001 F001 SR1 57 U r\n
ZoneSceneRouting Zone 1 8	# M001 F001 SR1 58 U r\n
ZoneSceneRouting Zone 2 1	# M001 F001 SR2 51 U r\n
ZoneSceneRouting Zone 2 2	# M001 F001 SR2 52 U r\n
ZoneSceneRouting Zone 2 3	# M001 F001 SR2 53 U r\n
ZoneSceneRouting Zone 2 4	# M001 F001 SR2 54 U r\n
ZoneSceneRouting Zone 2 5	# M001 F001 SR2 55 U r\n
ZoneSceneRouting Zone 2 6	# M001 F001 SR2 56 U r\n
ZoneSceneRouting Zone 2 7	# M001 F001 SR2 57 U r\n
ZoneSceneRouting Zone 2 8	# M001 F001 SR2 58 U r\n
ZoneSceneRouting Zone 3 1	# M001 F001 SR3 51 U r\n
ZoneSceneRouting Zone 3 2	# M001 F001 SR3 52 U r\n
ZoneSceneRouting Zone 3 3	# M001 F001 SR3 53 U r\n
ZoneSceneRouting Zone 3 4	# M001 F001 SR3 54 U r\n
ZoneSceneRouting Zone 3 5	# M001 F001 SR3 55 U r\n
ZoneSceneRouting Zone 3 6	# M001 F001 SR3 56 U r\n
ZoneSceneRouting Zone 3 7	# M001 F001 SR3 57 U r\n
ZoneSceneRouting Zone 3 8	# M001 F001 SR3 58 U r\n
ZoneSceneRouting Zone 4 1	# M001 F001 SR4 51 U r\n
ZoneSceneRouting Zone 4 2	# M001 F001 SR4 52 U r\n
ZoneSceneRouting Zone 4 3	# M001 F001 SR4 53 U r\n
ZoneSceneRouting Zone 4 4	# M001 F001 SR4 54 U r\n
ZoneSceneRouting Zone 4 5	# M001 F001 SR4 55 U r\n
ZoneSceneRouting Zone 4 6	# M001 F001 SR4 56 U r\n
ZoneSceneRouting Zone 4 7	# M001 F001 SR4 57 U r\n
ZoneSceneRouting Zone 4 8	# M001 F001 SR4 58 U r\n
ZoneSceneRouting Zone 5 1	# M001 F001 SR5 51 U r\n
ZoneSceneRouting Zone 5 2	# M001 F001 SR5 52 U r\n
ZoneSceneRouting Zone 5 3	# M001 F001 SR5 53 U r\n
ZoneSceneRouting Zone 5 4	# M001 F001 SR5 54 U r\n
ZoneSceneRouting Zone 5 5	# M001 F001 SR5 55 U r\n
ZoneSceneRouting Zone 5 6	# M001 F001 SR5 56 U r\n
ZoneSceneRouting Zone 5 7	# M001 F001 SR5 57 U r\n
ZoneSceneRouting Zone 5 8	# M001 F001 SR5 58 U r\n
ZoneSceneRouting Zone 6 1	# M001 F001 SR6 51 U r\n
ZoneSceneRouting Zone 6 2	# M001 F001 SR6 52 U r\n
ZoneSceneRouting Zone 6 3	# M001 F001 SR6 53 U r\n
ZoneSceneRouting Zone 6 4	# M001 F001 SR6 54 U r\n
ZoneSceneRouting Zone 6 5	# M001 F001 SR6 55 U r\n
ZoneSceneRouting Zone 6 6	# M001 F001 SR6 56 U r\n
ZoneSceneRouting Zone 6 7	# M001 F001 SR6 57 U r\n
ZoneSceneRouting Zone 6 8	# M001 F001 SR6 58 U r\n
ZoneSceneRouting Zone 7 1	# M001 F001 SR7 51 U r\n
ZoneSceneRouting Zone 7 2	# M001 F001 SR7 52 U r\n
ZoneSceneRouting Zone 7 3	# M001 F001 SR7 53 U r\n
ZoneSceneRouting Zone 7 4	# M001 F001 SR7 54 U r\n
ZoneSceneRouting Zone 7 5	# M001 F001 SR7 55 U r\n

Global Scripter Module Communication Sheet

ZoneSceneRouting Zone 7 6	# M001 F001 SR7 56 U \r\n
ZoneSceneRouting Zone 7 7	# M001 F001 SR7 57 U \r\n
ZoneSceneRouting Zone 7 8	# M001 F001 SR7 58 U \r\n
ZoneSceneRouting Zone 8 1	# M001 F001 SR8 51 U \r\n
ZoneSceneRouting Zone 8 2	# M001 F001 SR8 52 U \r\n
ZoneSceneRouting Zone 8 3	# M001 F001 SR8 53 U \r\n
ZoneSceneRouting Zone 8 4	# M001 F001 SR8 54 U \r\n
ZoneSceneRouting Zone 8 5	# M001 F001 SR8 55 U \r\n
ZoneSceneRouting Zone 8 6	# M001 F001 SR8 56 U \r\n
ZoneSceneRouting Zone 8 7	# M001 F001 SR8 57 U \r\n
ZoneSceneRouting Zone 8 8	# M001 F001 SR8 58 U \r\n
ZoneTreble Zone 1 9	# M001 F001 ST1 9 U \r\n
ZoneTreble Zone 1 -9	# M001 F001 ST1 -9 U \r\n
ZoneTreble Zone 2 9	# M001 F001 ST2 9 U \r\n
ZoneTreble Zone 2 -9	# M001 F001 ST2 -9 U \r\n
ZoneTreble Zone 3 9	# M001 F001 ST3 9 U \r\n
ZoneTreble Zone 3 -9	# M001 F001 ST3 -9 U \r\n
ZoneTreble Zone 4 9	# M001 F001 ST4 9 U \r\n
ZoneTreble Zone 4 -9	# M001 F001 ST4 -9 U \r\n
ZoneTreble Zone 5 9	# M001 F001 ST5 9 U \r\n
ZoneTreble Zone 5 -9	# M001 F001 ST5 -9 U \r\n
ZoneTreble Zone 6 9	# M001 F001 ST6 9 U \r\n
ZoneTreble Zone 6 -9	# M001 F001 ST6 -9 U \r\n
ZoneTreble Zone 7 9	# M001 F001 ST7 9 U \r\n
ZoneTreble Zone 7 -9	# M001 F001 ST7 -9 U \r\n
ZoneTreble Zone 8 9	# M001 F001 ST8 9 U \r\n
ZoneTreble Zone 8 -9	# M001 F001 ST8 -9 U \r\n
ZoneVolume Zone 1 0	# M001 F001 SV1 00 U \r\n
ZoneVolume Zone 1 -70	# M001 F001 SV1 70 U \r\n
ZoneVolume Zone 2 0	# M001 F001 SV2 00 U \r\n
ZoneVolume Zone 2 -70	# M001 F001 SV2 70 U \r\n
ZoneVolume Zone 3 0	# M001 F001 SV3 00 U \r\n
ZoneVolume Zone 3 -70	# M001 F001 SV3 70 U \r\n
ZoneVolume Zone 4 0	# M001 F001 SV4 00 U \r\n
ZoneVolume Zone 4 -70	# M001 F001 SV4 70 U \r\n
ZoneVolume Zone 5 0	# M001 F001 SV5 00 U \r\n
ZoneVolume Zone 5 -70	# M001 F001 SV5 70 U \r\n
ZoneVolume Zone 6 0	# M001 F001 SV6 00 U \r\n
ZoneVolume Zone 6 -70	# M001 F001 SV6 70 U \r\n
ZoneVolume Zone 7 0	# M001 F001 SV7 00 U \r\n
ZoneVolume Zone 7 -70	# M001 F001 SV7 70 U \r\n
ZoneVolume Zone 8 0	# M001 F001 SV8 00 U \r\n
ZoneVolume Zone 8 -70	# M001 F001 SV8 70 U \r\n
ZoneVolume Zone All 0	# M001 F001 SVALL 00^00^00^00^00^00^00 U \r\n
ZoneVolume Zone All -70	# M001 F001 SVALL 70^70^70^70^70^70^70 U \r\n

Appendix B. Query Commands

RequiredCommand	# M001 F001 GSV 0 U \r\n
ZoneBass Zone 1	# M001 F001 GB1 0 U \r\n
ZoneBass Zone 2	# M001 F001 GB2 0 U \r\n
ZoneBass Zone 3	# M001 F001 GB3 0 U \r\n
ZoneBass Zone 4	# M001 F001 GB4 0 U \r\n
ZoneBass Zone 5	# M001 F001 GB5 0 U \r\n
ZoneBass Zone 6	# M001 F001 GB6 0 U \r\n
ZoneBass Zone 7	# M001 F001 GB7 0 U \r\n
ZoneBass Zone 8	# M001 F001 GB8 0 U \r\n
ZoneInputRouting Zone 1	# M001 F001 GR1 0 U \r\n
ZoneInputRouting Zone 2	# M001 F001 GR2 0 U \r\n
ZoneInputRouting Zone 3	# M001 F001 GR3 0 U \r\n
ZoneInputRouting Zone 4	# M001 F001 GR4 0 U \r\n
ZoneInputRouting Zone 5	# M001 F001 GR5 0 U \r\n
ZoneInputRouting Zone 6	# M001 F001 GR6 0 U \r\n
ZoneInputRouting Zone 7	# M001 F001 GR7 0 U \r\n
ZoneInputRouting Zone 8	# M001 F001 GR8 0 U \r\n
ZoneMute Zone 1	# M001 F001 GM1 0 U \r\n
ZoneMute Zone 2	# M001 F001 GM2 0 U \r\n
ZoneMute Zone 3	# M001 F001 GM3 0 U \r\n
ZoneMute Zone 4	# M001 F001 GM4 0 U \r\n
ZoneMute Zone 5	# M001 F001 GM5 0 U \r\n
ZoneMute Zone 6	# M001 F001 GM6 0 U \r\n
ZoneMute Zone 7	# M001 F001 GM7 0 U \r\n
ZoneMute Zone 8	# M001 F001 GM8 0 U \r\n
ZoneTreble Zone 1	# M001 F001 GT1 0 U \r\n
ZoneTreble Zone 2	# M001 F001 GT2 0 U \r\n
ZoneTreble Zone 3	# M001 F001 GT3 0 U \r\n
ZoneTreble Zone 4	# M001 F001 GT4 0 U \r\n
ZoneTreble Zone 5	# M001 F001 GT5 0 U \r\n
ZoneTreble Zone 6	# M001 F001 GT6 0 U \r\n
ZoneTreble Zone 7	# M001 F001 GT7 0 U \r\n
ZoneTreble Zone 8	# M001 F001 GT8 0 U \r\n
ZoneVolume Zone 1	# M001 F001 GV1 0 U \r\n
ZoneVolume Zone 2	# M001 F001 GV2 0 U \r\n
ZoneVolume Zone 3	# M001 F001 GV3 0 U \r\n
ZoneVolume Zone 4	# M001 F001 GV4 0 U \r\n
ZoneVolume Zone 5	# M001 F001 GV5 0 U \r\n
ZoneVolume Zone 6	# M001 F001 GV6 0 U \r\n
ZoneVolume Zone 7	# M001 F001 GV7 0 U \r\n
ZoneVolume Zone 8	# M001 F001 GV8 0 U \r\n