

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Ad Notam
Firmware Version: N/A
Model(s): DFU22

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	11/9/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DFU22')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DFU22')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '4:3' 'Zoom 2'	Value '16:9'	Value 'Zoom 1'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command Input	Value 'HDMI 1' 'Component'	Value 'HDMI 2' 'DMP'	Value 'HDMI 3'
# Input example InterfaceName.Set('Input', 'HDMI 1')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Up' 'Right'	Value 'Down' 'OK/Info'	Value 'Left' 'Exit'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Mute	Value None		
# Mute example InterfaceName.Set('Mute', None)			
Command OnScreenDisplay	Value None		
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 'Up'	Value 'Down'	
# Volume example			

```
InterfaceName.Set('Volume', 'Up')
```

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)  
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'HDMI 1'	'HDMI 2'	'HDMI 3'
	'Component'	'DMP'	
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

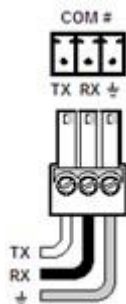

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

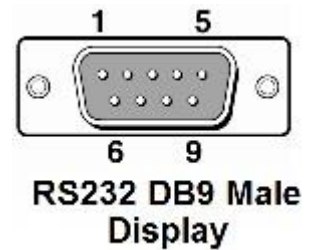

Appendix A. Set Commands

Aspect Ratio 16:9	\xBB\x00 \x02\x001S
Aspect Ratio 4:3	\xBB\x00 \x02\x000R
Aspect Ratio Zoom 1	\xBB\x00 \x02\x002T
Aspect Ratio Zoom 2	\xBB\x00 \x02\x003U
Input Component	\xBB\x00\x0B\x03\x1C\x00\x03-
Input DMP	\xBB\x00\x0B\x03\x1C\x00\x071
Input HDMI 1	\xBB\x00\x0B\x03\x1C\x00\x01+
Input HDMI 2	\xBB\x00\x0B\x03\x1C\x00\x00*
Input HDMI 3	\xBB\x00\x0B\x03\x1C\x00\x02,
Keypad 0	\xBB\x00 \x02\x00(J
Keypad 9	\xBB\x00 \x02\x00+M
Menu Navigation Down	\xBB\x00 \x02\x00\x02\$
Menu Navigation Exit	\xBB\x00 \x02\x00Hj
Menu Navigation Left	\xBB\x00 \x02\x00\x00"
Menu Navigation OK/Info	\xBB\x00 \x02\x00\x03%
Menu Navigation Right	\xBB\x00 \x02\x00\x04&
Menu Navigation Up	\xBB\x00 \x02\x00\x01#
Mute None	\xBB\x00 \x02\x00\x06(
On Screen Display None	\xBB\x00 \x02\x00\x05'
Power Off	\xBB\x00\x1F\x01\x01!
Power On	\xBB\x00\x1F\x01\x00
Volume Down	\xBB\x00 \x02\x00\x00"
Volume Up	\xBB\x00 \x02\x00\x04&

Appendix B. Query Commands

Input	\xBB\x00 \x02\x00~\xA0
Power	\xBB\x00 \x02\x00\x7F\xA1