

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Albiral Display Solutions
Firmware Version: N/A
Model(s): ALB12MR, ALB12WMR, ALB15MR, ALB15HDMR, ALB17MR, ALB17HDMR, ALB19HDMR, ALB22HDMR

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_0_0	10/8/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='ALB12MR')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='ALB12MR')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AutoConfig	Value None		
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	Qualifier Value 'Broadcast'	
# AutoConfig example InterfaceName.Set('AutoConfig', None, {'Device ID': 'Broadcast'})			
Command ButtonLock	Value 'On'		Value 'Off'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	Qualifier Value 'Broadcast'	
# ButtonLock example InterfaceName.Set('ButtonLock', 'On', {'Device ID': 'Broadcast'})			
Command Input	Value 'DVI A'	Value 'DVI 1'	Value 'DVI 2'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	Qualifier Value 'Broadcast'	
# Input example InterfaceName.Set('Input', 'DVI A', {'Device ID': 'Broadcast'})			
Command Position	Value 'Up'		Value 'Down'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	Qualifier Value 'Broadcast'	
# Position example InterfaceName.Set('Position', 'Up', {'Device ID': 'Broadcast'})			
Command Power	Value 'On'		Value 'Off'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	Qualifier Value 'Broadcast'	
# Power example InterfaceName.Set('Power', 'On', {'Device ID': 'Broadcast'})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ButtonLock ¹	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Device ID'	'1' – '30'		
# ButtonLock examples Interface.Update('ButtonLock', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('ButtonLock', {'Device ID': '1'}) InterfaceName.SubscribeStatus('ButtonLock', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
DeviceStatus ¹	'Normal'	'System Failure'	
Qualifier Key	Qualifier Value		
'Device ID'	'1' – '30'		
# DeviceStatus examples Interface.Update('DeviceStatus', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('DeviceStatus', {'Device ID': '1'}) InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input ¹	'DVI A'	'DVI 1'	'DVI 2'
Qualifier Key	Qualifier Value		
'Device ID'	'1' – '30'		
# Input examples Interface.Update('Input', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Input', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 10/8/2018

Command Position ¹	Value 'Up'	Value 'Down'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	
<pre># Position examples Interface.Update('Position', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Position', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Position', None, FeedbackHandler)</pre>		
Command Power ¹	Value 'On'	Value 'Off'
Qualifier Key 'Device ID'	Qualifier Value '1' – '30'	
<pre># Power examples InterfaceName.Update('Power', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Power', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		

¹ Calling Update method with one of these commands will also provide statuses for the other commands with this superscript.

Cable and Adapter Requirements

Captive Screw to RJ45 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-422

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

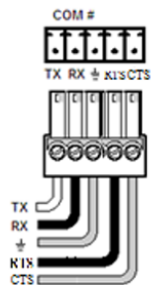

Signal	Main Cable	Pin	Signal
Tx- (Tx)	→	6	Rx-
Rx- (Rx)	←	2	Tx-
GND	→	8	GND
Tx+ (RTS)	→	3	Rx+
Rx+ (CTS)	←	1	Tx+

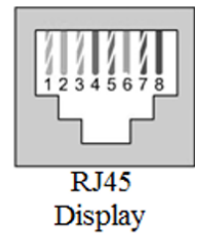

Appendix A. Set Commands

Auto Config None Device ID 1	\xFA\x01\x05\x00\x00
Auto Config None Device ID 9	\xFA\x09\x05\x00\x00
Button Lock Off Device ID 1	\xFA\x01\x04\x00\x00
Button Lock Off Device ID 9	\xFA\x09\x04\x00\x00
Button Lock On Device ID 1	\xFA\x01\x04\x01\x00
Button Lock On Device ID 9	\xFA\x09\x04\x01\x00
Input DVI 1 Device ID 1	\xFA\x01\x03\x00\x00
Input DVI 1 Device ID 9	\xFA\x09\x03\x00\x00
Input DVI 2 Device ID 1	\xFA\x01\x03\x03\x00
Input DVI 2 Device ID 9	\xFA\x09\x03\x03\x00
Input DVI A Device ID 1	\xFA\x01\x03\x01\x00
Input DVI A Device ID 9	\xFA\x09\x03\x01\x00
Position Down Device ID 1	\xFA\x01\x01\x00\x00
Position Down Device ID 9	\xFA\x09\x01\x00\x00
Position Up Device ID 1	\xFA\x01\x01\x01\x00
Position Up Device ID 9	\xFA\x09\x01\x01\x00
Power Off Device ID 1	\xFA\x01\x02\x00\x00
Power Off Device ID 9	\xFA\x09\x02\x00\x00
Power On Device ID 1	\xFA\x01\x02\x01\x00
Power On Device ID 9	\xFA\x09\x02\x01\x00

Appendix B. Update Commands

Button Lock Device ID 1	\xFA\x01\x14\x00\x00
Button Lock Device ID 9	\xFA\x09\x14\x00\x00
Device Status Device ID 1	\xFA\x01\x14\x00\x00
Device Status Device ID 9	\xFA\x09\x14\x00\x00
Input Device ID 1	\xFA\x01\x14\x00\x00
Input Device ID 9	\xFA\x09\x14\x00\x00
Position Device ID 1	\xFA\x01\x14\x00\x00
Position Device ID 9	\xFA\x09\x14\x00\x00
Power Device ID 1	\xFA\x01\x14\x00\x00
Power Device ID 9	\xFA\x09\x14\x00\x00