

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: AdvanTech
Firmware Version: N/A
Model(s): ADAM-4069

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	7/18/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- ModuleAddress variable must be set accordingly. Default value is '1'. ModuleAddress ranges from 0' to '255'.
Example: `InterfaceName.ModuleAddress = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='ADAM-4069')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='ADAM-4069')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	
ConfigurationCommand	None	
Qualifier Key	Qualifier Value	
'New Address'	0 to 255 in steps of 1	
Qualifier Key	Qualifier Value	
'Baud Rate'	'1200' – '115200'	
Qualifier Key	Qualifier Value	Qualifier Value
'Checksum'	'Enable'	'Disable'
# ConfigurationCommand example InterfaceName.Set('ConfigurationCommand', None, {'New Address': 255, 'Baud Rate': '1', 'Checksum': 'Enable'})		
Command	Value	Value
DigitalOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'0' – '7'	
# DigitalOutput example InterfaceName.Set('DigitalOutput', 'On', {'Channel': '0'})		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
DigitalOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'0' – '7'	
# DigitalOutput example InterfaceName.Update('DigitalOutput', {'Channel': '0'}) Value = InterfaceName.ReadStatus('DigitalOutput', {'Channel': '0'}) InterfaceName.SubscribeStatus('DigitalOutput', None, FeedbackHandler)		
Command	Value	
FirmwareVersion	'String'	
# FirmwareVersion example InterfaceName.Update('FirmwareVersion') Value = InterfaceName.ReadStatus('FirmwareVersion') InterfaceName.SubscribeStatus('FirmwareVersion', None, FeedbackHandler)		
Command	Value	Value
LowerPowerModeStatus	'On'	'Off'
# LowerPowerModeStatus example InterfaceName.Update('LowerPowerModeStatus') Value = InterfaceName.ReadStatus('LowerPowerModeStatus') InterfaceName.SubscribeStatus('LowerPowerModeStatus', None, FeedbackHandler)		

Cable and Adapter Requirements

Please contact manufacturer for cable and adapter requirement

Notes for the Device

Serial communication

Port Type: RS-485

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

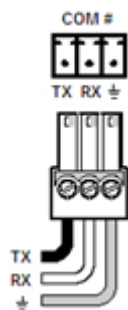

Please contact manufacturer for pin assignments diagram.

Appendix A. Set Commands

Configuration Command None New Address 0 Checksum Disable Baud Rate 115200	%0100400A00\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 1200	%0100400300\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 19200	%0100400700\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 2400	%0100400400\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 38400	%0100400800\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 4800	%0100400500\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 57600	%0100400900\x0D
Configuration Command None New Address 0 Checksum Disable Baud Rate 9600	%0100400600\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 115200	%0100400A40\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 1200	%0100400340\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 19200	%0100400740\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 2400	%0100400440\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 38400	%0100400840\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 4800	%0100400540\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 57600	%0100400940\x0D
Configuration Command None New Address 0 Checksum Enable Baud Rate 9600	%0100400640\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 115200	%01FF400A00\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 1200	%01FF400300\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 19200	%01FF400700\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 2400	%01FF400400\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 38400	%01FF400800\x0D
Configuration Command None New Address 255 Checksum Disable Baud Rate 4800	%01FF400500\x0D
Configuration Command None New Address 255	%01FF400900\x0D

Checksum Disable Baud Rate 57600	
Configuration Command None New Address 255 Checksum Disable Baud Rate 9600	%01FF400600\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 115200	%01FF400A40\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 1200	%01FF400340\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 19200	%01FF400740\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 2400	%01FF400440\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 38400	%01FF400840\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 4800	%01FF400540\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 57600	%01FF400940\x0D
Configuration Command None New Address 255 Checksum Enable Baud Rate 9600	%01FF400640\x0D
Digital Output Off Channel 0	#010000\x0D
Digital Output Off Channel 7	#010700\x0D
Digital Output On Channel 0	#010001\x0D
Digital Output On Channel 7	#010701\x0D

Appendix B. Update Commands

Digital Output Channel 0	\$016\x0D
Digital Output Channel 7	\$016\x0D
Firmware Version	\$01F\x0D
Lower Power Mode Status	\$01P\x0D