

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: AdvanTech
Firmware Version: N/A
Model(s): ADAM-4069

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0000-b002	2.3.1

Version History

Module Version	Date	Notes
1_2_0_0	8/27/2019	Added Module ID to Digital Output and Configuration Command. Removed Module Address driver parameter. Removed unsupported commands: Connection Status, Firmware Version and Lower Power Mode Status.
1_0_0_0	7/18/2019	Initial Version

Module Notes

N/A

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='ADAM-4069')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='ADAM-4069')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	
ConfigurationCommand	None	
Qualifier Key	Qualifier Value	
'Module ID'	'0' – '255'	
Qualifier Key	Qualifier Value	
'New Module ID'	'0' – '255'	
Qualifier Key	Qualifier Value	
'Baud Rate'	'1200' – '115200'	
Qualifier Key	Qualifier Value	Qualifier Value
'Checksum'	'Enable'	'Disable'
# ConfigurationCommand example InterfaceName.Set('ConfigurationCommand', None, {'Module ID': '0', 'New Module ID': '0', 'Baud Rate': '1', 'Checksum': 'Enable'})		
Command	Value	Value
DigitalOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Module ID'	'0' – '255'	
Qualifier Key	Qualifier Value	
'Channel'	'0' – '7'	
# DigitalOutput example InterfaceName.Set('DigitalOutput', 'On', {'Module ID': '0', 'Channel': '0'})		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, and DigitalOutput do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
```

FeedbackHandler will be called when any qualifier gets a new status.

Command	Value	Value
DigitalOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Module ID'	'0' – '255'	
Qualifier Key	Qualifier Value	
'Channel'	'0' – '7'	
# DigitalOutput example Value = InterfaceName.ReadStatus('DigitalOutput', {'Module ID': '0', 'Channel': '0'}) InterfaceName.SubscribeStatus('DigitalOutput', None, FeedbackHandler)		

Cable and Adapter Requirements

Please contact manufacturer for cable and adapter requirement

Notes for the Device

Serial communication

Port Type: RS-485

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

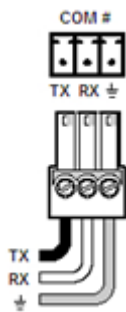

Please contact manufacturer for pin assignments diagram.

Appendix A. Set Commands

Configuration Command None Checksum Disable Baud Rate 115200 Module ID 0 New Module ID 0	%0000400A00\x0D
Configuration Command None Checksum Disable Baud Rate 115200 Module ID 0 New Module ID 255	%00FF400A00\x0D
Configuration Command None Checksum Disable Baud Rate 115200 Module ID 255 New Module ID 0	%FF00400A00\x0D
Configuration Command None Checksum Disable Baud Rate 115200 Module ID 255 New Module ID 255	%FFFF400A00\x0D
Configuration Command None Checksum Disable Baud Rate 1200 Module ID 0 New Module ID 0	%0000400300\x0D
Configuration Command None Checksum Disable Baud Rate 1200 Module ID 0 New Module ID 255	%00FF400300\x0D
Configuration Command None Checksum Disable Baud Rate 1200 Module ID 255 New Module ID 0	%FF00400300\x0D
Configuration Command None Checksum Disable Baud Rate 1200 Module ID 255 New Module ID 255	%FFFF400300\x0D
Configuration Command None Checksum Disable Baud Rate 19200 Module ID 0 New Module ID 0	%0000400700\x0D
Configuration Command None Checksum Disable Baud Rate 19200 Module ID 0 New Module ID 255	%00FF400700\x0D
Configuration Command None Checksum Disable Baud Rate 19200 Module ID 255 New Module ID 0	%FF00400700\x0D
Configuration Command None Checksum Disable Baud Rate 19200 Module ID 255 New Module ID 255	%FFFF400700\x0D
Configuration Command None Checksum Disable Baud Rate 2400 Module ID 0 New Module ID 0	%0000400400\x0D
Configuration Command None Checksum Disable Baud Rate 2400 Module ID 0 New Module ID 255	%00FF400400\x0D
Configuration Command None Checksum Disable Baud Rate 2400 Module ID 255 New Module ID 0	%FF00400400\x0D
Configuration Command None Checksum Disable Baud Rate 2400 Module ID 255 New Module ID 255	%FFFF400400\x0D
Configuration Command None Checksum Disable Baud Rate 38400 Module ID 0 New Module ID 0	%0000400800\x0D
Configuration Command None Checksum Disable Baud Rate 38400 Module ID 0 New Module ID 255	%00FF400800\x0D
Configuration Command None Checksum Disable Baud Rate 38400 Module ID 255 New Module ID 0	%FF00400800\x0D
Configuration Command None Checksum Disable Baud Rate 38400 Module ID 255 New Module ID 255	%FFFF400800\x0D
Configuration Command None Checksum Disable Baud Rate 4800 Module ID 0 New Module ID 0	%0000400500\x0D
Configuration Command None Checksum Disable Baud Rate 4800 Module ID 0 New Module ID 255	%00FF400500\x0D
Configuration Command None Checksum Disable	%FF00400500\x0D

Global Scriptor Module Communication Sheet

Baud Rate 4800 Module ID 255 New Module ID 0	
Configuration Command None Checksum Disable Baud Rate 4800 Module ID 255 New Module ID 255	%FFFF400500\x0D
Configuration Command None Checksum Disable Baud Rate 57600 Module ID 0 New Module ID 0	%0000400900\x0D
Configuration Command None Checksum Disable Baud Rate 57600 Module ID 0 New Module ID 255	%00FF400900\x0D
Configuration Command None Checksum Disable Baud Rate 57600 Module ID 255 New Module ID 0	%FF00400900\x0D
Configuration Command None Checksum Disable Baud Rate 57600 Module ID 255 New Module ID 255	%FFFF400900\x0D
Configuration Command None Checksum Disable Baud Rate 9600 Module ID 0 New Module ID 0	%0000400600\x0D
Configuration Command None Checksum Disable Baud Rate 9600 Module ID 0 New Module ID 255	%00FF400600\x0D
Configuration Command None Checksum Disable Baud Rate 9600 Module ID 255 New Module ID 0	%FF00400600\x0D
Configuration Command None Checksum Disable Baud Rate 9600 Module ID 255 New Module ID 255	%FFFF400600\x0D
Configuration Command None Checksum Enable Baud Rate 115200 Module ID 0 New Module ID 0	%0000400A40\x0D
Configuration Command None Checksum Enable Baud Rate 115200 Module ID 0 New Module ID 255	%00FF400A40\x0D
Configuration Command None Checksum Enable Baud Rate 115200 Module ID 255 New Module ID 0	%FF00400A40\x0D
Configuration Command None Checksum Enable Baud Rate 115200 Module ID 255 New Module ID 255	%FFFF400A40\x0D
Configuration Command None Checksum Enable Baud Rate 1200 Module ID 0 New Module ID 0	%0000400340\x0D
Configuration Command None Checksum Enable Baud Rate 1200 Module ID 0 New Module ID 255	%00FF400340\x0D
Configuration Command None Checksum Enable Baud Rate 1200 Module ID 255 New Module ID 0	%FF00400340\x0D
Configuration Command None Checksum Enable Baud Rate 1200 Module ID 255 New Module ID 255	%FFFF400340\x0D
Configuration Command None Checksum Enable Baud Rate 19200 Module ID 0 New Module ID 0	%0000400740\x0D
Configuration Command None Checksum Enable Baud Rate 19200 Module ID 0 New Module ID 255	%00FF400740\x0D
Configuration Command None Checksum Enable Baud Rate 19200 Module ID 255 New Module ID 0	%FF00400740\x0D
Configuration Command None Checksum Enable Baud Rate 19200 Module ID 255 New Module ID 255	%FFFF400740\x0D
Configuration Command None Checksum Enable Baud Rate 2400 Module ID 0 New Module ID 0	%0000400440\x0D
Configuration Command None Checksum Enable	%00FF400440\x0D

Global Scriptor Module Communication Sheet

Baud Rate 2400 Module ID 0 New Module ID 255	
Configuration Command None Checksum Enable Baud Rate 2400 Module ID 255 New Module ID 0	%FF00400440\x0D
Configuration Command None Checksum Enable Baud Rate 2400 Module ID 255 New Module ID 255	%FFFF400440\x0D
Configuration Command None Checksum Enable Baud Rate 38400 Module ID 0 New Module ID 0	%0000400840\x0D
Configuration Command None Checksum Enable Baud Rate 38400 Module ID 0 New Module ID 255	%00FF400840\x0D
Configuration Command None Checksum Enable Baud Rate 38400 Module ID 255 New Module ID 0	%FF00400840\x0D
Configuration Command None Checksum Enable Baud Rate 38400 Module ID 255 New Module ID 255	%FFFF400840\x0D
Configuration Command None Checksum Enable Baud Rate 4800 Module ID 0 New Module ID 0	%0000400540\x0D
Configuration Command None Checksum Enable Baud Rate 4800 Module ID 0 New Module ID 255	%00FF400540\x0D
Configuration Command None Checksum Enable Baud Rate 4800 Module ID 255 New Module ID 0	%FF00400540\x0D
Configuration Command None Checksum Enable Baud Rate 4800 Module ID 255 New Module ID 255	%FFFF400540\x0D
Configuration Command None Checksum Enable Baud Rate 57600 Module ID 0 New Module ID 0	%0000400940\x0D
Configuration Command None Checksum Enable Baud Rate 57600 Module ID 0 New Module ID 255	%00FF400940\x0D
Configuration Command None Checksum Enable Baud Rate 57600 Module ID 255 New Module ID 0	%FF00400940\x0D
Configuration Command None Checksum Enable Baud Rate 57600 Module ID 255 New Module ID 255	%FFFF400940\x0D
Configuration Command None Checksum Enable Baud Rate 9600 Module ID 0 New Module ID 0	%0000400640\x0D
Configuration Command None Checksum Enable Baud Rate 9600 Module ID 0 New Module ID 255	%00FF400640\x0D
Configuration Command None Checksum Enable Baud Rate 9600 Module ID 255 New Module ID 0	%FF00400640\x0D
Configuration Command None Checksum Enable Baud Rate 9600 Module ID 255 New Module ID 255	%FFFF400640\x0D
Digital Output Off Module ID 0 Channel 0	#001000\x0D
Digital Output Off Module ID 0 Channel 7	#001700\x0D
Digital Output Off Module ID 255 Channel 0	#FF1000\x0D
Digital Output Off Module ID 255 Channel 7	#FF1700\x0D
Digital Output On Module ID 0 Channel 0	#001001\x0D
Digital Output On Module ID 0 Channel 7	#001701\x0D
Digital Output On Module ID 255 Channel 0	#FF1001\x0D
Digital Output On Module ID 255 Channel 7	#FF1701\x0D