

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Agile Display Solutions
Firmware Version: N/A
Model(s): JCD Monitor 70 XS

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_1_0	8/29/2019	Added Backlight and Backlight Brightness commands.
1_0_0_0	6/4/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='JCD Monitor 70 XS')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='JCD Monitor 70 XS')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='JCD Monitor 70 XS')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AspectRatio	'Full Screen'	'Pillar Box'	'Auto'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Full Screen')			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value		
AutoImage	None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value	Value	
Backlight	'Off'	'On'	
# Backlight example InterfaceName.Set('Backlight', 'Off')			
Command	Value		
BacklightBrightness	0 to 100 in steps of 1		
# BacklightBrightness example InterfaceName.Set('BacklightBrightness', 100)			
Command	Value	Value	Value
Input	'VGA'	'Digital DVI'	'HDMI'
	'DisplayPort'		
# Input example InterfaceName.Set('Input', 'VGA')			
Command	Value	Value	
KeyLock	'On'	'Off'	
# KeyLock example InterfaceName.Set('KeyLock', 'On')			
Command	Value	Value	Value
MenuNavigation	'Menu'	'Up'	'Down'
	'Left'	'Right'	'Enter'
	'Exit'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'Full Screen'	'Pillar Box'	'Auto'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
Backlight	'Off'	'On'	
# Backlight example InterfaceName.Update('Backlight') Value = InterfaceName.ReadStatus('Backlight') InterfaceName.SubscribeStatus('Backlight', None, FeedbackHandler)			
Command	Value		
BacklightBrightness	0 to 100 in steps of 1		
# BacklightBrightness example InterfaceName.Update('BacklightBrightness') Value = InterfaceName.ReadStatus('BacklightBrightness') InterfaceName.SubscribeStatus('BacklightBrightness', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'VGA'	'Digital DVI'	'HDMI'
	'DisplayPort'		
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
KeyLock	'On'	'Off'	
# KeyLock example			

Global Scripter Module Communication Sheet

<pre>InterfaceName.Update('KeyLock') Value = InterfaceName.ReadStatus('KeyLock') InterfaceName.SubscribeStatus('KeyLock', None, FeedbackHandler)</pre>		
Command	Value	Value
Power	'On'	'Off'
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command	Value	
Volume	0 to 100 in steps of 1	
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Contact manufacturer for cable and adapter requirements

Notes for the Device

For the driver to work, the “Wake Up From Sleep” setting needs to be set to “VGA, Digital, RS-232”

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

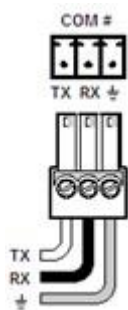

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

Contact manufacturer
for connector type

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Auto	\x07\x01\x02ASP\x04\x08
Aspect Ratio Full Screen	\x07\x01\x02ASP\x01\x08
Aspect Ratio Pillar Box	\x07\x01\x02ASP\x02\x08
Audio Mute Off	\x07\x01\x02MUT\x00\x08
Audio Mute On	\x07\x01\x02MUT\x01\x08
Auto Image None	\x07\x01\x02ADJ\x00\x08
Backlight Brightness 0	\x07\x01\x02BRI\x00\x08
Backlight Brightness 100	\x07\x01\x02BRId\x08
Backlight Off	\x07\x01\x02BLC\x00\x08
Backlight On	\x07\x01\x02BLC\x01\x08
Input Digital DVI	\x07\x01\x02MIN\x01\x08
Input DisplayPort	\x07\x01\x02MIN\x0D\x08
Input HDMI	\x07\x01\x02MIN\x09\x08
Input VGA	\x07\x01\x02MIN\x00\x08
Key Lock Off	\x07\x01\x02KLC\x00\x08
Key Lock On	\x07\x01\x02KLC\x01\x08
Menu Navigation Down	\x07\x01\x02RCU\x03\x08
Menu Navigation Enter	\x07\x01\x02RCU\x06\x08
Menu Navigation Exit	\x07\x01\x02RCU\x07\x08
Menu Navigation Left	\x07\x01\x02RCU\x04\x08
Menu Navigation Menu	\x07\x01\x02RCU\x00\x08
Menu Navigation Right	\x07\x01\x02RCU\x05\x08
Menu Navigation Up	\x07\x01\x02RCU\x02\x08
Power Off	\x07\x01\x02POW\x00\x08
Power On	\x07\x01\x02POW\x01\x08
Volume 0	\x07\x01\x02VOL\x00\x08
Volume 100	\x07\x01\x02VOLD\x08

Appendix B. Update Commands

Aspect Ratio	\x07\x01\x01ASP\x08
Audio Mute	\x07\x01\x01MUT\x08
Backlight	\x07\x01\x01BLC\x08
Backlight Brightness	\x07\x01\x01BRI\x08
Input	\x07\x01\x01MIN\x08
Key Lock	\x07\x01\x01KLC\x08
Power	\x07\x01\x01POW\x08
Volume	\x07\x01\x01VOL\x08

