
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Agile Display Solutions
Firmware Version: N/A
Model(s): XTRA SLIM 80" CE UL

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	10/16/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='XTRA SLIM 80" CE UL')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='XTRA SLIM 80" CE UL')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='XTRA SLIM 80" CE UL')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Full Screen'	Value 'Pillar Box'	Value 'Auto'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Full Screen')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Input	Value 'VGA' 'DisplayPort'	Value 'Digital DVI'	Value 'HDMI'
# Input example InterfaceName.Set('Input', 'VGA')			
Command KeyLock	Value 'On'	Value 'Off'	
# KeyLock example InterfaceName.Set('KeyLock', 'On')			
Command MenuNavigation	Value 'Menu' 'Left' 'Exit'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example			

```
InterfaceName.Set('Volume', 100)
```

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Full Screen'	Value 'Pillar Box'	Value 'Auto'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'DisplayPort'	Value 'Digital DVI'	Value 'HDMI'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command KeyLock	Value 'On'	Value 'Off'	
# KeyLock examples InterfaceName.Update('KeyLock') Value = InterfaceName.ReadStatus('KeyLock')			

Global Scripter Module Communication Sheet

InterfaceName.SubscribeStatus('KeyLock', None, FeedbackHandler)		
Command	Value	Value
Power	'On'	'Off'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command	Value	
Volume	0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Under the Advanced menu, the 'Wake Up From Sleep' setting should be set to 'VGA, Digital, RS-232' for the module to work properly.

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

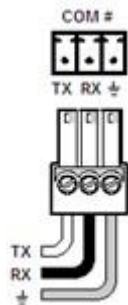

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

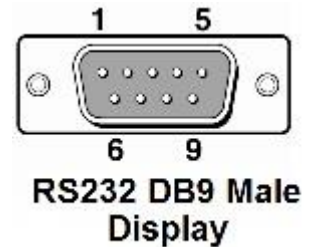

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Auto	\x07\x01\x02ASP\x04\x08
Aspect Ratio Full Screen	\x07\x01\x02ASP\x01\x08
Aspect Ratio Pillar Box	\x07\x01\x02ASP\x02\x08
Audio Mute Off	\x07\x01\x02MUT\x00\x08
Audio Mute On	\x07\x01\x02MUT\x01\x08
Auto Image None	\x07\x01\x02ADJ\x00\x08
Input Digital DVI	\x07\x01\x02MIN\x01\x08
Input DisplayPort	\x07\x01\x02MIN\x0D\x08
Input HDMI	\x07\x01\x02MIN\x09\x08
Input VGA	\x07\x01\x02MIN\x00\x08
Key Lock Off	\x07\x01\x02KLC\x00\x08
Key Lock On	\x07\x01\x02KLC\x01\x08
Menu Navigation Down	\x07\x01\x02RCU\x03\x08
Menu Navigation Enter	\x07\x01\x02RCU\x06\x08
Menu Navigation Exit	\x07\x01\x02RCU\x07\x08
Menu Navigation Left	\x07\x01\x02RCU\x04\x08
Menu Navigation Menu	\x07\x01\x02RCU\x00\x08
Menu Navigation Right	\x07\x01\x02RCU\x05\x08
Menu Navigation Up	\x07\x01\x02RCU\x02\x08
Power Off	\x07\x01\x02POW\x00\x08
Power On	\x07\x01\x02POW\x01\x08
Volume 0	\x07\x01\x02VOL\x00\x08
Volume 100	\x07\x01\x02VOLd\x08

Appendix B. Query Commands

Aspect Ratio	\x07\x01\x01ASP\x08
Audio Mute	\x07\x01\x01MUT\x08
Input	\x07\x01\x01MIN\x08
Key Lock	\x07\x01\x01KLC\x08
Power	\x07\x01\x01POW\x08
Volume	\x07\x01\x01VOL\x08