

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: AG Neovo
Firmware Version: N/A
Model(s): PM-65P

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	9/3/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to '255, and Broadcast. If Device ID is set to 'Broadcast', status is unavailable.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PM-65P')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PM-65P')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5000, Model='PM-65P')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '4:3' 'Wide Screen'	Value 'Custom' 'Movie Expand 16:9'	Value 'Unscaled' 'Auto'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command ExecutiveMode	Value 'Local Keyboard' 'Off'	Value 'Remote Control'	Value 'Local Keyboard & Remote Control'
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'Local Keyboard')			
Command Input	Value 'Video' 'HDMI 1' 'DVI-D' 'Network'	Value 'Component' 'HDMI 2' 'Card OPS'	Value 'VGA' 'DisplayPort' 'USB'
# Input example InterfaceName.Set('Input', 'Video')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Menu' 'Left' 'Return'	Value 'Up' 'Right' 'Info'	Value 'Down' 'Ok'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command Mute	Value None		
# Mute example InterfaceName.Set('Mute', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 60 in steps of 1		
# Volume example InterfaceName.Set('Volume', 60)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '4:3' 'Wide Screen'	Value 'Custom' 'Movie Expand 16:9'	Value 'Unscaled' 'Auto'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command ExecutiveMode	Value 'Local Keyboard' 'Off'	Value 'Remote Control'	Value 'Local Keyboard & Remote Control'
# ExecutiveMode example InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command Input	Value 'Video' 'HDMI 1' 'DVI-D' 'Network'	Value 'Component' 'HDMI 2' 'Card OPS' 'Unknown'	Value 'VGA' 'DisplayPort' 'USB'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value
Volume	0 to 60 in steps of 1
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

Captive Screw to 2.5mm Phone Jack RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

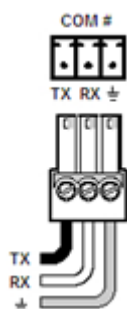

Signal	Main Cable	Pin	Signal
TxD		R	TxD
RxD		T	RxD
GND		S	GND

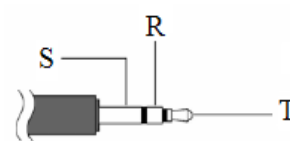

**RS232 Tip, Ring
and Sleeve**

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	5000
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 4:3	\xA6\x01\x00\x00\x00\x04\x01:\x00\x98
Aspect Ratio Auto	\xA6\x01\x00\x00\x00\x04\x01:\x05\x9D
Aspect Ratio Custom	\xA6\x01\x00\x00\x00\x04\x01:\x01\x99
Aspect Ratio Movie Expand 16:9	\xA6\x01\x00\x00\x00\x04\x01:\x04\x9C
Aspect Ratio Unscaled	\xA6\x01\x00\x00\x00\x04\x01:\x02\x9A
Aspect Ratio Wide Screen	\xA6\x01\x00\x00\x00\x04\x01:\x03\x9B
Auto Image None	\xA6\x01\x00\x00\x00\x05\x01p@\x00\x93
Executive Mode Local Keyboard	\xA6\x01\x00\x00\x00\x04\x01\x1C\x01\xBF
Executive Mode Local Keyboard & Remote Control	\xA6\x01\x00\x00\x00\x04\x01\x1C\x00\xBE
Executive Mode Off	\xA6\x01\x00\x00\x00\x04\x01\x1C\x03\xBD
Executive Mode Remote Control	\xA6\x01\x00\x00\x00\x04\x01\x1C\x02\xBC
Input Card OPS	\xA6\x01\x00\x00\x00\x07\x01\xAC\x08\x00\x00\x00\x05
Input Component	\xA6\x01\x00\x00\x00\x07\x01\xAC\x03\x00\x00\x00\x0E
Input DisplayPort	\xA6\x01\x00\x00\x00\x07\x01\xAC\x07\x01\x00\x00\x0B
Input DVI-D	\xA6\x01\x00\x00\x00\x07\x01\xAC\x09\x01\x00\x00\x05
Input HDMI 1	\xA6\x01\x00\x00\x00\x07\x01\xAC\x09\x00\x00\x00\x04
Input HDMI 2	\xA6\x01\x00\x00\x00\x07\x01\xAC\x05\x01\x00\x00\x09
Input Network	\xA6\x01\x00\x00\x00\x07\x01\xAC\x0A\x00\x00\x00\x07
Input USB	\xA6\x01\x00\x00\x00\x07\x01\xAC\x08\x01\x00\x00\x04
Input VGA	\xA6\x01\x00\x00\x00\x07\x01\xAC\x05\x00\x00\x00\x08
Input Video	\xA6\x01\x00\x00\x00\x07\x01\xAC\x01\x00\x00\x00\x0C
Keypad 0	\xA6\x01\x00\x00\x00\x04\x01\xFD\x00_
Keypad 9	\xA6\x01\x00\x00\x00\x04\x01\xFD\x09V
Menu Navigation Down	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA7\xF8
Menu Navigation Info	\xA6\x01\x00\x00\x00\x04\x01\xFD\xD2\x8D
Menu Navigation Left	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA8\xF7
Menu Navigation Menu	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA1\xFE
Menu Navigation Ok	\xA6\x01\x00\x00\x00\x04\x01\xFD\xB1\xEE
Menu Navigation Return	\xA6\x01\x00\x00\x00\x04\x01\xFD\xB2\xED
Menu Navigation Right	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA9\xF6
Menu Navigation Up	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA6\xF9
Mute None	\xA6\x01\x00\x00\x00\x04\x01\xFD\xA5\xFA
Power Off	\xA6\x01\x00\x00\x00\x04\x01\x18\x01\xBB
Power On	\xA6\x01\x00\x00\x00\x04\x01\x18\x02\xB8
Volume 0	\xA6\x01\x00\x00\x00\x04\x01D\x00\xE6
Volume 60	\xA6\x01\x00\x00\x00\x04\x01D<\xDA

Appendix B. Update Commands

Aspect Ratio	\xA6\x01\x00\x00\x00\x03\x01;\x9E
Executive Mode	\xA6\x01\x00\x00\x00\x03\x01\x1D\xB8
Input	\xA6\x01\x00\x00\x00\x03\x01\xAD\x08
Power	\xA6\x01\x00\x00\x00\x03\x01\x19\xBC
Volume	\xA6\x01\x00\x00\x00\x03\x01E\xE0