

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: DVR
 Manufacturer: AJA
 Firmware Version: N/A
 Model(s): Ki Pro, Ki Pro Rack

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0001-b006	1.4.2

Version History

Module Version	Date	Notes
1_0_1_0	3/8/2018	Added HTTP control.
1_0_0_0	12/8/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Ethernet only: If login credentials are required, deviceUsername and devicePassword must be set accordingly. devicePassword default value is password respectively.
Example: `InterfaceName.deviceUsername = 'admin'`
`InterfaceName.devicePassword = 'password'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Ki Pro')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Ki Pro')</code>
HTTPClass
<code>InterfaceName = ModuleName.HTTPClass('192.168.254.254', 80, 'admin', 'password', Model='Ki Pro')</code>

Set Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command MenuNavigation	Value 'Up' 'Right'	Value 'Down'	Value 'Left'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Transport	Value 'Play' 'Eject'	Value 'Stop' 'Fast Forward'	Value 'Record' 'Rewind'

Status Available (Serial)

N/A

Set Commands (Ethernet)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioInput	Value 'SDI' 'AES'	Value 'XLR'	Value 'HDMI'
# AudioInput example InterfaceName.Set('AudioInput', 'SDI')			
Command Input	Value 'SDI 1' 'SDI 2'	Value 'HDMI' 'CVBS on Y'	Value 'Component'
# Input example InterfaceName.Set('Input', 'SDI 1')			
Command LoopPlay	Value 'On'	Value 'Off'	
# LoopPlay example InterfaceName.Set('LoopPlay', 'On')			
Command PlayMedia	Value 'One'	Value 'All'	Value 'Playlist'
# PlayMedia example InterfaceName.Set('PlayMedia', 'One')			
Command PresetRecall	Value '1' – '20'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '20'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Transport	Value 'Play' 'Cue' 'Fast Reverse' 'Next Clip' 'Preroll'	Value 'Stop' 'Fast Forward' 'Single Step Forward' 'Previous Clip' 'Assemble Edit'	Value 'Record' 'Go To Idle' 'Single Step Reverse' 'Variable Speed Play' 'Record At System Time'

	'Shutdown'	'Play At System Time'
# Transport example InterfaceName.Set('Transport', 'Play')		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioInput	Value 'SDI' 'AES'	Value 'XLR'	Value 'HDMI'
# AudioInput examples InterfaceName.Update('AudioInput') Value = InterfaceName.ReadStatus('AudioInput') InterfaceName.SubscribeStatus('AudioInput', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command CurrentClip	Value 'String'		
# CurrentClip examples InterfaceName.Update('CurrentClip') Value = InterfaceName.ReadStatus('CurrentClip') InterfaceName.SubscribeStatus('CurrentClip', None, FeedbackHandler)			
Command CurrentPlaylist	Value 'String'		
# CurrentPlaylist examples InterfaceName.Update('CurrentPlaylist') Value = InterfaceName.ReadStatus('CurrentPlaylist') InterfaceName.SubscribeStatus('CurrentPlaylist', None, FeedbackHandler)			
Command Input	Value 'SDI 1' 'SDI 2'	Value 'HDMI' 'CVBS on Y'	Value 'Component'
# Input examples			

<pre>InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>			
Command LoopPlay	Value 'On'	Value 'Off'	
<pre># LoopPlay examples InterfaceName.Update('LoopPlay') Value = InterfaceName.ReadStatus('LoopPlay') InterfaceName.SubscribeStatus('LoopPlay', None, FeedbackHandler)</pre>			
Command MediaAvailable	Value 0 – 99		
<pre># MediaAvailable examples InterfaceName.Update('MediaAvailable') Value = InterfaceName.ReadStatus('MediaAvailable') InterfaceName.SubscribeStatus('MediaAvailable', None, FeedbackHandler)</pre>			
Command PlayMedia	Value 'One'	Value 'All'	Value 'Playlist'
<pre># PlayMedia examples InterfaceName.Update('PlayMedia') Value = InterfaceName.ReadStatus('PlayMedia') InterfaceName.SubscribeStatus('PlayMedia', None, FeedbackHandler)</pre>			
Command SystemState	Value 'Uninitialized' 'Initialized' 'Low Battery' 'Shutdown'	Value 'Initializing Config' 'Running' 'Shutdown Requested' 'Fatal Error'	Value 'Initializing Firmware' 'Power Save' 'Shutting Down'
<pre># SystemState examples InterfaceName.Update('SystemState') Value = InterfaceName.ReadStatus('SystemState') InterfaceName.SubscribeStatus('SystemState', None, FeedbackHandler)</pre>			
Command Timecode	Value 'String'		
<pre># Timecode examples InterfaceName.Update('Timecode') Value = InterfaceName.ReadStatus('Timecode') InterfaceName.SubscribeStatus('Timecode', None, FeedbackHandler)</pre>			
Command TransportState	Value 'Uninitialized' 'Playing Forward' 'Forward 8X' 'Playing Reverse' 'Reverse 8X'	Value 'Idle' 'Forward 2X' 'Forward 16X' 'Reverse 2X' 'Reverse 16X'	Value 'Recording' 'Forward 4X' 'Forward Step' 'Reverse 4X' 'Reverse Step'

Global Scripter Module Communication Sheet

	'Paused'	'Error in Idle'	'Error in Record'
	'Error in Play'	'Error in Pause'	'Shutdown'
<pre># TransportState examples InterfaceName.Update('TransportState') Value = InterfaceName.ReadStatus('TransportState') InterfaceName.SubscribeStatus('TransportState', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Male RS422 DB9 serial cable.

Notes for the Device

Serial communication

Port Type: RS-422

Baud Rate: 38400


Data Bits: 8

Parity: Odd


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

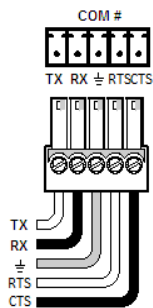

Signal	Main Cable	Pin	Signal
Tx-	→	2	Rx-
Rx-	←	8	Tx-
GND	→	4	GND
Tx+	→	7	Rx+
Rx+	←	3	Tx+

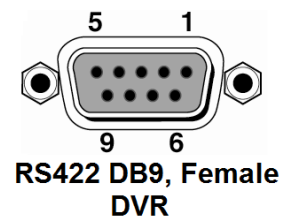

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet
Default Port:	80
Logon Credentials Supported:	Yes
Default Password:	password
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Menu Navigation Down	!#J\x8E
Menu Navigation Left	!#@ \x84
Menu Navigation Right	! \x13@t
Menu Navigation Up	! \x13J~
Transport Fast Forward	\x100
Transport Play	\x01!
Transport Record	\x02"
Transport Stop	\x00
Transport Eject	\x0F/
Transport Rewind	@