

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Matrix Switcher
Manufacturer: AJA
Firmware Version: N/A
Model(s): Kumo 1616, Kumo 3232, Kumo 1604, Kumo 6464

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_4_0	4/10/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

MatrixTieCommand	None
['Input']	'1' – '64'
['Output']	'1' – '64'

Status Available:

ConnectionStatus	'Connected'	'Disconnected'
InputTieStatus	'Tied'	'Untied'
['Input']	'1' – '64'	
['Output']	'1' – '64'	
ModelName	'Kumo 1604'	'Kumo 1616' 'Kumo 3232'
	'Kumo 6464'	
OutputTieStatus	'0' – '64'	
['Output']	'1' – '64'	

Cable and Adapter Requirements:

Captive Screw to Male DB9 RS232 Serial Cable.

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: Hardware

Pin Assignments Diagram

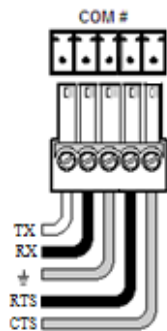

Signal	Main Cable	Pin	Signal
		1	GND
		2	RX
TX	←	3	TX
RX	→	4	GND
		5	NC
GND		6	GND
RTS	←	7	RTS
CTS	→	8	CTS
		9	GND
		Shell	GND

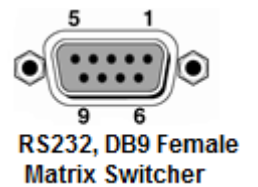

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type: Ethernet

Default Port: 12345

Logon Credentials No

Supported:

Multi-Connection No

Capabilities:

Port Changeability: Yes

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Matrix Tie Command None Input 1 Output 1	\x01N0TI\x0901\x090111\x04
Matrix Tie Command None Input 1 Output 16	\x01N0TI\x0916\x09010B\x04
Matrix Tie Command None Input 1 Output 32	\x01N0TI\x0932\x09010D\x04
Matrix Tie Command None Input 1 Output 4	\x01N0TI\x0904\x09010E\x04
Matrix Tie Command None Input 1 Output 64	\x01N0TI\x0964\x090108\x04
Matrix Tie Command None Input 16 Output 1	\x01N0TI\x0901\x09160B\x04
Matrix Tie Command None Input 16 Output 16	\x01N0TI\x0916\x091605\x04
Matrix Tie Command None Input 16 Output 4	\x01N0TI\x0904\x091608\x04
Matrix Tie Command None Input 32 Output 1	\x01N0TI\x0901\x09320D\x04
Matrix Tie Command None Input 32 Output 32	\x01N0TI\x0932\x093209\x04
Matrix Tie Command None Input 64 Output 1	\x01N0TI\x0901\x096408\x04
Matrix Tie Command None Input 64 Output 64	\x01N0TI\x0964\x0964FF\x04

Appendix B. Query Commands

Input Tie Status Input 1 Output 1	\x01N0QI\x09017E\x04
Input Tie Status Input 1 Output 16	\x01N0QI\x091678\x04
Input Tie Status Input 1 Output 32	\x01N0QI\x09327A\x04
Input Tie Status Input 1 Output 4	\x01N0QI\x09047B\x04
Input Tie Status Input 1 Output 64	\x01N0QI\x096475\x04
Input Tie Status Input 16 Output 1	\x01N0QI\x09017E\x04
Input Tie Status Input 16 Output 16	\x01N0QI\x091678\x04
Input Tie Status Input 16 Output 4	\x01N0QI\x09047B\x04
Input Tie Status Input 32 Output 1	\x01N0QI\x09017E\x04
Input Tie Status Input 32 Output 32	\x01N0QI\x09327A\x04
Input Tie Status Input 64 Output 1	\x01N0QI\x09017E\x04
Input Tie Status Input 64 Output 64	\x01N0QI\x096475\x04
Model Name	\x01N0BK\x09N9E\x04
Output Tie Status Output 1	\x01N0QI\x09017E\x04
Output Tie Status Output 16	\x01N0QI\x091678\x04
Output Tie Status Output 32	\x01N0QI\x09327A\x04
Output Tie Status Output 4	\x01N0QI\x09047B\x04
Output Tie Status Output 64	\x01N0QI\x096475\x04