

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Lighting Control
Manufacturer: AMX
Firmware Version: N/A
Model(s): Prodigy

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_1_0	4/12/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

Curve	'Standard' 'Always Off'	'Economy' 'Always On'	'Non-Dim'
['Channel']	'1' – '96'	'Broadcast'	
Level	0 to 100 in steps of 1		
['Channel']	'1' – '96'	'Broadcast'	
LoadPreset	'1' – '255'		
['Fade Time']	0 to 255 in steps of 1		
Ramp ¹	'Up'	'Down'	'Stop'
['Channel']	'1' – '96'	'Broadcast'	
SavePreset	'1' – '255'		
['Fade Time']	1 to 255 in steps of 1		

¹ Stop must be sent after Up or Down in order to ensure that the command works correctly

Status Available:

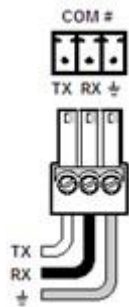
ConnectionStatus	'Connected'	'Disconnected'	
Curve	'Standard' 'Always Off'	'Economy' 'Always On'	'Non-Dim'
['Channel']	'1' – '96'		
Level	0 to 100 in steps of 1		
['Channel']	'1' – '96'		

Cable and Adapter Requirements:

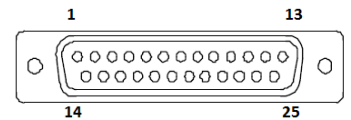
Captive Screw to Male DB25 RS-232 Serial Cable

Notes for the Device:

Pins 1, 4, 6 and 7 on the device should all be connected to ground to enable RS232 communication with the device.

Serial communication:**Port Type:** RS-232**Baud Rate:** 9600**Data Bits:** 8**Parity:** None**Stop Bits:** One**Flow Control:** None**Pin Assignments Diagram**

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	5	TxD
GND	→	1, 4, 6, 7	GND

**General Notes:**

Appendix A. Set Commands

Curve Always Off Channel 1	1/O\x0D
Curve Always Off Channel 96	96/O\x0D
Curve Always Off Channel Broadcast	A/O\x0D
Curve Always On Channel 1	1/F\x0D
Curve Always On Channel 96	96/F\x0D
Curve Always On Channel Broadcast	A/F\x0D
Curve Economy Channel 1	1/2\x0D
Curve Economy Channel 96	96/2\x0D
Curve Economy Channel Broadcast	A/2\x0D
Curve Non-Dim Channel 1	1/N\x0D
Curve Non-Dim Channel 96	96/N\x0D
Curve Non-Dim Channel Broadcast	A/N\x0D
Curve Standard Channel 1	1/1\x0D
Curve Standard Channel 96	96/1\x0D
Curve Standard Channel Broadcast	A/1\x0D
Level 0 Channel 1	1L0\x0D
Level 0 Channel 96	96L0\x0D
Level 0 Channel Broadcast	AL0\x0D
Level 100 Channel 1	1L100\x0D
Level 100 Channel 96	96L100\x0D
Level 100 Channel Broadcast	AL100\x0D
Load Preset 1 Fade Time 0	1B\x0D
Load Preset 1 Fade Time 255	1B255\x0D
Load Preset 255 Fade Time 0	255B\x0D
Load Preset 255 Fade Time 255	255B255\x0D
Ramp Down Channel 1	1D
Ramp Down Channel 96	96D
Ramp Down Channel Broadcast	AD
Ramp Stop Channel 1	\x0D
Ramp Stop Channel 96	\x0D
Ramp Stop Channel Broadcast	\x0D
Ramp Up Channel 1	1U
Ramp Up Channel 96	96U
Ramp Up Channel Broadcast	AU
Save Preset 1 Fade Time 1	1R1\x0D
Save Preset 1 Fade Time 255	1R255\x0D
Save Preset 255 Fade Time 1	255R1\x0D
Save Preset 255 Fade Time 255	255R255\x0D

Appendix B. Query Commands

Curve Channel 1	1\x0D
Curve Channel 96	96\x0D

Level Channel 1	1\x0D
Level Channel 96	96\x0D