

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Receiver
Manufacturer: Anthem
Firmware Version: N/A
Model(s): AVM 30

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_0_1_0	1/4/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

AudioMute	'On'	'Off'	
['Zone']	'Main'	'Zone 2'	'Zone 3'
ExecutiveMode	'On'	'Off'	
Input	'CD'	'2-Ch BAL'	'6-Ch S/E'
	'Tape'	'FM/AM'	'DVD1'
	'DVD2'	'DVD3'	'DVD4'
	'TV1'	'TV2'	'TV3'
	'TV4'	'VCR'	'SAT1'
	'SAT2'	'Aux'	'Main'
['Zone']	'Main'	'Zone 2'	'Zone 3'
Power	'On'	'Off'	
['Zone']	'Main'	'Zone 2'	'Zone 3'
VolumeZone2and3	-70 to 10 in steps of 1.25 dB		
['Zone']	'Zone 2'	'Zone 3'	
VolumeMainZone	-95.5 to 31.5 in steps of 0.5 dB		
VolumeMainZoneSections	-10 to 10 in steps of 0.5 dB		
['Section']	'Front'	'Center'	'Surround'
	'Back'		

Status Available:

AudioMute	'On'	'Off'	
['Zone']	'Main'	'Zone 2'	'Zone 3'
ConnectionStatus	'Connected'	'Disconnected'	
Input	'CD'	'2-Ch BAL'	'6-Ch S/E'
	'Tape'	'FM/AM'	'DVD1'
	'DVD2'	'DVD3'	'DVD4'
	'TV1'	'TV2'	'TV3'
	'TV4'	'VCR'	'SAT1'
	'SAT2'	'Aux'	'Main'
['Zone']	'Main'	'Zone 2'	'Zone 3'
Power	'On'	'Off'	
['Zone']	'Main'	'Zone 2'	'Zone 3'
VolumeZone2and3	-70 to 10 in steps of 1.25 dB		
['Zone']	'Zone 2'	'Zone 3'	
VolumeMainZone	-95.5 to 31.5 in steps of 0.5 dB		
VolumeMainZoneSections	-10 to 10 in steps of 0.5 dB		
['Section']	'Front'	'Center'	'Surround'
	'Back'		

Cable and Adapter Requirements:

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

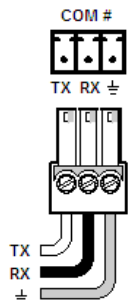

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

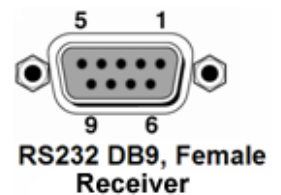

General Notes:

Appendix A. Set Commands

Audio Mute Off Zone Main	P1M0\x0A
Audio Mute Off Zone Zone 2	P2M0\x0A
Audio Mute Off Zone Zone 3	P3M0\x0A
Audio Mute On Zone Main	P1M1\x0A
Audio Mute On Zone Zone 2	P2M1\x0A
Audio Mute On Zone Zone 3	P3M1\x0A
Executive Mode Off	FPL0\x0A
Executive Mode On	FPL1\x0A
Input 2-Ch BAL Zone Main	P1S1\x0A
Input 2-Ch BAL Zone Zone 2	P2S1\x0A
Input 2-Ch BAL Zone Zone 3	P3S1\x0A
Input 6-Ch S/E Zone Main	P1S2\x0A
Input 6-Ch S/E Zone Zone 2	P2S2\x0A
Input 6-Ch S/E Zone Zone 3	P3S2\x0A
Input Aux Zone Main	P1S9\x0A
Input Aux Zone Zone 2	P2S9\x0A
Input Aux Zone Zone 3	P3S9\x0A
Input CD Zone Main	P1S0\x0A
Input CD Zone Zone 2	P2S0\x0A
Input CD Zone Zone 3	P3S0\x0A
Input DVD1 Zone Main	P1S5\x0A
Input DVD1 Zone Zone 2	P2S5\x0A
Input DVD1 Zone Zone 3	P3S5\x0A
Input DVD2 Zone Main	P1Sd\x0A
Input DVD2 Zone Zone 2	P2Sd\x0A
Input DVD2 Zone Zone 3	P3Sd\x0A
Input DVD3 Zone Main	P1Se\x0A
Input DVD3 Zone Zone 2	P2Se\x0A
Input DVD3 Zone Zone 3	P3Se\x0A
Input DVD4 Zone Main	P1Sf\x0A
Input DVD4 Zone Zone 2	P2Sf\x0A
Input DVD4 Zone Zone 3	P3Sf\x0A
Input FM/AM Zone Main	P1S4\x0A
Input FM/AM Zone Zone 2	P2S4\x0A
Input FM/AM Zone Zone 3	P3S4\x0A
Input Main Zone Main	P1Sc\x0A
Input Main Zone Zone 2	P2Sc\x0A
Input Main Zone Zone 3	P3Sc\x0A
Input SAT1 Zone Main	P1S7\x0A
Input SAT1 Zone Zone 2	P2S7\x0A
Input SAT1 Zone Zone 3	P3S7\x0A
Input SAT2 Zone Main	P1Sj\x0A
Input SAT2 Zone Zone 2	P2Sj\x0A
Input SAT2 Zone Zone 3	P3Sj\x0A
Input Tape Zone Main	P1S3\x0A

Input Tape Zone Zone 2	P2S3\x0A
Input Tape Zone Zone 3	P3S3\x0A
Input TV1 Zone Main	P1S6\x0A
Input TV1 Zone Zone 2	P2S6\x0A
Input TV1 Zone Zone 3	P3S6\x0A
Input TV2 Zone Main	P1Sg\x0A
Input TV2 Zone Zone 2	P2Sg\x0A
Input TV2 Zone Zone 3	P3Sg\x0A
Input TV3 Zone Main	P1Sh\x0A
Input TV3 Zone Zone 2	P2Sh\x0A
Input TV3 Zone Zone 3	P3Sh\x0A
Input TV4 Zone Main	P1Si\x0A
Input TV4 Zone Zone 2	P2Si\x0A
Input TV4 Zone Zone 3	P3Si\x0A
Input VCR Zone Main	P1S8\x0A
Input VCR Zone Zone 2	P2S8\x0A
Input VCR Zone Zone 3	P3S8\x0A
Power Off Zone Main	P1P0\x0A
Power Off Zone Zone 2	P2P0\x0A
Power Off Zone Zone 3	P3P0\x0A
Power On Zone Main	P1P1\x0A
Power On Zone Zone 2	P2P1\x0A
Power On Zone Zone 3	P3P1\x0A
Volume (Zone 2&3) 10 Zone Zone 2	P2V10.0\x0A
Volume (Zone 2&3) 10 Zone Zone 3	P3V10.0\x0A
Volume (Zone 2&3) -70 Zone Zone 2	P2V-70.0\x0A
Volume (Zone 2&3) -70 Zone Zone 3	P3V-70.0\x0A
Volume Main Zone 31.5	P1VM31\x0A
Volume Main Zone -95.5	P1VM-95\x0A
Volume Main Zone Sections 10 Section Back	P1VB10.0\x0A
Volume Main Zone Sections -10 Section Back	P1VB-10.0\x0A
Volume Main Zone Sections 10 Section Center	P1VC10.0\x0A
Volume Main Zone Sections -10 Section Center	P1VC-10.0\x0A
Volume Main Zone Sections 10 Section Front	P1VF10.0\x0A
Volume Main Zone Sections -10 Section Front	P1VF-10.0\x0A
Volume Main Zone Sections 10 Section Surround	P1VR10.0\x0A
Volume Main Zone Sections -10 Section Surround	P1VR-10.0\x0A

Appendix B. Query Commands

Power Zone Main	P1P?\x0A
Power Zone Zone 2	P2P?\x0A
Power Zone Zone 3	P3P?\x0A
Volume (Zone 2&3) Zone Zone 2	P2?\x0A
Volume (Zone 2&3) Zone Zone 3	P3?\x0A
Volume Main Zone	P1?\x0A

Volume Main Zone Sections Section Back	P1VB?\x0A
Volume Main Zone Sections Section Center	P1VC?\x0A
Volume Main Zone Sections Section Front	P1VF?\x0A
Volume Main Zone Sections Section Surround	P1VR?\x0A