

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: AOTO
Firmware Version: 2.4.4.0
Model(s): ATLVC-AF

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_1_0	11/1/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- CollectionCard variable must be set accordingly. Default value is 'Data1'. CollectionCard values are 'Data1' or 'Data2'.
Example: `InterfaceName.CollectionCard = 'Data1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='ATLVC-AF')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='ATLVC-AF')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
NetPortSend	'All'	'P0'	'P1'
# NetPortSend example InterfaceName.Set('NetPortSend', 'All')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, and NetPortStatus do not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
DVIDataStatus ¹	'Received'	'Not Received'
# DVIDataStatus examples InterfaceName.Update('DVIDataStatus') Value = InterfaceName.ReadStatus('DVIDataStatus') InterfaceName.SubscribeStatus('DVIDataStatus', None, FeedbackHandler)		
Command	Value	Value
NetPortStatus ¹	'Valid'	'Invalid'
Qualifier Key	Qualifier Value	Qualifier Value
'NetPort'	'P0'	'P1'
# NetPortStatus examples InterfaceName.Update('NetPortStatus') Value = InterfaceName.ReadStatus('NetPortStatus', {'NetPort': 'P0'}) InterfaceName.SubscribeStatus('NetPortStatus', None, FeedbackHandler)		

¹ These commands share the same Update command string, 1 Update to one of them will update both statuses.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 57600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

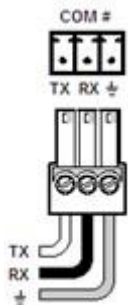

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

