

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: APC
Firmware Version: 6.5.6
Model(s): AP7921B, AP7922B

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_0_4_0	5/3/2019	Added AP7922B model. Removed unsupported Display ID module parameter. Added support for serial control.
1_0_3_0	12/6/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are apc and apc respectively.
Example: `InterfaceName.devicePassword = 'extron'`
- Due to authentication on the device, this module does not support unidirectional control.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AP7921B')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AP7921B')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='AP7921B')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
PowerOutlet	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Number'	'1' – '8' ¹	'1' – '16' ²	'All'
# PowerOutlet example InterfaceName.Set('PowerOutlet', 'On', {'Number': '1'})			

¹ Only available for AP7921B model

² Only available for AP7922B model

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command PowerOutlet	Value 'On'	Value 'Off'
Qualifier Key 'Number'	Qualifier Value '1' – '8' ¹	Qualifier Value '1' – '16' ²
# PowerOutlet example InterfaceName.Update('PowerOutlet', {'Number': '1'}) Value = InterfaceName.ReadStatus('PowerOutlet', {'Number': '1'}) InterfaceName.SubscribeStatus('PowerOutlet', None, FeedbackHandler)		
Command SerialNumber	Value 'String'	
# SerialNumber example InterfaceName.Update('SerialNumber') Value = InterfaceName.ReadStatus('SerialNumber') InterfaceName.SubscribeStatus('SerialNumber', None, FeedbackHandler)		

¹ Only available for AP7921B model

² Only available for AP7922B model

Cable and Adapter Requirements

Captive Screw to Male RJ-12 RS232 Cable

Notes for the Device

To ensure the functionality of the module, please do not configure the module for unidirectional control. Additionally, please access the device's web page and set the following settings:

- **Check** Configuration → Network → Console Access → **Telnet**.
- **Uncheck** Configuration → Network → Console Access → **SSH**.

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

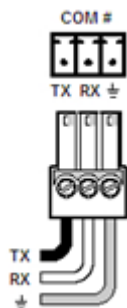

Please contact manufacturer for pin assignment diagram.

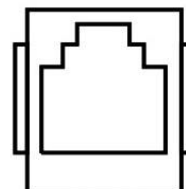

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Username:	apc
Default Password:	apc
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the module, please access the device's web page and set the following settings:

- **Check** Configuration → Network → Console Access → **Telnet**.
- **Uncheck** Configuration → Network → Console Access → **SSH**.

Appendix A. Set Commands

Power Outlet Off Number 1	o10ff 1\x0D\x0A
Power Outlet Off Number 8	o10ff 8\x0D\x0A
Power Outlet Off Number 16	o10ff 16\x0D\x0A
Power Outlet Off Number All	o10ff all\x0D\x0A
Power Outlet On Number 1	o10n 1\x0D\x0A
Power Outlet On Number 8	o10n 8\x0D\x0A
Power Outlet On Number 16	o10n 16\x0D\x0A
Power Outlet On Number All	o10n all\x0D\x0A

Appendix B. Update Commands

Power Outlet	olStatus all\x0D\x0A
Serial Number	about\x0D\x0A