

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: CD
Manufacturer: Apart
Firmware Version: N/A
Model(s): PC1000R MKII

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_1_2_0	6/28/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Unsolicited responses will not work when CD is in standby.
- Unit may respond slowly when you change the input source depending on the size and number of files present on the media.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PC1000R MKII')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PC1000R MKII')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
Input	None		
# Input example InterfaceName.Set('Input', None)			
Command	Value	Value	
Mute	'Off'	'On'	
# Mute example InterfaceName.Set('Mute', 'Off')			
Command	Value	Value	
Power	'Off'	'On'	
# Power example InterfaceName.Set('Power', 'Off')			
Command	Value	Value	
Random	'Off'	'On'	
# Random example InterfaceName.Set('Random', 'Off')			
Command	Value	Value	Value
Repeat	'One'	'All'	'Off'
# Repeat example InterfaceName.Set('Repeat', 'One')			
Command	Value		
TrackNumber	0 to 4095 in steps of 1		
# TrackNumber example InterfaceName.Set('TrackNumber', 4095)			
Command	Value	Value	Value
Transport	'Play'	'Pause'	'Stop'
	'Eject'	'Previous'	'Next'
	'Fast Forward'	'Rewind'	
# Transport example InterfaceName.Set('Transport', 'Play')			
Command	Value	Value	
Volume	'Up'	'Down'	
# Volume example InterfaceName.Set('Volume', 'Up')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, Mute, Power, Random, Repeat, TimeStatus, TrackNumber, and Transport do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls. Mute, Power, Random, Repeat, TimeStatus, TrackNumber, and Transport is triggered by the device's unsolicited responses.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value		
CDStatus ¹	'String'		
# CDStatus example InterfaceName.Update('CDStatus') Value = InterfaceName.ReadStatus('CDStatus') InterfaceName.SubscribeStatus('CDStatus', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
Mute	'Off'	'On'	
# Mute example Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			
Command	Value	Value	
Power	'Off'	'On'	
# Power example Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value	Value	
Random	'Off'	'On'	
# Random example Value = InterfaceName.ReadStatus('Random') InterfaceName.SubscribeStatus('Random', None, FeedbackHandler)			
Command	Value	Value	Value
Repeat	'One'	'All'	'Off'
# Repeat example Value = InterfaceName.ReadStatus('Repeat') InterfaceName.SubscribeStatus('Repeat', None, FeedbackHandler)			
Command	Value		
TimeStatus	'String'		
# TimeStatus example Value = InterfaceName.ReadStatus('TimeStatus') InterfaceName.SubscribeStatus('TimeStatus', None, FeedbackHandler)			
Command	Value		

**Global Scriptor Module
Communication Sheet**

TrackNumber ²	0 to 4095 in steps of 1		
# TrackNumber example Value = InterfaceName.ReadStatus('TrackNumber') InterfaceName.SubscribeStatus('TrackNumber', None, FeedbackHandler)			
Command	Value	Value	Value
Transport	'Play'	'Pause'	'Stop'
	'Eject'	'Previous'	'Next'
	'Fast Forward'	'Rewind'	
# Transport example Value = InterfaceName.ReadStatus('Transport') InterfaceName.SubscribeStatus('Transport', None, FeedbackHandler)			

¹String represents the current status of CD.²Value 0 means no media present.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

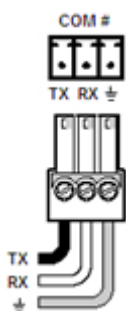

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

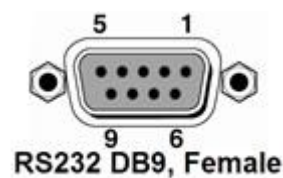

Appendix A. Set Commands

Input None	INPUT
Mute Off	CD MUTE OFF
Mute On	CD MUTE ON
Power Off	OFF
Power On	ON
Random Off	RANDOM OFF
Random On	RANDOM ON
Repeat All	REPEAT ALL
Repeat Off	REPEAT OFF
Repeat One	REPEAT 1
Track Number 0	TRACK 0
Track Number 4095	TRACK 4095
Transport Eject	EJECT
Transport Fast Forward	FAST+
Transport Next	SKIP+
Transport Pause	PAUSE
Transport Play	PLAY
Transport Previous	SKIP-
Transport Rewind	FAST-
Transport Stop	STOP
Volume Down	VOL-
Volume Up	VOL+

Appendix B. Update Commands

CD Status	STATUS
-----------	--------