

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Controller
Manufacturer: Arthur Holm
Firmware Version: N/A
Model(s): ERT Interface Unit

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0002-b003	2.3.1

Version History

Module Version	Date	Notes
1_1_0_0	2/11/2020	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='ERT Interface Unit')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='ERT Interface Unit')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 2002, Model='ERT Interface Unit')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	
AutoConfigureVGA	None	
Qualifier Key	Qualifier Value	Qualifier Value
'Device ID'	'1' – '100'	'Broadcast'
# AutoConfigureVGA example InterfaceName.Set('AutoConfigureVGA', None, {'Device ID': '1'})		
Command	Value	
ButtonLock	'On' 'Off'	
Qualifier Key	Qualifier Value	Qualifier Value
'Device ID'	'1' – '100'	'Broadcast'
# ButtonLock example InterfaceName.Set('ButtonLock', 'On', {'Device ID': '1'})		
Command	Value	
Input	'VGA' 'DVI'	
Qualifier Key	Qualifier Value	Qualifier Value
'Device ID'	'1' – '100'	'Broadcast'
# Input example InterfaceName.Set('Input', 'VGA', {'Device ID': '1'})		
Command	Value	
Screen	'On' 'Off'	
Qualifier Key	Qualifier Value	Qualifier Value
'Device ID'	'1' – '100'	'Broadcast'
# Screen example InterfaceName.Set('Screen', 'On', {'Device ID': '1'})		
Command	Value	
ScreenControl	'Up' 'Down'	
Qualifier Key	Qualifier Value	Qualifier Value
'Device ID'	'1' – '100'	'Broadcast'
# ScreenControl example InterfaceName.Set('ScreenControl', 'Up', {'Device ID': '1'})		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ButtonLock ¹	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device ID'	'1' – '100'	
# ButtonLock example InterfaceName.Update('ButtonLock', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('ButtonLock', {'Device ID': '1'}) InterfaceName.SubscribeStatus('ButtonLock', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
DeviceStatus ¹	'Error'	'Normal'
Qualifier Key	Qualifier Value	
'Device ID'	'1' – '100'	
# DeviceStatus example InterfaceName.Update('DeviceStatus', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('DeviceStatus', {'Device ID': '1'}) InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)		
Command	Value	Value
Input ¹	'VGA'	'DVI'
Qualifier Key	Qualifier Value	
'Device ID'	'1' – '100'	
# Input example InterfaceName.Update('Input', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Input', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)		
Command	Value	Value
Screen ¹	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device ID'	'1' – '100'	
# Screen example InterfaceName.Update('Screen', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Screen', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Screen', None, FeedbackHandler)		
Command	Value	Value

Global Scripter Module Communication Sheet

ScreenControl ¹	'Up' 'Down'
Qualifier Key	Qualifier Value
'Device ID'	'1' – '100'
<pre># ScreenControl example InterfaceName.Update('ScreenControl', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('ScreenControl', {'Device ID': '1'}) InterfaceName.SubscribeStatus('ScreenControl', None, FeedbackHandler)</pre>	

¹ Calling Update command with one of these commands at the specified Device ID will provide statuses for the other commands with this superscript for specified Device ID.

Cable and Adapter Requirements

Captive Screw to RJ45 connector

Notes for the Device

Serial communication

Port Type: RS-422

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

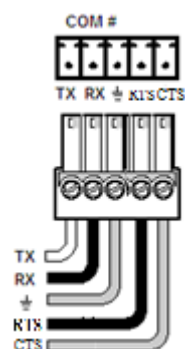

Signal	Main Cable	Signal
Tx- (Tx)		Tx-
Rx- (Rx)		Rx-
Tx+ (RTS)		Tx+
RX+ (CTS)		RX+

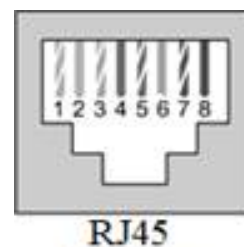

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type: Ethernet

Default Port: 2002

Logon Credentials Supported: No

Multi-Connection Capabilities: No

Port Changeability: Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Configure VGA None Device ID 1	\xFA\x01\x05\x00\x00
Auto Configure VGA None Device ID 99	\xFAc\x05\x00\x00
Button Lock Off Device ID 1	\xFA\x01\x04\x00\x00
Button Lock Off Device ID 99	\xFAc\x04\x00\x00
Button Lock On Device ID 1	\xFA\x01\x04\x01\x00
Button Lock On Device ID 99	\xFAc\x04\x01\x00
Input DVI Device ID 1	\xFA\x01\x03\x00\x00
Input DVI Device ID 99	\xFAc\x03\x00\x00
Input VGA Device ID 1	\xFA\x01\x03\x01\x00
Input VGA Device ID 99	\xFAc\x03\x01\x00
Screen Control Down Device ID 1	\xFA\x01\x01\x00\x00
Screen Control Down Device ID 99	\xFAc\x01\x00\x00
Screen Control Up Device ID 1	\xFA\x01\x01\x01\x00
Screen Control Up Device ID 99	\xFAc\x01\x01\x00
Screen Off Device ID 1	\xFA\x01\x02\x00\x00
Screen Off Device ID 99	\xFAc\x02\x00\x00
Screen On Device ID 1	\xFA\x01\x02\x01\x00
Screen On Device ID 99	\xFAc\x02\x01\x00

Appendix B. Update Commands

Button Lock Device ID 1	\xFA\x01\x14\x00\x00
Button Lock Device ID 99	\xFAc\x14\x00\x00
Device Status Device ID 1	\xFA\x01\x14\x00\x00
Device Status Device ID 99	\xFAc\x14\x00\x00
Input Device ID 1	\xFA\x01\x14\x00\x00
Input Device ID 99	\xFAc\x14\x00\x00
Screen Device ID 1	\xFA\x01\x14\x00\x00
Screen Device ID 99	\xFAc\x14\x00\x00
Screen Control Device ID 1	\xFA\x01\x14\x00\x00
Screen Control Device ID 99	\xFAc\x14\x00\x00