

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Arthur Holm
Firmware Version: N/A
Model(s): AH15D3HDGA, AH17D3HDGA, AH19D3HDGA, AH22D316GA

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_0_0	10/3/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '30' and 'Broadcast'. If DeviceID is set to 'Broadcast', status is unavailable.
Example: InterfaceName.DeviceID = '1'

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AH15D3HDGA')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AH15D3HDGA')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command Input	Value 'DVI-A'	Value 'DVI-1'	Value 'DVI-2'
# Input example InterfaceName.Set('Input', 'DVI-A')			
Command ScreenControl	Value 'Up'	Value 'Down'	
# ScreenControl example InterfaceName.Set('ScreenControl', 'Up')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, Input, and VideoMute do not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
ExecutiveMode ¹	'On'	'Off'	
# ExecutiveMode examples InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command	Value	Value	Value
Input ¹	'DVI-A'	'DVI-1'	'DVI-2'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
VideoMute ¹	'On'	'Off'	
# VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)			

¹ One Update of this command returns status for all three of them.

Cable and Adapter Requirements

Captive Screw to RJ45

Notes for the Device

Serial communication

Port Type: RS-422

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

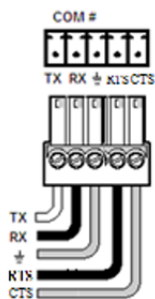

Signal	Main Cable	Pin	Signal
Tx- (Tx)	→	6	Rx-
Rx- (Rx)	←	2	Tx-
GND	→	8	GND
Tx+ (RTS)	→	3	Rx+
Rx+ (CTS)	←	1	Tx+

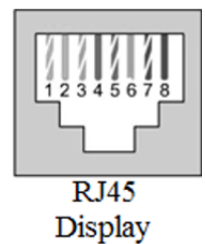

Appendix A. Set Commands

Executive Mode Off	\xFA\x01\x04\x00\x00
Executive Mode On	\xFA\x01\x04\x01\x00
Input DVI-1	\xFA\x01\x03\x00\x00
Input DVI-2	\xFA\x01\x03\x03\x00
Input DVI-A	\xFA\x01\x03\x01\x00
Screen Control Down	\xFA\x01\x01\x00\x00
Screen Control Up	\xFA\x01\x01\x01\x00
Video Mute Off	\xFA\x01\x02\x01\x00
Video Mute On	\xFA\x01\x02\x00\x00

Appendix B. Update Commands

Executive Mode	\xFA\x01\x14\x00\x00
Input	\xFA\x01\x14\x00\x00
Video Mute	\xFA\x01\x14\x00\x00