

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
 Manufacturer: Attero Tech
 Firmware Version: N/A
 Model(s): unBT2A

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0002-b005	1.3.0

Version History

Module Version	Date	Notes
1_0_0_0	5/8/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

ActivatePairing	None	
BluetoothFriendlyNameCommand	'String'	
ButtonLock	'On'	'Off'
ClearBluetoothPairings	None	
CloseBluetoothConnection	None	
Mute	'On'	'Off'

Status Available:

BluetoothFriendlyNameStatus	'String'		
BluetoothStatus	'Idle'	'Discoverable'	'Connected'
ButtonLock	'On'	'Off'	
ConnectionStatus	'Connected'	'Disconnected'	
Mute	'On'	'Off'	

Cable and Adapter Requirements:

Captive Screw to Captive Screw

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

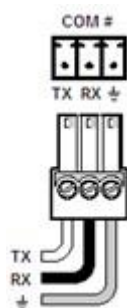

Signal	Main Cable	Signal
TxD	→	RxD
RxD	←	TxD
GND		GND

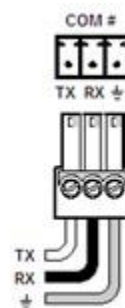

General Notes:

Appendix A. Set Commands

Activate Pairing None	BTB\x0D
Bluetooth Friendly Name Command testString	BTN testString\x0D
Button Lock Off	BTL 0\x0D
Button Lock On	BTL 1\x0D
Clear Bluetooth Pairings None	CBC\x0D
Close Bluetooth Connection None	BCC\x0D
Mute Off	MUTE 0\x0D
Mute On	MUTE 1\x0D

Appendix B. Query Commands

Bluetooth Friendly Name Status	BTN\x0D
Bluetooth Status	BTS\x0D
Button Lock	BTL\x0D
Mute	MUTE\x0D