

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

---

---

## Device Specifications

Device Type: Audio Processor  
Manufacturer: Ateis  
Firmware Version: N/A  
Model(s): UAP G2

## Tested on the Following Software and Firmware Versions

| IP Link Pro Control Processor Firmware | Global Scriptor Version |
|----------------------------------------|-------------------------|
| 2.06.0000-b010                         | 1.4.1                   |

## Version History

| Module Version | Date       | Notes           |
|----------------|------------|-----------------|
| 1_0_0_0        | 10/19/2017 | Initial Version |

## Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.  
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.  
Example: `InterfaceName.connectionCounter = 5`
- Select the “No Check Sum” box in the UAP GA configuration software for Ateis to return status.

Example:

In this case, the Command ID parameter is 'C001'

| <input checked="" type="checkbox"/> Not Check sum <input type="checkbox"/> Not Command answer |           |    |         |       |        |      |                 |         |
|-----------------------------------------------------------------------------------------------|-----------|----|---------|-------|--------|------|-----------------|---------|
| Element Information                                                                           |           |    |         |       |        |      | Command control |         |
| Machine                                                                                       | Component | ID | Element | Input | Output | Band | Command ID      | Command |
| 1                                                                                             | Input A   | 1  | Level   | N/A   | 1      | N/A  | C001            |         |

## Supported Classes and Examples

### SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='UAP G2')
```

### SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='UAP G2')
```

## Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

|                                                                               |                                  |                  |
|-------------------------------------------------------------------------------|----------------------------------|------------------|
| Command<br>Level                                                              | Value<br>0 to 9999 in steps of 1 |                  |
| Qualifier Key<br>'Command ID'                                                 | Qualifier Value<br>'String'      |                  |
| # Level example<br>InterfaceName.Set('Level', 9999, {'Command ID': 'String'}) |                                  |                  |
| Command<br>MasterPresetRecall                                                 | Value<br>'1' – '32'              |                  |
| # MasterPresetRecall example<br>InterfaceName.Set('MasterPresetRecall', '1')  |                                  |                  |
| Command<br>Power                                                              | Value<br>'Standby'               | Value<br>'Reset' |
| # Power example<br>InterfaceName.Set('Power', 'Standby')                      |                                  |                  |
| Command<br>SubPresetRecall                                                    | Value<br>'1' – '32'              |                  |

## Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

|                                                                                                                                                                                                                     |                         |                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|----------------|
| Command                                                                                                                                                                                                             | Value                   | Value          |
| ConnectionStatus                                                                                                                                                                                                    | 'Connected'             | 'Disconnected' |
| # ConnectionStatus examples<br>Value = InterfaceName.ReadStatus('ConnectionStatus')<br>InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)                                                     |                         |                |
| Command                                                                                                                                                                                                             | Value                   |                |
| Level                                                                                                                                                                                                               | 0 to 9999 in steps of 1 |                |
| Qualifier Key                                                                                                                                                                                                       | Qualifier Value         |                |
| 'Command ID'                                                                                                                                                                                                        | 'String'                |                |
| # Level examples<br>InterfaceName.Update('Level', {'Command ID': 'String'})<br>Value = InterfaceName.ReadStatus('Level', {'Command ID': 'String'})<br>InterfaceName.SubscribeStatus('Level', None, FeedbackHandler) |                         |                |
| Command                                                                                                                                                                                                             | Value                   | Value          |
| Power                                                                                                                                                                                                               | 'Standby'               | 'Reset'        |
| # Power examples<br>InterfaceName.Update('Power')<br>Value = InterfaceName.ReadStatus('Power')<br>InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)                                                     |                         |                |

---

## Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

## Notes for the Device

---

### Serial communication

**Port Type:** RS-232

**Baud Rate:** 9600


**Data Bits:** 8

**Parity:** None

**Stop Bits:** One

**Flow Control:** None

### Pin Assignments Diagram

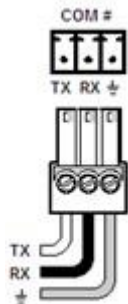

| Signal | Main Cable | Pin | Signal |
|--------|------------|-----|--------|
| TxD    | →          | 2   | RxD    |
| RxD    | ←          | 3   | TxD    |
| GND    | →          | 5   | GND    |



**Appendix A. Set Commands**

|                            |                       |
|----------------------------|-----------------------|
| Level 0 Command ID TEST    | \x02WTEST0\x03\x0D    |
| Level 9999 Command ID TEST | \x02WTEST9999\x03\x0D |
| Master Preset Recall 1     | \x02M1\x03\x0D        |
| Master Preset Recall 32    | \x02M32\x03\x0D       |
| Power Reset                | \x02Q1\x03\x0D        |
| Power Standby              | \x02Q0\x03\x0D        |
| Sub Preset Recall 1        | \x02S1\x03\x0D        |
| Sub Preset Recall 32       | \x02S32\x03\x0D       |

**Appendix B. Query Commands**

|                             |                   |
|-----------------------------|-------------------|
| Level Command ID testString | \x02RTEST\x03\x0D |
| Power                       | \x02Q2\x03\x0D    |