

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
 Manufacturer: AVerMedia
 Firmware Version: N/A
 Model(s): EVC900, EVC300, EVC100, EVC130

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0001-b006	1.4.2

Version History

Module Version	Date	Notes
1_2_2_0	3/15/2018	Added LocalMuteStatus command, fixed phonebooksearch command.
1_2_1_0	11/8/2017	Updated module to Rev. B. Updated phonebook status, Added Serial communication support. Renamed Camera Tilt and Video Switch Single Dual Monitor as per Extron nonmeclature standards.
1_1_0_0	2/7/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword must be set accordingly.
Example: `InterfaceName.devicePassword = '1234'`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
NumberOfPhonebookSearch ranges from '1' – '10'.
Example: `InterfaceName.NumberOfPhonebookSearch = '5'`
- To keep the port open on the device, 'NOP' must be sent to the device at least once every 5 minutes.
Example:

```
def keepPortOpen():  
    InterfaceName.Send(b'NOP\r')  
    portQuery.Restart()  
  
portQuery = Wait(240, keepPortOpen)  
portQuery.Cancel()  
keepPortOpen()
```

Phonebook commands:

- **Phonebook Search**
This command takes in a search phrase and it is used to search the contact names that would match this.
- **Phonebook Search Result**
This is where the search results will be saved to when phonebook is searched. The number of results are set by the NumberOfPhonebookSearch variable which is initialized to 5 results by default.
Example: `InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 1})`
- **Phonebook Search Set**
When the number selected in this command is triggered, it will dial the name in the corresponding Phonebook Search Result Button.
- **Phonebook Navigation**
This command is used for navigating through the search results. It is used to scroll through the results when the search result returns more contacts than the NumberOfPhonebookSearch variable.
- **Phonebook Update**
This is used to update the contacts from the device.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='EVC900')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='EVC900')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='EVC900')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto'	Value '1024 x 768 (4:3)'	Value '1280 x 720 (16:9)'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command AutoAnswer	Value 'On'	Value 'Off'	Value 'On with Mute'
	'Do Not Disturb'		
# AutoAnswer example InterfaceName.Set('AutoAnswer', 'On')			
Command CameraInputSwitch	Value None		
# CameraInputSwitch example InterfaceName.Set('CameraInputSwitch', None)			
Command CameraPanTilt	Value 'Up'	Value 'Down'	Value 'Left'
	'Right'	'Stop'	
# CameraPanTilt example InterfaceName.Set('CameraPanTilt', 'Up')			
Command CameraPresetLoad	Value '0' – '99'		
# CameraPresetLoad example InterfaceName.Set('CameraPresetLoad', '0')			
Command CameraPresetSave	Value '0' – '99'		
# CameraPresetSave example InterfaceName.Set('CameraPresetSave', '0')			
Command CameraZoom	Value 'Zoom In'	Value 'Zoom Out'	Value 'Stop'
# CameraZoom example InterfaceName.Set('CameraZoom', 'Zoom In')			
Command Hook	Value 'Answer'	Value 'Reject'	Value 'Disconnect'
# Hook example InterfaceName.Set('Hook', 'Answer')			

Global Scripter Module Communication Sheet

Command	Value	Value	Value
IRRemoteEmulation	'0'	'1'	'2'
	'3'	'4'	'5'
	'6'	'7'	'8'
	'9'	'.'	'Enter'
	'Back'	'Up'	'Down'
	'Left'	'Right'	'Call'
	'Hang Up'	'Home'	'Info'
	'Present VGA' ^{2, 3}	'Phonebook'	'Layout'
	'Dual'	'Input'	'Far'
	'Preset' ¹	'Zoom In'	'Zoom Out'
	'Mute'	'Volume Up'	'Volume Down'
	'Record' ^{1, 3}	'Delete'	'Keypad'
	'Resolution'	'Present'	
# IRRemoteEmulation example InterfaceName.Set('IRRemoteEmulation', '0')			
Command	Value		
MicGain	1 to 9 in steps of 1		
# MicGain example InterfaceName.Set('MicGain', 9)			
Command	Value	Value	Value
MicInput	'Mic In'	'Audio In with AEC'	'Audio In without AEC'
# MicInput example InterfaceName.Set('MicInput', 'Mic In')			
Command	Value		
PhonebookDial	None		
# PhonebookDial example InterfaceName.Set('PhonebookDial', None)			
Command	Value	Value	Value
PhonebookNavigation	'Up'	'Down'	'Page Up'
	'Page Down'		
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command	Value		
PhonebookSearch	'String'		
# PhonebookSearch example InterfaceName.Set('PhonebookSearch', 'String')			
Command	Value		
PhonebookSearchSet	1 – 10		
# PhonebookSearchSet example			

InterfaceName.Set('PhonebookSearchSet', 10)	
Command PhonebookUpdate	Value None
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', None)	
Command VideoSwitchLayout	Value None
# VideoSwitchLayout example InterfaceName.Set('VideoSwitchLayout', None)	
Command VideoSwitchSingleDualMo nitor	Value None
# VideoSwitchSingleDualMonitor example InterfaceName.Set('VideoSwitchSingleDualMonitor', None)	
Command Volume	Value 0 to 32 in steps of 1
# Volume example InterfaceName.Set('Volume', 32)	

¹ Only for Models: EVC300, EVC900

² Only for Model: EVC100

³ Only for Model: EVC130

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus and PhonebookSearchResult do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Auto'	Value '1024 x 768 (4:3)'	Value '1280 x 720 (16:9)'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AutoAnswer	Value 'On' 'Do Not Disturb'	Value 'Off'	Value 'On with Mute'
# AutoAnswer examples InterfaceName.Update('AutoAnswer') Value = InterfaceName.ReadStatus('AutoAnswer') InterfaceName.SubscribeStatus('AutoAnswer', None, FeedbackHandler)			
Command CallStatus	Value 'Connected'	Value 'Not In Call'	
# CallStatus examples InterfaceName.Update('CallStatus') Value = InterfaceName.ReadStatus('CallStatus') InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command IncomingCallStatus	Value 'Ringing'	Value 'Not Ringing'	
# IncomingCallStatus examples InterfaceName.Update('IncomingCallStatus')			

Global Scripter Module Communication Sheet

<pre>Value = InterfaceName.ReadStatus('IncomingCallStatus') InterfaceName.SubscribeStatus('IncomingCallStatus', None, FeedbackHandler)</pre>			
Command LocalMuteStatus	Value 'On'	Value 'Off'	
<pre># LocalMuteStatus examples InterfaceName.Update('LocalMuteStatus') Value = InterfaceName.ReadStatus('LocalMuteStatus') InterfaceName.SubscribeStatus('LocalMuteStatus', None, FeedbackHandler)</pre>			
Command MicGain	Value 1 to 9 in steps of 1		
<pre># MicGain examples InterfaceName.Update('MicGain') Value = InterfaceName.ReadStatus('MicGain') InterfaceName.SubscribeStatus('MicGain', None, FeedbackHandler)</pre>			
Command MicInput	Value 'Mic In'	Value 'Audio In with AEC'	Value 'Audio In without AEC'
<pre># MicInput examples InterfaceName.Update('MicInput') Value = InterfaceName.ReadStatus('MicInput') InterfaceName.SubscribeStatus('MicInput', None, FeedbackHandler)</pre>			
Command PhonebookSearchResult	Value 'String'		
Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
<pre># PhonebookSearchResult examples Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)</pre>			
Command Volume	Value 0 to 32 in steps of 1		
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to USB Serial Cable, contact manufacturer for details.

Notes for the Device

Login credentials supported. Default password: 1234.

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

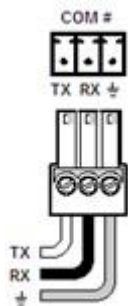

Please contact manufacturer for details.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Username:	Username
Default Password:	1234
Multi-Connection	Yes
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

For Multi-Connection, a maximum of 10 sessions is allowed at a single time.

Appendix A. Set Commands

Aspect Ratio 1024 x 768 (4:3)	set System/AspectRatio 1\x0D
Aspect Ratio 1280 x 720 (16:9)	set System/AspectRatio 2\x0D
Aspect Ratio Auto	set System/AspectRatio 0\x0D
Auto Answer Do Not Disturb	set Call/AutoAnswer 3\x0D
Auto Answer Off	set Call/AutoAnswer 0\x0D
Auto Answer On	set Call/AutoAnswer 1\x0D
Auto Answer On with Mute	set Call/AutoAnswer 2\x0D
Camera Input Switch None	action Camera/InputSourceSwitch\x0D
Camera Pan Tilt Down	action Camera/StepMove/Down\x0D
Camera Pan Tilt Left	action Camera/StepMove/Left\x0D
Camera Pan Tilt Right	action Camera/StepMove/Right\x0D
Camera Pan Tilt Stop	action Camera/StopMove\x0D
Camera Pan Tilt Up	action Camera/StepMove/Up\x0D
Camera Preset Load 0	set Camera/LoadPreset 0\x0D
Camera Preset Load 99	set Camera/LoadPreset 99\x0D
Camera Preset Save 0	set Camera/SavePreset 0\x0D
Camera Preset Save 99	set Camera/SavePreset 99\x0D
Camera Zoom Stop	action Camera/StopMove\x0D
Camera Zoom Zoom In	action Camera/StepMove/ZoomIn\x0D
Camera Zoom Zoom Out	action Camera/StepMove/ZoomOut\x0D
Hook Answer	action Call/AnswerCall\x0D
Hook Disconnect	action Call/DisconnectAll\x0D
Hook Reject	action Call/RejectCall\x0D
IR Remote Emulation .	action UI/IR/dot\x0D
IR Remote Emulation 0	action UI/IR/0\x0D
IR Remote Emulation 9	action UI/IR/9\x0D
IR Remote Emulation Back	action UI/IR/back\x0D
IR Remote Emulation Call	action UI/IR/call\x0D
IR Remote Emulation Delete	action UI/IR/delete\x0D
IR Remote Emulation Down	action UI/IR/down\x0D
IR Remote Emulation Dual	action UI/IR/dual\x0D
IR Remote Emulation Enter	action UI/IR/enter\x0D
IR Remote Emulation Far	action UI/IR/far\x0D
IR Remote Emulation Hang Up	action UI/IR/hangup\x0D
IR Remote Emulation Home	action UI/IR/home\x0D
IR Remote Emulation Info	action UI/IR/info\x0D
IR Remote Emulation Input	action UI/IR/input\x0D
IR Remote Emulation Keypad	action UI/IR/keypad\x0D
IR Remote Emulation Layout	action UI/IR/layout\x0D
IR Remote Emulation Left	action UI/IR/left\x0D
IR Remote Emulation Mute	action UI/IR/mute\x0D

IR Remote Emulation Phonebook	action UI/IR/phonebook\x0D
IR Remote Emulation Present	action UI/IR/present\x0D
IR Remote Emulation Present VGA	action UI/IR/present_vga\x0D
IR Remote Emulation Preset	action UI/IR/preset\x0D
IR Remote Emulation Record	action UI/IR/record\x0D
IR Remote Emulation Resolution	action UI/IR/resolution\x0D
IR Remote Emulation Right	action UI/IR/right\x0D
IR Remote Emulation Up	action UI/IR/up\x0D
IR Remote Emulation Volume Down	action UI/IR/vol_down\x0D
IR Remote Emulation Volume Up	action UI/IR/vol_up\x0D
IR Remote Emulation Zoom In	action UI/IR/zoom_in\x0D
IR Remote Emulation Zoom Out	action UI/IR/zoom_out\x0D
Mic Gain 1	set Audio/MicGain 0\x0D
Mic Gain 9	set Audio/MicGain 8\x0D
Mic Input Audio In with AEC	set Audio/MicInput 1\x0D
Mic Input Audio In without AEC	set Audio/MicInput 2\x0D
Mic Input Mic In	set Audio/MicInput 0\x0D
Video Switch Layout None	action Video/SwitchLayout\x0D
Video Switch Single Dual Monitor None	action Video/SwitchSingleDualMonitor\x0D
Volume 0	set Audio/Volume 0\x0D
Volume 32	set Audio/Volume 32\x0D

Appendix B. Query Commands

Aspect Ratio	get System/AspectRatio\x0D
Auto Answer	get Call/AutoAnswer\x0D
Call Status	get Call/Connected[1]\x0D
Incoming Call Status	get Call/CallInStatus\x0D
Keep alive	nop\x0D
Mic Gain	get Audio/MicGain\x0D
Mic Input	get Audio/MicInput\x0D
Volume	get Audio/Volume\x0D