
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AViPAS
Firmware Version: N/A
Model(s): AV-1560

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.14.0000-b007	2.13.0

Version History

Module Version	Date	Notes
1_0_0_0	10/28/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '7'.
Example: `InterfaceName.DeviceID = '1'`
- For ethernet control, the TCP port will close when the power on command is sent to it.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AV-1560')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AV-1560')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5678, Model='AV-1560')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
AutoFocus	'On'	'Off'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'On')			
Command	Value	Value	Value
Focus	'Far'	'Near'	'Stop'
Qualifier Key	Qualifier Value		
'Speed'	0 – 7		
# Focus example InterfaceName.Set('Focus', 'Far', {'Speed': 7})			
Command	Value	Value	Value
Iris	'Up'	'Down'	'Reset'
# Iris example InterfaceName.Set('Iris', 'Up')			
Command	Value	Value	Value
PanTilt	'Up'	'Down'	'Left'
	'Right'	'Up Left'	'Up Right'
	'Down Left'	'Down Right'	'Stop'
	'Home'	'Reset'	
Qualifier Key	Qualifier Value		
'Pan Speed'	1 – 24		
Qualifier Key	Qualifier Value		
'Tilt Speed'	1 – 20		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Pan Speed': 24, 'Tilt Speed': 20})			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
Preset	0 – 254		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Action'	'Save'	'Recall'	'Reset'
# Preset example InterfaceName.Set('Preset', 254, {'Action': 'Save'})			
Command	Value	Value	Value
Zoom	'Tele'	'Wide'	'Stop'
Qualifier Key	Qualifier Value		
'Speed'	0 – 7		
# Zoom example InterfaceName.Set('Zoom', 'Tele', {'Speed': 7})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},  
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AutoFocus	'On'	'Off'	
# AutoFocus example InterfaceName.Update('AutoFocus') Value = InterfaceName.ReadStatus('AutoFocus') InterfaceName.SubscribeStatus('AutoFocus', None, FeedbackHandler)			
Command	Value	Value	Value
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Power	'On'	'Off'	'Internal Power Circuit Error'
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Cable and Adapter Requirements

(RS-232) Captive Screw to Male Mini-DIN 8-Pin RS-232 Serial Cable

(RS-485) Captive Screw to Captive Screw RS-485 Serial Cable

Notes for the Device

To ensure the functionality of the module, please set Menu → Communication Setup → **Protocol** to **VISCA**.

Serial communication

Port Type: RS-232, RS-485

Baud Rate: 9600

Data Bits: 8


Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram


RS-232:

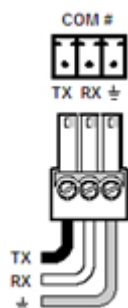


Signal	Main Cable	Pin	Signal
TxD	→	5	RxD
RxD	←	3	TxD
GND		4	GND



RS-485:

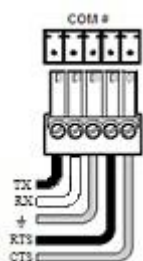

Signal	Main Cable	Signal
TxD	—	D-
RxD	—	D-
RTS	—	D+
CTS	—	D+

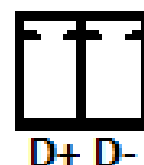

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 5678

Logon Credentials No

Supported:

Multi-Connection Undetermined

Capabilities:

Port Changeability: Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the module, please set Menu → Communication Setup → **Protocol** to **VISCA**.
When supplying the port number to Global Scriptor, please use the **PTZ Port** listed under Network → Port Settings in the camera's web interface.

Appendix A. Set Commands (Device ID: 1)

Auto Focus Off	\x81\x01\x048\x03\xff
Auto Focus On	\x81\x01\x048\x02\xff
Focus Far Speed 0	\x81\x01\x04\x08 \xff
Focus Far Speed 7	\x81\x01\x04\x08' \xff
Focus Near Speed 0	\x81\x01\x04\x080\xff
Focus Near Speed 7	\x81\x01\x04\x087\xff
Focus Stop Speed 0	\x81\x01\x04\x08\x00\xff
Focus Stop Speed 7	\x81\x01\x04\x08\x00\xff
Iris Down	\x81\x01\x04\x0B\x03\xff
Iris Reset	\x81\x01\x04\x0B\x00\xff
Iris Up	\x81\x01\x04\x0B\x02\xff
Pan Tilt Down Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\xff
Pan Tilt Down Left Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x01\x02\xff
Pan Tilt Down Left Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x01\x02\xff
Pan Tilt Down Left Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x01\x02\xff
Pan Tilt Down Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\x02\xff
Pan Tilt Down Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x03\x02\xff
Pan Tilt Down Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\x02\xff
Pan Tilt Down Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x03\x02\xff
Pan Tilt Down Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\x02\xff
Pan Tilt Down Right Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x02\x02\xff
Pan Tilt Down Right Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x02\x02\xff
Pan Tilt Down Right Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x02\x02\xff
Pan Tilt Home Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x04\xff
Pan Tilt Home Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x04\xff
Pan Tilt Home Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x04\xff
Pan Tilt Home Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x04\xff
Pan Tilt Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\xff
Pan Tilt Left Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x01\x03\xff
Pan Tilt Left Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x01\x03\xff
Pan Tilt Left Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x01\x03\xff
Pan Tilt Reset Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x05\xff
Pan Tilt Reset Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x05\xff
Pan Tilt Reset Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x05\xff
Pan Tilt Reset Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x05\xff
Pan Tilt Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x02\x03\xff
Pan Tilt Right Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x02\x03\xff
Pan Tilt Right Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x02\x03\xff
Pan Tilt Right Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x02\x03\xff
Pan Tilt Stop Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x03\x03\xff
Pan Tilt Stop Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x03\x03\xff
Pan Tilt Stop Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\x03\xff

**Global Scriptor Module
Communication Sheet**

Revision: 10/28/2021

Pan Tilt Stop Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x03\x03\xff
Pan Tilt Up Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x01\xff
Pan Tilt Up Left Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x01\x01\xff
Pan Tilt Up Left Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x01\xff
Pan Tilt Up Left Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x01\x01\xff
Pan Tilt Up Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\xff
Pan Tilt Up Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x03\xff
Pan Tilt Up Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\xff
Pan Tilt Up Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x03\xff
Pan Tilt Up Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\xff
Pan Tilt Up Right Pan Speed 1 Tilt Speed 20	\x81\x01\x06\x01\x01\x14\x02\xff
Pan Tilt Up Right Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x02\xff
Pan Tilt Up Right Pan Speed 24 Tilt Speed 20	\x81\x01\x06\x01\x18\x14\x02\xff
Power Off	\x81\x01\x04\x00\x03\xff
Power On	\x81\x01\x04\x00\x02\xff
Preset 0 Action Recall	\x81\x01\x04?\x02\x00\xff
Preset 0 Action Reset	\x81\x01\x04?\x00\x00\xff
Preset 0 Action Save	\x81\x01\x04?\x01\x00\xff
Preset 254 Action Recall	\x81\x01\x04?\x02\xFE\xff
Preset 254 Action Reset	\x81\x01\x04?\x00\xFE\xff
Preset 254 Action Save	\x81\x01\x04?\x01\xFE\xff
Zoom Stop Speed 0	\x81\x01\x04\x07\x00\xff
Zoom Stop Speed 7	\x81\x01\x04\x07\x00\xff
Zoom Tele Speed 0	\x81\x01\x04\x07 \xff
Zoom Tele Speed 7	\x81\x01\x04\x07' \xff
Zoom Wide Speed 0	\x81\x01\x04\x070\xff
Zoom Wide Speed 7	\x81\x01\x04\x077\xff

Appendix B. Update Commands (Device ID: 1)

Auto Focus	\x81\x09\x048\xff
Power	\x81\x09\x04\x00\xff