

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AVer
Firmware Version: CAM520: 0.0.0018.20
CAM540: 0.0.6002.33
Model(s): VC520, CAM520, CAM530, CAM540

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_1_0	8/23/2019	Added model CAM540. Added Pan Speed and Tilt Speed parameters to Pan Tilt command. Added Power command for models CAMVC520, CAM520, and CAM530. Renamed Firmware command to Version.
1_0_4_0	4/24/2019	Added pin assignment diagram and Firmware command.
1_0_1_0	12/20/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to 7.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='VC520')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='VC520')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command PanTilt	Value 'Stop' 'Left'	Value 'Up' 'Right'	Value 'Down'
Qualifier Key 'Pan Speed'	Qualifier Value '0' - '17'		
Qualifier Key 'Tilt Speed'	Qualifier Value '0' - '17'		
# PanTilt example InterfaceName.Set('PanTilt', 'Stop', {'Pan Speed': '10', 'Tilt Speed': '10'})			
Command Power ¹	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Preset	Value '0' – '9'		
Qualifier Key 'Action'	Qualifier Value 'Recall'	Qualifier Value 'Save'	
# Preset example InterfaceName.Set('Preset', '0', {'Action': 'Recall'})			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
# Zoom example InterfaceName.Set('Zoom', 'Stop')			

¹ Not supported for model: CAM540

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
Version	'String'	
# Version example InterfaceName.Update('Version') Value = InterfaceName.ReadStatus('Version') InterfaceName.SubscribeStatus('Version', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to Male 6 Pin MINI DIN

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

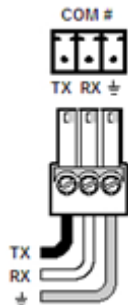

Signal	Main Cable	Pin	Signal
TxD		4	TxD
RxD		6	RxD
GND		5	GND

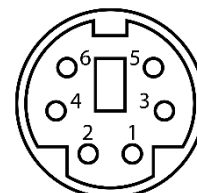

Appendix A. Set Commands

Pan Tilt Down Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x02\xFF
Pan Tilt Down Left Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x01\x02\xFF
Pan Tilt Down Left Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x01\x02\xFF
Pan Tilt Down Left Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x01\x02\xFF
Pan Tilt Down Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x02\xFF
Pan Tilt Down Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x03\x02\xFF
Pan Tilt Down Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x03\x02\xFF
Pan Tilt Down Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x03\x02\xFF
Pan Tilt Down Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x02\xFF
Pan Tilt Down Right Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x02\x02\xFF
Pan Tilt Down Right Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x02\x02\xFF
Pan Tilt Down Right Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x02\x02\xFF
Pan Tilt Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x03\xFF
Pan Tilt Left Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x01\x03\xFF
Pan Tilt Left Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x01\x03\xFF
Pan Tilt Left Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x01\x03\xFF
Pan Tilt Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x03\xFF
Pan Tilt Right Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x02\x03\xFF
Pan Tilt Right Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x02\x03\xFF
Pan Tilt Right Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x02\x03\xFF
Pan Tilt Stop Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Up Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x01\xFF
Pan Tilt Up Left Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x01\x01\xFF
Pan Tilt Up Left Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x01\x01\xFF
Pan Tilt Up Left Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x01\x01\xFF
Pan Tilt Up Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x01\xFF
Pan Tilt Up Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x03\x01\xFF
Pan Tilt Up Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x03\x01\xFF
Pan Tilt Up Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x03\x01\xFF
Pan Tilt Up Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x01\xFF
Pan Tilt Up Right Pan Speed 0 Tilt Speed 17	\x81\x01\x06\x01\x00\x11\x02\x01\xFF
Pan Tilt Up Right Pan Speed 17 Tilt Speed 0	\x81\x01\x06\x01\x11\x00\x02\x01\xFF
Pan Tilt Up Right Pan Speed 17 Tilt Speed 17	\x81\x01\x06\x01\x11\x11\x02\x01\xFF
Power Off	\x81\x01\x04\x00\x03\xFF
Power On	\x81\x01\x04\x00\x02\xFF
Preset 0 Action Recall	\x81\x01\x04?\x02\x00\xFF
Preset 0 Action Save	\x81\x01\x04?\x01\x00\xFF
Preset 9 Action Recall	\x81\x01\x04?\x02\x09\xFF
Preset 9 Action Save	\x81\x01\x04?\x01\x09\xFF

Global Scriptor Module Communication Sheet

Zoom Stop	\x81\x01\x04\x07\x00\xff
Zoom Tele	\x81\x01\x04\x07 \xff
Zoom Wide	\x81\x01\x04\x070\xff

Appendix B. Update Commands

Version	\x81\x09\x00\x02\xff
---------	----------------------