

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Document Camera
Manufacturer: AVer
Firmware Version: N/A
Model(s): AVerVision F50HD, AVerVision F50-8M

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.1

Version History

Module Version	Date	Notes
1_0_1_0	1/8/2018	Added model AVerVision F50-8M.
1_0_0_0	1/10/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AVerVision F50HD')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AVerVision F50HD')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
AutoImage	'On'	'Off'	
# AutoImage example InterfaceName.Set('AutoImage', 'On')			
Command	Value		
Brightness	1 to 64 in steps of 1		
# Brightness example InterfaceName.Set('Brightness', 64)			
Command	Value		
Contrast	1 to 32 in steps of 1		
# Contrast example InterfaceName.Set('Contrast', 32)			
Command	Value	Value	Value
Focus	'Far'	'Near'	'Auto'
# Focus example InterfaceName.Set('Focus', 'Far')			
Command	Value		
Freeze	'Toggle'		
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command	Value	Value	
Lamp	'On'	'Off'	
# Lamp example InterfaceName.Set('Lamp', 'On')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'Menu'	'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	Value
Mode	'Camera'	'Playback'	'Pass Through'
# Mode example InterfaceName.Set('Mode', 'Camera')			
Command	Value	Value	

PIPMODE	'On'	'Off'	
# PIPMode example InterfaceName.Set('PIPMODE', 'On')			
Command PIPPosition	Value 'Top Left' 'Bottom Right'	Value 'Top Right'	Value 'Bottom Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Top Left')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command PresetRecall	Value '1' – '3'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '3'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command SplitScreenMode	Value 'On'	Value 'Off'	
# SplitScreenMode example InterfaceName.Set('SplitScreenMode', 'On')			
Command SplitScreenPosition	Value 'Up' 'Right'	Value 'Down'	Value 'Left'
# SplitScreenPosition example InterfaceName.Set('SplitScreenPosition', 'Up')			
Command Zoom	Value 'Up'	Value 'Down'	Value 'Reset'
# Zoom example InterfaceName.Set('Zoom', 'Up')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	
Brightness	1 to 64 in steps of 1	
# Brightness examples InterfaceName.Update('Brightness') Value = InterfaceName.ReadStatus('Brightness') InterfaceName.SubscribeStatus('Brightness', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
Contrast	1 to 32 in steps of 1	
# Contrast examples InterfaceName.Update('Contrast') Value = InterfaceName.ReadStatus('Contrast') InterfaceName.SubscribeStatus('Contrast', None, FeedbackHandler)		
Command	Value	Value
Freeze	'On'	'Off'
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)		
Command	Value	Value
Lamp	'On'	'Off'
# Lamp examples InterfaceName.Update('Lamp') Value = InterfaceName.ReadStatus('Lamp') InterfaceName.SubscribeStatus('Lamp', None, FeedbackHandler)		

Global Scripter Module Communication Sheet

Command Mode	Value 'Camera'	Value 'Playback'	Value 'Pass Through'
<pre># Mode examples InterfaceName.Update('Mode') Value = InterfaceName.ReadStatus('Mode') InterfaceName.SubscribeStatus('Mode', None, FeedbackHandler)</pre>			
Command Power	Value 'On'	Value 'Off'	
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoOutput	Value 'VGA'	Value 'TV'	
<pre># VideoOutput examples InterfaceName.Update('VideoOutput') Value = InterfaceName.ReadStatus('VideoOutput') InterfaceName.SubscribeStatus('VideoOutput', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

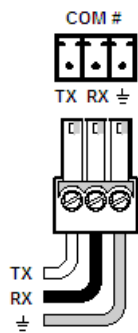

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

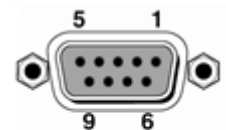

RS232 DB9 Female
Document Camera

Appendix A. Set Commands

Auto Image Off	R\x0B\x036\x00\x00Sm
Auto Image On	R\x0B\x036\x01\x00S1
Brightness 0	R\x0B\x03\x12\x02\x00SK
Brightness 63	R\x0B\x03\x12\x02?St
Brightness 1	R\x0B\x03\x12\x02\x01Sj
Brightness 64	R\x0B\x03\x12\x02@S\x0B
Contrast 0	R\x0B\x03\x11\x02\x00SH
Contrast 255	R\x0B\x03\x11\x02\xFFS\xB7
Contrast 1	R\x0B\x03\x11\x02\x01SI
Contrast 32	R\x0B\x03\x11\x02 Sh
Focus Auto	R\x0B\x03@\x00\x00S\x1B
Focus Far	R\x0B\x03H\x01\x00S\x13
Focus Near	R\x0B\x03H\x00\x00S\x12
Freeze Toggle	R\x0B\x03D\x00\x00S\x1F
Lamp Off	R\x0B\x03I\x00\x00S\x12
Lamp On	R\x0B\x03I\x01\x00S\x13
Menu Navigation Down	R\x0B\x03B\x00\x00S\x19
Menu Navigation Enter	R\x0B\x03C\x00\x00S\x18
Menu Navigation Left	R\x0B\x03B\x02\x00S\x1B
Menu Navigation Menu	R\x0B\x03A\x00\x00S\x1A
Menu Navigation Right	R\x0B\x03B\x03\x00S\x1A
Menu Navigation Up	R\x0B\x03B\x01\x00S\x18
Mode Camera	R\x0B\x03\x02\x00\x00SY
Mode Pass Through	R\x0B\x03\x04\x00\x00S_
Mode Playback	R\x0B\x03\x03\x00\x00SX
PIP Mode Off	R\x0B\x03\x1F\x00\x00SD
PIP Mode On	R\x0B\x03\x1F\x01\x00SE
PIP Position Bottom Left	R\x0B\x03 \x00\x00S{
PIP Position Bottom Right	R\x0B\x03 \x03\x00Sx
PIP Position Top Left	R\x0B\x03 \x01\x00Sz
PIP Position Top Right	R\x0B\x03 \x02\x00Sy
Power Off	R\x0B\x03\x01\x00\x00SZ
Power On	R\x0B\x03\x01\x01\x00S[
Preset Recall 1	R\x0B\x033\x00\x00Sh
Preset Recall 3	R\x0B\x033\x02\x00Sj
Preset Save 1	R\x0B\x032\x00\x00Si

Preset Save 3	R\x0B\x032\x02\x00Sk
Split Screen Mode Off	R\x0B\x03!\x00\x00Sz
Split Screen Mode On	R\x0B\x03!\x01\x00S{
Split Screen Position Down	R\x0B\x03"\x01\x00Sx
Split Screen Position Left	R\x0B\x03"\x02\x00S{
Split Screen Position Right	R\x0B\x03"\x03\x00Sz
Split Screen Position Up	R\x0B\x03"\x00\x00Sy
Zoom Down	R\x0B\x03F\x00\x00S\x1D
Zoom Reset	R\x0B\x03G\x00\x00S\x1C
Zoom Up	R\x0B\x03F\x01\x00S\x1C

Appendix B. Update Commands

Brightness	R\x0A\x01\x00ASR
Contrast	R\x0A\x01\x00BSS
Freeze	R\x0A\x01\x008SP
Lamp	R\x0A\x01\x005S]
Mode	R\x0A\x01\x006S^
Video Output	R\x0A\x01\x007S_