

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
Manufacturer: AVer
Firmware Version: 00.20.00.85/A005B202/0
Model(s): SVC100, SVC500

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_1_0	10/3/2018	Added Serial Control.
1_0_0_0	2/15/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword must be set accordingly.
Example: `InterfaceName.devicePassword = '1234'`
- MaxPhonebookLines variable must be set accordingly. Default value is '1'. Max Phonebook Lines ranges from RANGE.
Example: `InterfaceName.MaxPhonebookLines = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SVC100')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SVC100')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='SVC100')</code>

Phonebook Commands:

- Phonebook Update
 - Queries the device for an updated list of phonebook entries and saves them in Phonebook Result.
- Phonebook Result
 - This is where names from the phonebook are saved. The number of results are set by the driver parameter Max Phonebook Lines, this is initialized to 5 results by default. Simply drag this on a Text Feedback for displaying the search result.
- Phonebook Navigation
 - This command is for navigating through the phonebook results.
- Phonebook Set
 - The number selected with this command corresponds to the button in the Phonebook Result. It will copy the name to the Dial String command. Use the Call Out command to dial it.

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto'	Value '1024 x 768 (4:3)'	Value '1280 x 720 (16:9)'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command Call	Value 'Answer' 'Mute' 'Call Out'	Value 'Cancel Call Out' 'Reject'	Value 'Disconnect All' 'Hang Up'
Qualifier Key 'Number'	Qualifier Value 'String'		
# Call example InterfaceName.Set('Call', 'Answer', {'Number': ''}) InterfaceName.Set('Call', 'Call Out', {'Number': '123'})			
Command CameraMoveContinuous	Value 'Down' 'Up'	Value 'Left' 'Zoom In'	Value 'Right' 'Zoom Out'
# CameraMoveContinuous example InterfaceName.Set('CameraMoveContinuous', 'Down')			
Command CameraMoveStep	Value 'Down' 'Up'	Value 'Left' 'Zoom In'	Value 'Right' 'Zoom Out'
# CameraMoveStep example InterfaceName.Set('CameraMoveStep', 'Down')			
Command CameraMoveStop	Value None		
# CameraMoveStop example InterfaceName.Set('CameraMoveStop', None)			
Command CameraPreset	Value '0' – '99'		
Qualifier Key	Qualifier Value		Qualifier Value

'Action'	'Save'	'Restore'	
# CameraPreset example InterfaceName.Set('CameraPreset', '0', {'Action': 'Save'})			
Command CameraSelect	Value 'VC'	Value 'HDMI'	
# CameraSelect example InterfaceName.Set('CameraSelect', 'VC')			
Command CameraSource	Value 'First'	Value 'HDMI'	Value None
# CameraSource example InterfaceName.Set('CameraSource', 'First')			
Command Keypad	Value '0'	Value '1'	Value '2'
	'3'	'4'	'5'
	'6'	'7'	'8'
	'9'	'Dot'	
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Left'	Value 'Up'	Value 'Down'
	'Right'	'Home'	'Back'
	'Enter'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Left')			
Command MicrophoneGain	Value 0 to 8 in steps of 1		
# MicrophoneGain example InterfaceName.Set('MicrophoneGain', 8)			
Command MicrophoneInput	Value 'MIC In'	Value 'Audio In with AEC'	Value 'Audio In without AEC'
# MicrophoneInput example InterfaceName.Set('MicrophoneInput', 'MIC In')			
Command PhonebookNavigation	Value 'Up'	Value 'Down'	Value 'Page Up'
	'Page Down'		
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command PhonebookSet	Value 1 – 15		
# PhonebookSet example InterfaceName.Set('PhonebookSet', 15)			

Global Scripter Module Communication Sheet

Command PhonebookUpdate	Value None
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', None)	
Command Volume	Value 0 to 32 in steps of 1
# Volume example InterfaceName.Set('Volume', 32)	

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'Auto'	'1024 x 768 (4:3)'	'1280 x 720 (16:9)'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
CallInStatus	'Busy'	'Done'	
# CallInStatus examples InterfaceName.Update('CallInStatus') Value = InterfaceName.ReadStatus('CallInStatus') InterfaceName.SubscribeStatus('CallInStatus', None, FeedbackHandler)			
Command	Value	Value	Value
CallOutStatus	'Busy'	'Success'	'Failed'
# CallOutStatus examples InterfaceName.Update('CallOutStatus') Value = InterfaceName.ReadStatus('CallOutStatus') InterfaceName.SubscribeStatus('CallOutStatus', None, FeedbackHandler)			
Command	Value	Value	
CameraSelect	'VC'	'HDMI'	
# CameraSelect examples InterfaceName.Update('CameraSelect') Value = InterfaceName.ReadStatus('CameraSelect') InterfaceName.SubscribeStatus('CameraSelect', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus')			


Global Scripter Module Communication Sheet

Revision: 10/03/2018

InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value		
MicrophoneGain	0 to 8 in steps of 1		
# MicrophoneGain examples InterfaceName.Update('MicrophoneGain') Value = InterfaceName.ReadStatus('MicrophoneGain') InterfaceName.SubscribeStatus('MicrophoneGain', None, FeedbackHandler)			
Command	Value	Value	Value
MicrophoneInput	'MIC In'	'Audio In with AEC'	'Audio In without AEC'
# MicrophoneInput examples InterfaceName.Update('MicrophoneInput') Value = InterfaceName.ReadStatus('MicrophoneInput') InterfaceName.SubscribeStatus('MicrophoneInput', None, FeedbackHandler)			
Command	Value		
PhonebookResult	'String'		
Qualifier Key	Qualifier Value		
'Button'	1 to 15 in steps of 1		
# PhonebookResult examples InterfaceName.Update('PhonebookResult') Value = InterfaceName.ReadStatus('PhonebookResult', {'Button': 15}) InterfaceName.SubscribeStatus('PhonebookResult', None, FeedbackHandler)			
Command	Value		
Volume	0 to 32 in steps of 1		
# Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements:

Captive Screw to USB-to-RS232 converter

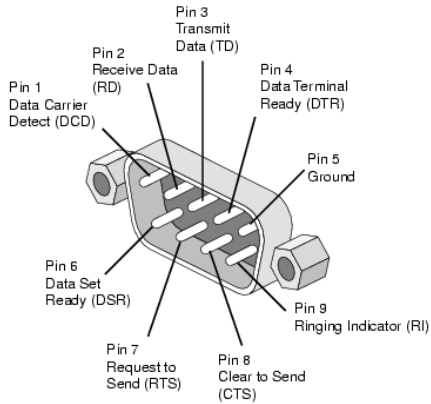

Notes for the Device:

- Default Password: 1234
- Use a USB to RS232 adapter to connect to the SVC USB port on the back of the unit.

Serial communication:

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

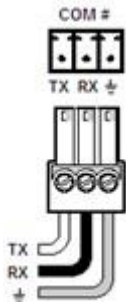

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND



General Notes:

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Default Password:	1234
Multi-Connection Capabilities:	Yes
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 1024 x 768 (4:3)	set System/AspectRatio 1\x0D\x0A
Aspect Ratio 1280 x 720 (16:9)	set System/AspectRatio 2\x0D\x0A
Aspect Ratio Auto	set System/AspectRatio 0\x0D\x0A
Call Answer	action Call/AnswerCall\x0D\x0A
Call Call Out	action Call/CallOutTo String\x0D\x0A
Call Cancel Call Out	action Call/CallOutCancel\x0D\x0A
Call Disconnect All	action Call/DisconnectAll\x0D\x0A
Call Hang Up	action UI/IR/hangup\x0D\x0A
Call Mute	action Call/Mute\x0D\x0A
Call Reject	action Call/RejectCall\x0D\x0A
Camera Move Continuous Down	action Camera/ContinuousMove/Down\x0D\x0A
Camera Move Continuous Left	action Camera/ContinuousMove/Left\x0D\x0A
Camera Move Continuous Right	action Camera/ContinuousMove/Right\x0D\x0A
Camera Move Continuous Up	action Camera/ContinuousMove/Up\x0D\x0A
Camera Move Continuous Zoom In	action Camera/ContinuousMove/ZoomIn\x0D\x0A
Camera Move Continuous Zoom Out	action Camera/ContinuousMove/ZoomOut\x0D\x0A
Camera Move Step Down	action Camera/StepMove/Down\x0D\x0A
Camera Move Step Left	action Camera/StepMove/Left\x0D\x0A
Camera Move Step Right	action Camera/StepMove/Right\x0D\x0A
Camera Move Step Up	action Camera/StepMove/Up\x0D\x0A
Camera Move Step Zoom In	action Camera/StepMove/ZoomIn\x0D\x0A
Camera Move Step Zoom Out	action Camera/StepMove/ZoomOut\x0D\x0A
Camera Move Stop None	action Camera/StopMove\x0D\x0A
Camera Preset 0 Action Restore	set Camera/LoadPreset 0\x0D\x0A
Camera Preset 99 Action Restore	set Camera/LoadPreset 99\x0D\x0A
Camera Preset 0 Action Save	set Camera/SavePreset 0\x0D\x0A
Camera Preset 99 Action Save	set Camera/SavePreset 99\x0D\x0A
Camera Select HDMI	set Camera/CameraSelector 1\x0D\x0A
Camera Select VC	set Camera/CameraSelector 0\x0D\x0A
Camera Source First	action Camera/SwitchSrc/1stCam\x0D\x0A
Camera Source HDMI	action Camera/SwitchSrc/HDMICam\x0D\x0A
Camera Source None	action Camera/SwitchSrc/NoCam\x0D\x0A
Keypad 0	action UI/IR/0\x0D\x0A
Keypad 9	action UI/IR/9\x0D\x0A
Keypad Dot	action UI/IR/dot\x0D\x0A
Menu Navigation Back	action UI/IR/back\x0D\x0A

Global Scripter Module Communication Sheet

Menu Navigation Down	action UI/IR/down\x0D\x0A
Menu Navigation Enter	action UI/IR/enter\x0D\x0A
Menu Navigation Home	action UI/IR/home\x0D\x0A
Menu Navigation Left	action UI/IR/left\x0D\x0A
Menu Navigation Right	action UI/IR/right\x0D\x0A
Menu Navigation Up	action UI/IR/up\x0D\x0A
Microphone Gain 0	set Audio/MicGain 0\x0D\x0A
Microphone Gain 8	set Audio/MicGain 8\x0D\x0A
Microphone Input Audio In with AEC	set Audio/MicInput 1\x0D\x0A
Microphone Input Audio In without AEC	set Audio/MicInput 2\x0D\x0A
Microphone Input MIC In	set Audio/MicInput 0\x0D\x0A
Volume 0	set Audio/Volume 0\x0D\x0A
Volume 32	set Audio/Volume 32\x0D\x0A

Appendix B. Update Commands

Aspect Ratio	get System/AspectRatio\x0D\x0A
Call In Status	get Call/CallInStatus\x0D\x0A
Call Out Status	get Call/CallOutStatus\x0D\x0A
Camera Select	get Camera/CameraSelector\x0D\x0A
Microphone Gain	get Audio/MicGain\x0D\x0A
Volume	get Audio/Volume\x0D\x0A