

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Controller
Manufacturer: Bang and Olufsen
Firmware Version: N/A
Model(s): BeoLink Gateway

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.03.0000-b006	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_0_0_0	11/3/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5
- All statuses are unsolicited. For ConnectionStatus please use following:
InterfaceName.Update('PingPong')

Control Commands, States, and Qualifiers:

Beo4Command	'1' – '30'		
['Command']	'SOURCE: STANDBY'	'SOURCE: SLEEP'	'SOURCE: TV'
	'SOURCE: RADIO'	'SOURCE: AUX_V / DTV2'	'SOURCE: AUX_A'
	'SOURCE: VTR / V.MEM / DVD2'	'SOURCE: CDV / DVD'	'SOURCE: CAMCORDER / CAMERA'
	'SOURCE: TEXT'	'SOURCE: V_SAT / DTV'	'SOURCE: PC'
	'SOURCE: DOORCAM / V.AUX2'	'SOURCE: TP1 / A.MEM'	'SOURCE: CD'
	'SOURCE: PH / N.RADIO'	'SOURCE: TP2 / N.MUSIC'	'SOURCE: CD2 / JOIN'
	'SOURCE: VTR2'	'SOURCE: MEDIA'	'SOURCE: WEB'
	'SOURCE: PHOTO'	'SOURCE: USB2'	'SOURCE: SERVER'
	'SOURCE: NET'	'SOURCE: PICTURE_IN_PICTURE / P-AND-P'	'DIGIT: 0'
	'DIGIT: 1'	'DIGIT: 2'	'DIGIT: 3'
	'DIGIT: 4'	'DIGIT: 5'	'DIGIT: 6'
	'DIGIT: 7'	'DIGIT: 8'	'DIGIT: 9'
	'CONTROL: STEP_UP'	'CONTROL: STEP_DW'	'CONTROL: REWIND'
	'CONTROL: REC_RETURN / RETURN'	'CONTROL: WIND'	'CONTROL: GO / PLAY'
	'CONTROL: STOP'	'CONTROL: CNTL_WIND / Yellow'	'CONTROL: CNTL_REWIND / Green'
	'CONTROL: CNTL_STEP_UP / Blue'	'CONTROL: CNTL_STEP_DW / Red'	'SOUND: MUTE'
	'SOUND: SOUND / SPEAKER'	'SOUND: ANALOG_UP_1 / Volume UP'	'SOUND: ANALOG_DW_1 / Volume DOWN'
	'PICTURE: MENU'	'PICTURE: PICTURE_TOGGLE / P.MUTE'	'PICTURE: PICTURE_FORMAT / FORMAT'
	'PICTURE: CINEMA_ON'	'PICTURE: CINEMA_OFF'	'OTHER: OPEN_STAND / STAND'
	'OTHER: CLEAR'	'OTHER: STORE'	'OTHER: RESET / INDEX'
	'OTHER: BACK'	'OTHER: CMD_A / MOTS'	'OTHER: GOTO / TRACK / LAMP'

	'OTHER: SHOW_CLOCK / CLOCK'	'OTHER: EJECT'	'OTHER: RECORD'
	'OTHER: MEDIUM_SELECT / SELECT'	'OTHER: TURN / SOUND'	'OTHER: EXIT'
	'OTHER: CNTL_0 / SHIFT-0 / EDIT'	'OTHER: CNTL_1 / SHIFT-1 / RANDOM'	'OTHER: CNTL_2 / SHIFT-2'
	'OTHER: CNTL_3 / SHIFT-3 / REPEAT'	'OTHER: CNTL_4 / SHIFT-4 / SELECT'	'OTHER: CNTL_5 / SHIFT-5'
	'OTHER: CNTL_6 / SHIFT-6'	'OTHER: CNTL_7 / SHIFT-7'	'OTHER: CNTL_8 / SHIFT-8'
	'OTHER: CNTL_9 / SHIFT-9'	'CONTINUE: C_REWIND / Continue REWIND'	'CONTINUE: C_WIND / Continue WIND'
	'CONTINUE: C_STEP_UP / Continue step UP'	'CONTINUE: C_STEP_DW / Continue step DOWN'	'CONTINUE: CONTINUE / Continue (other keys)'
	'CONTINUE: CNTL_C_REWIND / Continue Green'	'CONTINUE: CNTL_C_WIND / Continue Yellow'	'CONTINUE: CNTL_C_STEP_UP / Continue Blue'
	'CONTINUE: CNTL_C_STEP_DW / Continue Red'	'CONTINUE: KEY_RELEASE'	'FUNCTION_1'
	'FUNCTION_2'	'FUNCTION_3'	'FUNCTION_4'
	'FUNCTION_5'	'FUNCTION_6'	'FUNCTION_7'
	'FUNCTION_8'	'FUNCTION_9'	'FUNCTION_10'
	'FUNCTION_11'	'FUNCTION_12'	'FUNCTION_13'
	'FUNCTION_14'	'FUNCTION_15'	'FUNCTION_16'
	'FUNCTION_17'	'FUNCTION_18'	'FUNCTION_19'
	'FUNCTION_20'	'FUNCTION_21'	'FUNCTION_22'
	'FUNCTION_23'	'FUNCTION_24'	'FUNCTION_25'
	'FUNCTION_26'	'FUNCTION_27'	'FUNCTION_28'
	'FUNCTION_29'	'FUNCTION_30'	'FUNCTION_31'
	'FUNCTION_32'	'FUNCTION_33'	'FUNCTION_34'
	'FUNCTION_35'	'FUNCTION_36'	'FUNCTION_37'
	'FUNCTION_38'	'FUNCTION_39'	'FUNCTION_40'
	'CURSOR: SELECT'	'CURSOR: UP'	'CURSOR: DW'
	'CURSOR: LEFT'	'CURSOR: RIGHT'	
['Destination']	'Video Source'	'Audio Source'	'V.TAPE/V.MEM'
	'All Products'		

BeoRemoteOneControlCommand	'1' – '30'		
['Command']	'SOURCE: STANDBY' 'SOURCE: RADIO' 'SOURCE: VTR / V.MEM / DVD2' 'SOURCE: TEXT' 'SOURCE: DOORCAM / V.AUX2' 'SOURCE: PH / N.RADIO' 'SOURCE: VTR2' 'SOURCE: PHOTO' 'SOURCE: NET' 'DIGIT: 1' 'DIGIT: 4' 'DIGIT: 7' 'CONTROL: STEP_UP' 'CONTROL: REC_RETURN / RETURN' 'CONTROL: STOP' 'CONTROL: CNTL_STEP_UP / Blue' 'SOUND: SOUND / SPEAKER' 'PICTURE: MENU' 'PICTURE: CINEMA_ON' 'OTHER: CLEAR' 'OTHER: BACK' 'OTHER: SHOW_CLOCK / CLOCK'	'SOURCE: SLEEP' 'SOURCE: AUX_V / DTV2' 'SOURCE: CDV / DVD' 'SOURCE: V_SAT / DTV' 'SOURCE: TP1 / A.MEM' 'SOURCE: TP2 / N.MUSIC' 'SOURCE: MEDIA' 'SOURCE: USB2' 'SOURCE: PICTURE_IN_PICTURE / P-AND-P' 'DIGIT: 2' 'DIGIT: 5' 'DIGIT: 8' 'CONTROL: STEP_DW' 'CONTROL: WIND' 'CONTROL: CNTL_WIND / Yellow' 'CONTROL: CNTL_STEP_DW / Red' 'SOUND: ANALOG_UP_1 / Volume UP' 'PICTURE: PICTURE_TOGGLE / P.MUTE' 'PICTURE: CINEMA_OFF' 'OTHER: STORE' 'OTHER: CMD_A / MOTS' 'OTHER: EJECT'	'SOURCE: TV' 'SOURCE: AUX_A' 'SOURCE: CAMCORDER / CAMERA' 'SOURCE: PC' 'SOURCE: CD' 'SOURCE: CD2 / JOIN' 'SOURCE: WEB' 'SOURCE: SERVER' 'DIGIT: 0' 'DIGIT: 3' 'DIGIT: 6' 'DIGIT: 9' 'CONTROL: REWIND' 'CONTROL: GO / PLAY' 'CONTROL: CNTL_REWIND / Green' 'SOUND: MUTE' 'SOUND: ANALOG_DW_1 / Volume DOWN' 'PICTURE: PICTURE_FORMAT / FORMAT' 'OTHER: OPEN_STAND / STAND' 'OTHER: RESET / INDEX' 'OTHER: GOTO / TRACK / LAMP' 'OTHER: RECORD'

	'OTHER: MEDIUM_SELECT / SELECT'	'OTHER: TURN / SOUND'	'OTHER: EXIT'
	'OTHER: CNTL_0 / SHIFT-0 / EDIT'	'OTHER: CNTL_1 / SHIFT-1 / RANDOM'	'OTHER: CNTL_2 / SHIFT-2'
	'OTHER: CNTL_3 / SHIFT-3 / REPEAT'	'OTHER: CNTL_4 / SHIFT-4 / SELECT'	'OTHER: CNTL_5 / SHIFT-5'
	'OTHER: CNTL_6 / SHIFT-6'	'OTHER: CNTL_7 / SHIFT-7'	'OTHER: CNTL_8 / SHIFT-8'
	'OTHER: CNTL_9 / SHIFT-9'	'CONTINUE: C_REWIND / Continue REWIND'	'CONTINUE: C_WIND / Continue WIND'
	'CONTINUE: C_STEP_UP / Continue step UP'	'CONTINUE: C_STEP_DW / Continue step DOWN'	'CONTINUE: CONTINUE / Continue (other keys)'
	'CONTINUE: CNTL_C_REWIND / Continue Green'	'CONTINUE: CNTL_C_WIND / Continue Yellow'	'CONTINUE: CNTL_C_STEP_UP / Continue Blue'
	'CONTINUE: CNTL_C_STEP_DW / Continue Red'	'CONTINUE: KEY_RELEASE'	'FUNCTION_1'
	'FUNCTION_2'	'FUNCTION_3'	'FUNCTION_4'
	'FUNCTION_5'	'FUNCTION_6'	'FUNCTION_7'
	'FUNCTION_8'	'FUNCTION_9'	'FUNCTION_10'
	'FUNCTION_11'	'FUNCTION_12'	'FUNCTION_13'
	'FUNCTION_14'	'FUNCTION_15'	'FUNCTION_16'
	'FUNCTION_17'	'FUNCTION_18'	'FUNCTION_19'
	'FUNCTION_20'	'FUNCTION_21'	'FUNCTION_22'
	'FUNCTION_23'	'FUNCTION_24'	'FUNCTION_25'
	'FUNCTION_26'	'FUNCTION_27'	'FUNCTION_28'
	'FUNCTION_29'	'FUNCTION_30'	'FUNCTION_31'
	'FUNCTION_32'	'FUNCTION_33'	'FUNCTION_34'
	'FUNCTION_35'	'FUNCTION_36'	'FUNCTION_37'
	'FUNCTION_38'	'FUNCTION_39'	'FUNCTION_40'
	'CURSOR: SELECT'	'CURSOR: UP'	'CURSOR: DW'
	'CURSOR: LEFT'	'CURSOR: RIGHT'	
['Network']	'Local Source'	'Remote Source'	

BeoRemoteOneSourceSelection	'1' – '30'		
['Command']	'TV'	'RADIO'	'TUNEIN'
	'DVB RADIO'	'AV IN'	'LINE IN'
	'A.AUX'	'BLUETOOTH'	'HOMEMEDIA'
	'DLNA-DMR'	'RECORDINGS'	'CAMERA'
	'USB'	'USB 2'	'A.MEM'
	'CD'	'NET RADIO'	'MUSIC'
	'DLNA-DMR'	'AirPlay'	'SPOTIFY'
	'DEEZER'	'QPLAY'	'JOIN (toggle)'
	'WEBMEDIA'	'YOUTUBE'	'HOME APP'
	'HDMI 1'	'HDMI 2'	'HDMI 3'
	'HDMI 4'	'HDMI 5'	'HDMI 6'
	'HDMI 7'	'HDMI 8'	'MATRIX 1'
	'MATRIX 2'	'MATRIX 3'	'MATRIX 4'
	'MATRIX 5'	'MATRIX 6'	'MATRIX 7'
	'MATRIX 8'	'MATRIX 9'	'MATRIX 10'
	'MATRIX 11'	'MATRIX 12'	'MATRIX 13'
	'MATRIX 14'	'MATRIX 15'	'MATRIX 16'
	'PERSONAL 1'	'PERSONAL 2'	'PERSONAL 3'
	'PERSONAL 4'	'PERSONAL 5'	'PERSONAL 6'
	'PERSONAL 7'	'PERSONAL 8'	'TV ON'
	'MUSIC ON'	'PATTERNPLAY'	
	['Network']	'Local Source'	'Remote Source'

Status Available:

Beo4Command	'1' – '30'		
['Command']	'SOURCE: STANDBY'	'SOURCE: SLEEP'	'SOURCE: TV'
	'SOURCE: RADIO'	'SOURCE: AUX_V / DTV2'	'SOURCE: AUX_A'
	'SOURCE: VTR / V.MEM / DVD2'	'SOURCE: CDV / DVD'	'SOURCE: CAMCORDER / CAMERA'
	'SOURCE: TEXT'	'SOURCE: V_SAT / DTV'	'SOURCE: PC'
	'SOURCE: DOORCAM / V.AUX2'	'SOURCE: TP1 / A.MEM'	'SOURCE: CD'
	'SOURCE: PH / N.RADIO'	'SOURCE: TP2 / N.MUSIC'	'SOURCE: CD2 / JOIN'
	'SOURCE: VTR2'	'SOURCE: MEDIA'	'SOURCE: WEB'
	'SOURCE: PHOTO'	'SOURCE: USB2'	'SOURCE: SERVER'
	'SOURCE: NET'	'SOURCE: PICTURE_IN_PICTURE / P-AND-P'	'DIGIT: 0'
	'DIGIT: 1'	'DIGIT: 2'	'DIGIT: 3'
	'DIGIT: 4'	'DIGIT: 5'	'DIGIT: 6'
	'DIGIT: 7'	'DIGIT: 8'	'DIGIT: 9'
	'CONTROL: STEP_UP'	'CONTROL: STEP_DW'	'CONTROL: REWIND'
	'CONTROL: REC_RETURN / RETURN'	'CONTROL: WIND'	'CONTROL: GO / PLAY'
	'CONTROL: STOP'	'CONTROL: CNTL_WIND / Yellow'	'CONTROL: CNTL_REWIND / Green'
	'CONTROL: CNTL_STEP_UP / Blue'	'CONTROL: CNTL_STEP_DW / Red'	'SOUND: MUTE'
	'SOUND: SOUND / SPEAKER'	'SOUND: ANALOG_UP_1 / Volume UP'	'SOUND: ANALOG_DW_1 / Volume DOWN'
	'PICTURE: MENU'	'PICTURE: PICTURE_TOGGLE / P.MUTE'	'PICTURE: PICTURE_FORMAT / FORMAT'
	'PICTURE: CINEMA_ON'	'PICTURE: CINEMA_OFF'	'OTHER: OPEN_STAND / STAND'
	'OTHER: CLEAR'	'OTHER: STORE'	'OTHER: RESET / INDEX'
	'OTHER: BACK'	'OTHER: CMD_A / MOTS'	'OTHER: GOTO / TRACK / LAMP'

	'OTHER: SHOW_CLOCK / CLOCK'	'OTHER: EJECT'	'OTHER: RECORD'
	'OTHER: MEDIUM_SELECT / SELECT'	'OTHER: TURN / SOUND'	'OTHER: EXIT'
	'OTHER: CNTL_0 / SHIFT-0 / EDIT'	'OTHER: CNTL_1 / SHIFT-1 / RANDOM'	'OTHER: CNTL_2 / SHIFT-2'
	'OTHER: CNTL_3 / SHIFT-3 / REPEAT'	'OTHER: CNTL_4 / SHIFT-4 / SELECT'	'OTHER: CNTL_5 / SHIFT-5'
	'OTHER: CNTL_6 / SHIFT-6'	'OTHER: CNTL_7 / SHIFT-7'	'OTHER: CNTL_8 / SHIFT-8'
	'OTHER: CNTL_9 / SHIFT-9'	'CONTINUE: C_REWIND / Continue REWIND'	'CONTINUE: C_WIND / Continue WIND'
	'CONTINUE: C_STEP_UP / Continue step UP'	'CONTINUE: C_STEP_DW / Continue step DOWN'	'CONTINUE: CONTINUE / Continue (other keys)'
	'CONTINUE: CNTL_C_REWIND / Continue Green'	'CONTINUE: CNTL_C_WIND / Continue Yellow'	'CONTINUE: CNTL_C_STEP_UP / Continue Blue'
	'CONTINUE: CNTL_C_STEP_DW / Continue Red'	'CONTINUE: KEY_RELEASE'	'FUNCTION_1'
	'FUNCTION_2'	'FUNCTION_3'	'FUNCTION_4'
	'FUNCTION_5'	'FUNCTION_6'	'FUNCTION_7'
	'FUNCTION_8'	'FUNCTION_9'	'FUNCTION_10'
	'FUNCTION_11'	'FUNCTION_12'	'FUNCTION_13'
	'FUNCTION_14'	'FUNCTION_15'	'FUNCTION_16'
	'FUNCTION_17'	'FUNCTION_18'	'FUNCTION_19'
	'FUNCTION_20'	'FUNCTION_21'	'FUNCTION_22'
	'FUNCTION_23'	'FUNCTION_24'	'FUNCTION_25'
	'FUNCTION_26'	'FUNCTION_27'	'FUNCTION_28'
	'FUNCTION_29'	'FUNCTION_30'	'FUNCTION_31'
	'FUNCTION_32'	'FUNCTION_33'	'FUNCTION_34'
	'FUNCTION_35'	'FUNCTION_36'	'FUNCTION_37'
	'FUNCTION_38'	'FUNCTION_39'	'FUNCTION_40'
	'CURSOR: SELECT'	'CURSOR: UP'	'CURSOR: DW'
	'CURSOR: LEFT'	'CURSOR: RIGHT'	
['Destination']	'Video Source'	'Audio Source'	'V.TAPE/V.MEM'
	'All Products'		

BeoRemoteOneControlCommand	'1' – '30'		
['Command']	'SOURCE: STANDBY' 'SOURCE: RADIO' 'SOURCE: VTR / V.MEM / DVD2' 'SOURCE: TEXT' 'SOURCE: DOORCAM / V.AUX2' 'SOURCE: PH / N.RADIO' 'SOURCE: VTR2' 'SOURCE: PHOTO' 'SOURCE: NET' 'DIGIT: 1' 'DIGIT: 4' 'DIGIT: 7' 'CONTROL: STEP_UP' 'CONTROL: REC_RETURN / RETURN' 'CONTROL: STOP' 'CONTROL: CNTL_STEP_UP / Blue' 'SOUND: SOUND / SPEAKER' 'PICTURE: MENU' 'PICTURE: CINEMA_ON' 'OTHER: CLEAR' 'OTHER: BACK'	'SOURCE: SLEEP' 'SOURCE: AUX_V / DTV2' 'SOURCE: CDV / DVD' 'SOURCE: V_SAT / DTV' 'SOURCE: TP1 / A.MEM' 'SOURCE: TP2 / N.MUSIC' 'SOURCE: MEDIA' 'SOURCE: USB2' 'SOURCE: PICTURE_IN_PICTURE / P-AND-P' 'DIGIT: 2' 'DIGIT: 5' 'DIGIT: 8' 'CONTROL: STEP_DW' 'CONTROL: WIND' 'CONTROL: CNTL_WIND / Yellow' 'CONTROL: CNTL_STEP_DW / Red' 'SOUND: ANALOG_UP_1 / Volume UP' 'PICTURE: PICTURE_TOGGLE / P.MUTE' 'PICTURE: CINEMA_OFF' 'OTHER: STORE' 'OTHER: CMD_A / MOTS'	'SOURCE: TV' 'SOURCE: AUX_A' 'SOURCE: CAMCORDER / CAMERA' 'SOURCE: PC' 'SOURCE: CD' 'SOURCE: CD2 / JOIN' 'SOURCE: WEB' 'SOURCE: SERVER' 'DIGIT: 0' 'DIGIT: 3' 'DIGIT: 6' 'DIGIT: 9' 'CONTROL: REWIND' 'CONTROL: GO / PLAY' 'CONTROL: CNTL_REWIND / Green' 'SOUND: MUTE' 'SOUND: ANALOG_DW_1 / Volume DOWN' 'PICTURE: PICTURE_FORMAT / FORMAT' 'OTHER: OPEN_STAND / STAND' 'OTHER: RESET / INDEX' 'OTHER: GOTO / TRACK / LAMP'

Global Scripter Module Communication Sheet

	'OTHER: SHOW_CLOCK / CLOCK'	'OTHER: EJECT'	'OTHER: RECORD'
	'OTHER: MEDIUM_SELECT / SELECT'	'OTHER: TURN / SOUND'	'OTHER: EXIT'
	'OTHER: CNTL_0 / SHIFT-0 / EDIT'	'OTHER: CNTL_1 / SHIFT-1 / RANDOM'	'OTHER: CNTL_2 / SHIFT-2'
	'OTHER: CNTL_3 / SHIFT-3 / REPEAT'	'OTHER: CNTL_4 / SHIFT-4 / SELECT'	'OTHER: CNTL_5 / SHIFT-5'
	'OTHER: CNTL_6 / SHIFT-6'	'OTHER: CNTL_7 / SHIFT-7'	'OTHER: CNTL_8 / SHIFT-8'
	'OTHER: CNTL_9 / SHIFT-9'	'CONTINUE: C_REWIND / Continue REWIND'	'CONTINUE: C_WIND / Continue WIND'
	'CONTINUE: C_STEP_UP / Continue step UP'	'CONTINUE: C_STEP_DW / Continue step DOWN'	'CONTINUE: CONTINUE / Continue (other keys)'
	'CONTINUE: CNTL_C_REWIND / Continue Green'	'CONTINUE: CNTL_C_WIND / Continue Yellow'	'CONTINUE: CNTL_C_STEP_UP / Continue Blue'
	'CONTINUE: CNTL_C_STEP_DW / Continue Red'	'CONTINUE: KEY_RELEASE'	'FUNCTION_1'
	'FUNCTION_2'	'FUNCTION_3'	'FUNCTION_4'
	'FUNCTION_5'	'FUNCTION_6'	'FUNCTION_7'
	'FUNCTION_8'	'FUNCTION_9'	'FUNCTION_10'
	'FUNCTION_11'	'FUNCTION_12'	'FUNCTION_13'
	'FUNCTION_14'	'FUNCTION_15'	'FUNCTION_16'
	'FUNCTION_17'	'FUNCTION_18'	'FUNCTION_19'
	'FUNCTION_20'	'FUNCTION_21'	'FUNCTION_22'
	'FUNCTION_23'	'FUNCTION_24'	'FUNCTION_25'
	'FUNCTION_26'	'FUNCTION_27'	'FUNCTION_28'
	'FUNCTION_29'	'FUNCTION_30'	'FUNCTION_31'
	'FUNCTION_32'	'FUNCTION_33'	'FUNCTION_34'
	'FUNCTION_35'	'FUNCTION_36'	'FUNCTION_37'
	'FUNCTION_38'	'FUNCTION_39'	'FUNCTION_40'
	'CURSOR: SELECT'	'CURSOR: UP'	'CURSOR: DW'
	'CURSOR: LEFT'	'CURSOR: RIGHT'	
['Network']	'Local Source'	'Remote Source'	

BeoRemoteOneSourceSelection	'1' – '30'		
['Command']	'TV' 'DVB RADIO' 'A.AUX' 'DLNA-DMR' 'USB' 'CD' 'DLNA-DMR' 'DEEZER' 'WEBMEDIA' 'HDMI 1' 'HDMI 4' 'HDMI 7' 'MATRIX 2' 'MATRIX 5' 'MATRIX 8' 'MATRIX 11' 'MATRIX 14' 'PERSONAL 1' 'PERSONAL 4' 'PERSONAL 7' 'MUSIC ON'	'RADIO' 'AV IN' 'BLUETOOTH' 'RECORDINGS' 'USB 2' 'NET RADIO' 'AirPlay' 'QPLAY' 'YOUTUBE' 'HDMI 2' 'HDMI 5' 'HDMI 8' 'MATRIX 3' 'MATRIX 6' 'MATRIX 9' 'MATRIX 12' 'MATRIX 15' 'PERSONAL 2' 'PERSONAL 5' 'PERSONAL 8' 'PATTERNPLAY'	'TUNEIN' 'LINE IN' 'HOMEMEDIA' 'CAMERA' 'A.MEM' 'MUSIC' 'SPOTIFY' 'JOIN (toggle)' 'HOME APP' 'HDMI 3' 'HDMI 6' 'MATRIX 1' 'MATRIX 4' 'MATRIX 7' 'MATRIX 10' 'MATRIX 13' 'MATRIX 16' 'PERSONAL 3' 'PERSONAL 6' 'TV ON'
['Network']	'Local Source'	'Remote Source'	
CinemaMode	'Not Available'	'Cinema mode off'	'Cinema mode on'
ConnectionStatus	'Connected'	'Disconnected'	
LightAndControl	'1' – '30'		
['Command']	'LIGHT' 'DIGIT: 1' 'DIGIT: 4' 'DIGIT: 7' 'STEP_UP' 'REC_RETURN / RETURN' 'STOP' 'CNTL_REWIND / Green' 'MENU'	'CONTROL' 'DIGIT: 2' 'DIGIT: 5' 'DIGIT: 8' 'STEP_DW' 'WIND' 'STANDBY' 'CNTL_STEP_UP / Blue' 'BACK'	'DIGIT: 0' 'DIGIT: 3' 'DIGIT: 6' 'DIGIT: 9' 'REWIND' 'GO / PLAY' 'CNTL_WIND / Yellow' 'CNTL_STEP_DW / Red' 'RECORD'

	'ALL STANDBY'	'C_REWIND / Continue REWIND'	'C_WIND / Continue WIND'
	'C_STEP_UP / Continue step UP'	'C_STEP_DW / Continue step DOWN'	'CONTINUE / Continue (other keys)'
	'CNTL_C_REWIND / Continue Green'	'CNTL_C_WIND / Continue Yellow'	'CNTL_C_STEP_UP / Continue Blue'
	'CNTL_C_STEP_DW / Continue Red'	'KEY RELEASE'	'CNTL_PLAY'
	'CNTL_STOP'	'SELECT / Cursor SELECT'	'CURSOR_UP'
	'CURSOR_DW'	'CURSOR_LEFT'	'CURSOR_RIGHT'
	'FUNCTION_1'	'FUNCTION_2'	'FUNCTION_3'
	'FUNCTION_4'	'FUNCTION_5'	'FUNCTION_6'
	'FUNCTION_7'	'FUNCTION_8'	'FUNCTION_9'
	'FUNCTION_10'	'FUNCTION_11'	'FUNCTION_12'
	'FUNCTION_13'	'FUNCTION_14'	'FUNCTION_15'
	'FUNCTION_16'	'FUNCTION_17'	'FUNCTION_18'
	'FUNCTION_19'	'FUNCTION_20'	'FUNCTION_21'
	'FUNCTION_22'	'FUNCTION_23'	'FUNCTION_24'
	'FUNCTION_25'	'FUNCTION_26'	'FUNCTION_27'
	'FUNCTION_28'	'FUNCTION_29'	'FUNCTION_30'
	'FUNCTION_31'	'FUNCTION_32'	'FUNCTION_33'
	'FUNCTION_34'	'FUNCTION_35'	'FUNCTION_36'
	'FUNCTION_37'	'FUNCTION_38'	'FUNCTION_39'
	'FUNCTION_40'		
['Type']	'Light'	'Control'	
MLN	'1' – '30'		
PictureFormat	'Not Available'	'Unknown'	'Known by decoder'
	'4:3'	'16:9'	'4:3 Letterbox middle'
	'4:3 Letterbox top'	'4:3 Letterbox bottom'	'Blank picture'
PingPong			
Screen1Active	'Not active screen'	'Active screen'	'Not Available'
Screen1Mute	'Screen not muted'	'Screen signal muted'	'Not Available'
Screen2Active	'Not Available'	'Not active screen'	'Active screen'
Screen2Mute	'Screen not muted'	'Screen signal muted'	'Not Available'
SoundStatus	'Not Available'	'Sound not muted'	'Sound muted'

Global Scripter Module Communication Sheet

Source	'TV'	'V_MEM / V_TAPE'	'DVD_2 / V_TAPE2'
	'SAT / DTV'	'DVD'	'DTV_2 / V_AUX'
	'V_AUX2 / DOORCAM'	'PC'	'RADIO'
	'A_MEM'	'A_MEM2'	'CD'
	'A_AUX'	'N_RADIO'	'Not Available'
SourceActivity	'Unknown'	'Stop'	'Playing'
	'Wind'	'Rewind'	'Record lock'
	'Standby'	'No medium'	'Still picture'
	'Scan-play forward'	'Scan-play reverse'	'Blank status'
	'Not Available'		
SourceMediumPosition	0 – 65535		
SourcePosition	0 – 65535		
SpeakerMode	'Speaker mode 1 (center channel)'	'Speaker mode 2 (2ch stereo)'	'Speaker mode 3 (front surround)'
	'Speaker mode 4 (4ch stereo)'	'Speaker mode 5 (full surround)'	'Not Available'
StereoIndicator	'Not Available'	'Mono'	'Stereo'
VolumeLevel	0 – 90		

Cable and Adapter Requirements:

Refer to manufacturer for connection details.

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

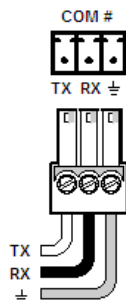

Refer to manufacturer for connection details.

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	9000
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device: