

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Barco
Firmware Version: N/A
Model(s): LDX-8482, LDX-8482T

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_0_0	6/12/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. Device ID ranges from '0' to '99' or 'Broadcast'. When DeviceID is set to 'Broadcast', status is unavailable.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='LDX-8482')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='LDX-8482')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Autolmage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Input	Value 'VGA' 'HDMI 2' 'OPS/HDMI'	Value 'DisplayPort' 'HDMI 3' 'OPS/DP'	Value 'HDMI 1' 'HDMI 4'
# Input example InterfaceName.Set('Input', 'VGA')			
Command MenuNavigation	Value 'Up' 'Right'	Value 'Down' 'Select'	Value 'Left' 'Menu'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command MultiWindowMode	Value 'Off'	Value 'PBP'	Value 'Quadrant'
# MultiWindowMode example InterfaceName.Set('MultiWindowMode', 'Off')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command PictureMode	Value 'Standard'	Value 'Dynamic'	Value 'User'
# PictureMode example InterfaceName.Set('PictureMode', 'Standard')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example			

Global Scripter Module Communication Sheet

InterfaceName.Set('Volume', 100)			
Command Window	Value 'DisplayPort' 'HDMI 3' 'OPS/DP'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'OPS/HDMI'
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# Window example InterfaceName.Set('Window', 'DisplayPort', {'Input': '1'})			
Command WindowMode	Value '1' – '4'		
# WindowMode example InterfaceName.Set('WindowMode', '1')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command Input	Value 'DisplayPort' 'HDMI 3' 'OPS/DP'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'OPS/HDMI'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command MultiWindowMode	Value 'Off'	Value 'PBP'	Value 'Quadrant'
# MultiWindowMode examples InterfaceName.Update('MultiWindowMode') Value = InterfaceName.ReadStatus('MultiWindowMode') InterfaceName.SubscribeStatus('MultiWindowMode', None, FeedbackHandler)			
Command Mute	Value 'On'	Value 'Off'	
# Mute examples InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			
Command PictureMode	Value 'Standard'	Value 'Dynamic'	Value 'User'
# PictureMode examples InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume examples			

Global Scripter Module Communication Sheet

<pre>InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>			
Command Window	Value 'DisplayPort' 'HDMI 3' 'OPS/DP'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'OPS/HDMI'
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
<pre># Window examples InterfaceName.Update('Window', {'Input': '1'}) Value = InterfaceName.ReadStatus('Window', {'Input': '1'}) InterfaceName.SubscribeStatus('Window', None, FeedbackHandler)</pre>			
Command WindowMode	Value '1' – '4'		
<pre># WindowMode examples InterfaceName.Update('WindowMode') Value = InterfaceName.ReadStatus('WindowMode') InterfaceName.SubscribeStatus('WindowMode', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to 3.5mm Stereo RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

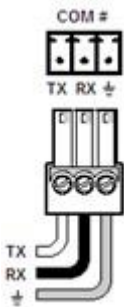

Signal	Main Cable	Pin	Signal
RxD	←	1	TxD
TxD	→	2	RxD
GND	→	3	GND

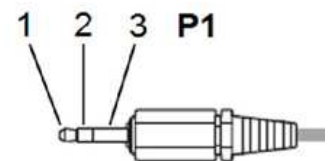

Appendix A. Set Commands

Commands below only work when DeviceID is set to '1'.

Auto Image None	K:001ATU.
Input DisplayPort	K:001SH1.
Input HDMI 1	K:001SH2.
Input HDMI 2	K:001SH3.
Input HDMI 3	K:001SH4.
Input HDMI 4	K:001SH5.
Input OPS/DP	K:001SH7.
Input OPS/HDMI	K:001SH6.
Input VGA	K:001SPC.
Menu Navigation Down	K:001RDN.
Menu Navigation Left	K:001RLT.
Menu Navigation Menu	K:001RMN.
Menu Navigation Right	K:001RRT.
Menu Navigation Select	K:001REN.
Menu Navigation Up	K:001RUP.
Multi Window Mode Off	K:001WM0.
Multi Window Mode PBP	K:001WM1.
Multi Window Mode Quadrant	K:001WM2.
Mute Off	K:001MOF.
Mute On	K:001MON.
Picture Mode Dynamic	K:001PM1.
Picture Mode Standard	K:001PM0.
Picture Mode User	K:001PM2.
Power Off	K:001POF.
Power On	K:001PON.
Volume 0	K:0010VOL.
Volume 100	K:001100VOL.
Window DisplayPort Input 1	K:001W10.
Window HDMI 1 Input 1	K:001W11.
Window HDMI 2 Input 1	K:001W12.
Window HDMI 3 Input 1	K:001W13.
Window HDMI 4 Input 1	K:001W14.
Window OPS/DP Input 1	K:001W16.
Window OPS/HDMI Input 1	K:001W15.
Window DisplayPort Input 4	K:001W40.
Window HDMI 1 Input 4	K:001W41.

Window HDMI 2 Input 4	K:001W42.
Window HDMI 3 Input 4	K:001W43.
Window HDMI 4 Input 4	K:001W44.
Window OPS/DP Input 4	K:001W46.
Window OPS/HDMI Input 4	K:001W45.
Window Mode 1	K:001WN1.
Window Mode 4	K:001WN4.

Appendix B. Update Commands

Commands below only work when DeviceID is set to '1'.

Input	K:001SRC?
Multi Window Mode	K:001WMT?
Mute	K:001MUT?
Picture Mode	K:001PMT?
Volume	K:001VOL?
Window Input 1	K:001W1S?
Window Mode	K:001WIN?