

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
 Manufacturer: Barco
 Firmware Version: N/A
 Model(s): DP2K-10S, DP2K-10Sx

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.02.0000-b013	2.2.0

Version History

Module Version	Date	Notes
1_1_0_0	4/22/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DP2K-10S')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DP2K-10S')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 43728, Model='DP2K-10S')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command ExecuteMacroCommand ¹	Value 'None'		
# ExecuteMacroCommand example InterfaceName.Set('ExecuteMacroCommand', None)			
Command Focus	Value 'Near'	Value 'Far'	
# Focus example InterfaceName.Set('Focus', 'Near')			
Command LensShift	Value 'Up' 'Right'	Value 'Down'	Value 'Left'
# LensShift example InterfaceName.Set('LensShift', 'Up')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Shutter	Value 'Close'	Value 'Open'	
# Shutter example InterfaceName.Set('Shutter', 'Close')			
Command Zoom	Value 'In'	Value 'Out'	
# Zoom example InterfaceName.Set('Zoom', 'In')			

¹ Requires a Null terminated string.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
<pre>Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	
Power	'On'	'Off'	
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
Shutter	'Close'	'Open'	'Undetermined'
<pre># Shutter example InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Contact manufacturer for cable and adapter requirements.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

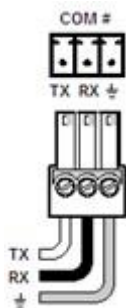

Contact manufacturer for the pin assignments diagram.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	43728
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Focus Far	\xFE\x00\xF4\x83\x01\xFF
Focus Near	\xFE\x00\xF4\x83\x00w\xFF
Lens Shift Down	\xFE\x00\xF4\x81\x01v\xFF
Lens Shift Left	\xFE\x00\xF4\x81\x02w\xFF
Lens Shift Right	\xFE\x00\xF4\x81\x03x\xFF
Lens Shift Up	\xFE\x00\xF4\x81\x00u\xFF
Power Off	\xFE\x00v\x1A\x00\x90\xFF\xFE\x00ff\xFF
Power On	\xFE\x00ee\xFF\xFE\x00v\x1A\x01\x91\xFF
Shutter Close	\xFE\x00#B\x00e\xFF
Shutter Open	\xFE\x00"B\x00d\xFF
Zoom In	\xFE\x00\xF4\x82\x00v\xFF
Zoom Out	\xFE\x00\xF4\x82\x01w\xFF

Appendix B. Update Commands

Power	\xFE\x00g\x01h\xFF
Shutter	\xFE\x00!Bc\xFF