

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Barco
Firmware Version: N/A
Model(s): F50

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_1_0	7/20/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Device requires at least 500ms between Set or Update commands.
- Device requires 5 sec delay after receiving a total of 20 commands. Module has an internal counter which will prevent sending commands for 5 seconds after 20 commands.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='F50')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='F50')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1025, Model='F50')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '1:1' 'Fill All'	Value '16:9' 'Fill AspectRatio'	Value '4:3' 'Fill 2.35:1'
# AspectRatio example InterfaceName.Set('AspectRatio', '1:1')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'VGA' 'DisplayPort 1' 'SDI 1'	Value 'DVI' 'DisplayPort 2' 'SDI 2'	Value 'HDMI' 'HDBaseT'
# Input example InterfaceName.Set('Input', 'VGA')			
Command MenuNavigation	Value 'Menu' 'Left'	Value 'Up' 'Right'	Value 'Down' 'Ok'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command OnScreenDisplay	Value 'On'	Value 'Off'	Value 'Show Only Warnings'
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', 'On')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	

```
# VideoMute example  
InterfaceName.Set('VideoMute', 'On')
```

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '1:1' 'Fill All'	Value '16:9' 'Fill AspectRatio'	Value '4:3' 'Fill 2.35:1'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'VGA' 'DisplayPort 1' 'SDI 1'	Value 'DVI' 'DisplayPort 2' 'SDI 2'	Value 'HDMI' 'HDBaseT'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampStatus	Value 'On'	Value 'Off'	Value 'Defect'

Global Scripter Module Communication Sheet

	'Not Present'	'Cooling Down'	'Warming Up'
<pre># LampStatus examples InterfaceName.Update('LampStatus') Value = InterfaceName.ReadStatus('LampStatus') InterfaceName.SubscribeStatus('LampStatus', None, FeedbackHandler)</pre>			
Command LampUsage	Value 0 –		
<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>			
Command OnScreenDisplay	Value 'On'	Value 'Off'	Value 'Show Only Warnings'
<pre># OnScreenDisplay examples InterfaceName.Update('OnScreenDisplay') Value = InterfaceName.ReadStatus('OnScreenDisplay') InterfaceName.SubscribeStatus('OnScreenDisplay', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Warming Up'	Value 'Off'	Value 'Cooling Down'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoMute	Value 'On'	Value 'Off'	
<pre># VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

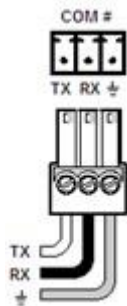

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

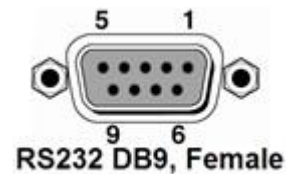

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	1025
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 16:9	:SABS3\x0D
Aspect Ratio 1:1	:SABS0\x0D
Aspect Ratio 4:3	:SABS4\x0D
Aspect Ratio Fill 2.35:1	:SABS5\x0D
Aspect Ratio Fill All	:SABS1\x0D
Aspect Ratio Fill AspectRatio	:SABS2\x0D
Auto Image None	:AUTO\x0D
Freeze Off	:FRZE0\x0D
Freeze On	:FRZE1\x0D
Input DVI	:IABS2\x0D
Input DisplayPort 1	:IABS17\x0D
Input DisplayPort 2	:IABS18\x0D
Input HDBaseT	:IABS19\x0D
Input HDMI	:IABS8\x0D
Input SDI 1	:IABS20\x0D
Input SDI 2	:IABS21\x0D
Input VGA	:IABS0\x0D
Menu Navigation Down	:NVDW\x0D
Menu Navigation Left	:NVLF\x0D
Menu Navigation Menu	:MENU\x0D
Menu Navigation Ok	:NVOK\x0D
Menu Navigation Right	:NVRH\x0D
Menu Navigation Up	:NVUP\x0D
On Screen Display Off	:OSDC0\x0D
On Screen Display On	:OSDC2\x0D
On Screen Display Show Only Warnings	:OSDC1\x0D
Power Off	:POWR0\x0D
Power On	:POWR1\x0D
Video Mute Off	:PMUT0\x0D
Video Mute On	:PMUT1\x0D

Appendix B. Update Commands

Aspect Ratio	:SABS?\x0D
Freeze	:FRZE?\x0D
Input	:IABS?\x0D
Lamp Status	:LST1?\x0D
Lamp Usage	:LTR1?\x0D
On Screen Display	:OSDC?\x0D
Video Mute	:PMUT?\x0D