

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Barco
Firmware Version: N/A
Model(s): G60-W7, G60-W8, G60-W10

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.2.0

Version History

Module Version	Date	Notes
1_0_0_0	4/17/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='G60-W7')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='G60-W7')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3023, Model='G60-W7')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command 3DFormat	Value 'Frame Packing' 'Frame Sequential'	Value 'Side by Side (Half)'	Value 'Top and Bottom'
# 3DFormat example InterfaceName.Set('3DFormat', 'Frame Packing')			
Command 3DInvert	Value 'On'	Value 'Off'	
# 3DInvert example InterfaceName.Set('3DInvert', 'On')			
Command 3DMode	Value 'Auto'	Value 'On'	
# 3DMode example InterfaceName.Set('3DMode', 'Auto')			
Command AspectRatio	Value 'Auto' '16:10'	Value '4:3' 'Native'	Value '16:9'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command AVMute	Value 'On'	Value 'Off'	
# AVMute example InterfaceName.Set('AVMute', 'On')			
Command ConstantPower ¹	Value 0 to 99 in steps of 1		
# ConstantPower example InterfaceName.Set('ConstantPower', 99)			
Command DisplayMode	Value 'Bright' 'sRGB' 'User'	Value 'Presentation' 'Blending'	Value 'Movie' 'DICOM SIM'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Bright')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'VGA' 'DVI'	Value 'HDMI 1' 'HDBaseT'	Value 'HDMI 2' '3G-SDI'
# Input example InterfaceName.Set('Input', 'VGA')			
Command LightSourceMode	Value 'Constant Power'	Value 'Constant Intensity'	Value 'ECO'
# LightSourceMode example InterfaceName.Set('LightSourceMode', 'Constant Power')			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

PIPIInput ²	'VGA' 'DVI'	'HDMI 1' 'HDBaseT'	'HDMI 2' '3G-SDI'
# PIPInput example InterfaceName.Set('PIPIInput', 'VGA')			
Command PIPMode	Value 'PIP'	Value 'PBP'	Value 'Off'
# PIPMode example InterfaceName.Set('PIPMode', 'PIP')			
Command PIPPosition ²	Value 'Top Left' 'Bottom Right'	Value 'Top Right'	Value 'Bottom Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Top Left')			
Command PIPSize ²	Value 'Small'	Value 'Medium'	Value 'Large'
# PIPSize example InterfaceName.Set('PIPSize', 'Small')			
Command PIPSwap ²	Value None		
# PIPSwap example InterfaceName.Set('PIPSwap', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			

¹ Available when Light Source Mode is Constant Power.² Available when PIP Mode is PIP or PBP.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio¹	Value 'Auto' '16:10'	Value '4:3' 'Native'	Value '16:9'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'DVI'	Value 'HDMI 1' 'HDBaseT'	Value 'HDMI 2' '3G-SDI'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LaserHours	Value Hours		
# LaserHours example InterfaceName.Update('LaserHours') Value = InterfaceName.ReadStatus('LaserHours') InterfaceName.SubscribeStatus('LaserHours', None, FeedbackHandler)			
Command PIPInput²	Value 'VGA' 'DVI'	Value 'HDMI 1' 'HDBaseT'	Value 'HDMI 2' '3G-SDI'
# PIPInput example InterfaceName.Update('PIPInput') Value = InterfaceName.ReadStatus('PIPInput') InterfaceName.SubscribeStatus('PIPInput', None, FeedbackHandler)			

¹ Available when PIP Mode is Off.

² Available when PIP Mode is PIP or PBP.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device


To ensure the driver functions properly, please set Menu → Communications → **Serial Port Path** to **RS232** or **HDBaseT**, depending on your communication method.

Serial communication


Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

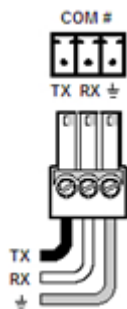

Please contact manufacturer for pin assignment diagram.

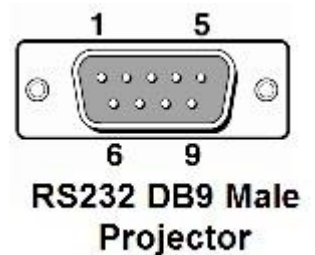

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	3023
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the driver functions properly, please set Menu → Settings → **Standby Power Mode** to **Communication Mode**.

Appendix A. Set Commands

3D Format Frame Packing	[TDEN1]
3D Format Frame Sequential	[TDEN4]
3D Format Side by Side (Half)	[TDEN2]
3D Format Top and Bottom	[TDEN3]
3D Invert Off	[TDIV0]
3D Invert On	[TDIV1]
3D Mode Auto	[TDNG0]
3D Mode On	[TDNG1]
Aspect Ratio 16:10	[ASPR3]
Aspect Ratio 16:9	[ASPR2]
Aspect Ratio 4:3	[ASPR1]
Aspect Ratio Auto	[ASPR0]
Aspect Ratio Native	[ASPR4]
AV Mute Off	[PMUT0]
AV Mute On	[PMUT1]
Constant Power 0	[LPPW00]
Constant Power 99	[LPPW99]
Display Mode Blending	[DPM04]
Display Mode Bright	[DPM00]
Display Mode DICOM SIM	[DPM05]
Display Mode Movie	[DPM02]
Display Mode Presentation	[DPM01]
Display Mode sRGB	[DPM03]
Display Mode User	[DPM08]
Freeze Off	[FRZE0]
Freeze On	[FRZE1]
Input 3G-SDI	[MSRC5]
Input DVI	[MSRC3]
Input HDBaseT	[MSRC4]
Input HDMI 1	[MSRC1]
Input HDMI 2	[MSRC2]
Input VGA	[MSRC0]
Light Source Mode Constant Intensity	[LPM01]
Light Source Mode Constant Power	[LPM00]
Light Source Mode ECO	[LPM02]
PIP Input 3G-SDI	[SSRC5]
PIP Input DVI	[SSRC3]
PIP Input HDBaseT	[SSRC4]
PIP Input HDMI 1	[SSRC1]
PIP Input HDMI 2	[SSRC2]
PIP Input VGA	[SSRC0]
PIP Mode Off	[PIBP0]

**Global Scripter Module
Communication Sheet**

PIP Mode PBP	[PIBP1]
PIP Mode PIP	[PIBP2]
PIP Position Bottom Left	[PPPG2]
PIP Position Bottom Right	[PPPG3]
PIP Position Top Left	[PPPG0]
PIP Position Top Right	[PPPG1]
PIP Size Large	[PHSG2]
PIP Size Medium	[PHSG1]
PIP Size Small	[PHSG0]
PIP Swap None	[PISW1]
Power Off	[POWR0]
Power On	[POWR1]

Appendix B. Update Commands

Aspect Ratio	[MSAR?]
Input	[MSRC?]
Laser Hours	[LSHS?]
PIP Input	[SSRC?]