

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
 Manufacturer: Barco
 Firmware Version: N/A
 Model(s): Galaxy 4K-23 HFR

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_3_0	10/29/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Galaxy 4K-23 HFR')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Galaxy 4K-23 HFR')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 43680, Model='Galaxy 4K-23 HFR')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Freeze	Value 'On'	Value 'Off'
# Freeze example InterfaceName.Set('Freeze', 'On')		
Command Macro	Value 1 to 84 in steps of 1	
# Macro example InterfaceName.Set('Macro', 84)		
Command Power	Value 'On'	Value 'Off'
# Power example InterfaceName.Set('Power', 'On')		
Command VideoMute	Value 'On'	Value 'Off'
# VideoMute example InterfaceName.Set('VideoMute', 'On')		
Command Zoom	Value 'In'	Value 'Out'
# Zoom example InterfaceName.Set('Zoom', 'In')		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command LampUsage	Value Hours	
# LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)		
Command Macro	Value 1 to 84 in steps of 1	
# Macro examples InterfaceName.Update('Macro') Value = InterfaceName.ReadStatus('Macro') InterfaceName.SubscribeStatus('Macro', None, FeedbackHandler)		
Command Power	Value 'On'	Value 'Off'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		
Command VideoMute	Value 'On'	Value 'Off'
# VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

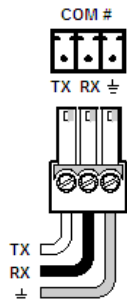

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

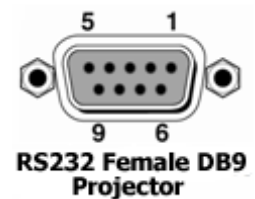

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	43680
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Freeze Off	\xFE\x01&#I\xFF
Freeze On	\xFE\x01'#J\xFF
Macro 1	\xFE\x01\xE8\x85\x01n\xFF
Macro 84	\xFE\x01\xE8\x85T\xC1\xFF
Power Off	\xFE\x01v\x1A\x00\x90\xFF
Power On	\xFE\x01v\x1A\x01\x91\xFF
Video Mute Off	\xFE\x01"B\x00d\xFF
Video Mute On	\xFE\x01#B\x00e\xFF
Zoom In	\xFE\x01\xF4\x82\x00v\xFF
Zoom Out	\xFE\x01\xF4\x82\x01w\xFF

Appendix B. Update Commands (Serial)

Lamp Usage	\xFE\x01\x00\x03\x02v\x90\x0B\xFF
Macro	\xFE\x01\xE8\x05\xED\xFF
Power	\xFE\x01v\x9A\x10\xFF
Video Mute	\xFE\x01!Bc\xFF

Appendix C. Set Commands (Ethernet)

Freeze Off	\xFE\x00&#I\xFF
Freeze On	\xFE\x00'#J\xFF
Macro 1	\xFE\x00\xE8\x85\x01n\xFF
Macro 84	\xFE\x00\xE8\x85T\xC1\xFF
Power Off	\xFE\x00v\x1A\x00\x90\xFF
Power On	\xFE\x00v\x1A\x01\x91\xFF
Video Mute Off	\xFE\x00"B\x00d\xFF
Video Mute On	\xFE\x00#B\x00e\xFF
Zoom In	\xFE\x00\xF4\x82\x00v\xFF
Zoom Out	\xFE\x00\xF4\x82\x01w\xFF

Appendix D. Update Commands (Ethernet)

Lamp Usage	\xFE\x00\x00\x03\x02v\x90\x0B\xFF
Macro	\xFE\x00\xE8\x05\xED\xFF
Power	\xFE\x00v\x9A\x10\xFF
Video Mute	\xFE\x00!Bc\xFF