
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Barco
Firmware Version: N/A
Model(s): HDX-W18, HDX-W14, HDX-W12

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_1_0	8/2/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly for Serial control only. Default value is '1'. DeviceID ranges from '1' to '255'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='HDX-W18')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='HDX-W18')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 43680, Model='HDX-W18')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '4:3' '2.35' '1.78' 'Custom'	Value '16:9' '1.88' '16:10'	Value '5:4' '1.85' '1.67'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value '1' – '4'		
# Input example InterfaceName.Set('Input', '1')			
Command LampPower	Value 'On'	Value 'Off'	
# LampPower example InterfaceName.Set('LampPower', 'On')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, LampPower do not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '4:3' '2.35' '1.78' 'Custom'	Value '16:9' '1.88' '16:10'	Value '5:4' '1.85' '1.67'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value '1' – '4'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampPower ¹	Value 'On'	Value 'Off'	

<pre># LampPower examples InterfaceName.Update('LampPower') Value = InterfaceName.ReadStatus('LampPower') InterfaceName.SubscribeStatus('LampPower', None, FeedbackHandler)</pre>		
Command LampUsage	Value Hours	
<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>		
Command OperationHours	Value Hours	
<pre># OperationHours examples InterfaceName.Update('OperationHours') Value = InterfaceName.ReadStatus('OperationHours') InterfaceName.SubscribeStatus('OperationHours', None, FeedbackHandler)</pre>		
Command Power ¹	Value 'On'	Value 'Off'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		

¹ Calling Update method with Power will provide status for LampPower and vice versa.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

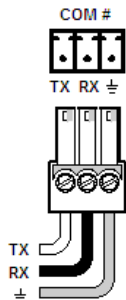

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

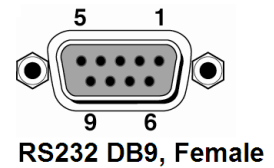

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	43680
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Commands below only work when Device ID is set to 1.

Aspect Ratio 1.67	\xFE\x01 \x0B\xC01.67\xB8\xFF
Aspect Ratio 1.78	\xFE\x01 \x0B\xC01.78\xBA\xFF
Aspect Ratio 1.85	\xFE\x01 \x0B\xC01.85\xB8\xFF
Aspect Ratio 1.88	\xFE\x01 \x0B\xC01.88\xBB\xFF
Aspect Ratio 16:10	\xFE\x01 \x0B\xC016:10\xEE\xFF
Aspect Ratio 16:9	\xFE\x01 \x0B\xC016:9\xC6\xFF
Aspect Ratio 2.35	\xFE\x01 \x0B\xC02.35\xB4\xFF
Aspect Ratio 4:3	\xFE\x01 \x0B\xC04:3\x8D\xFF
Aspect Ratio 5:4	\xFE\x01 \x0B\xC05:4\x8F\xFF
Aspect Ratio Custom	\xFE\x01 \x0B\xC0Customg\xFF
Freeze Off	\xFE\x01&#J\xFF
Freeze On	\xFE\x01' #K\xFF
Input 1	\xFE\x011\x013\xFF
Input 4	\xFE\x011\x046\xFF
Lamp Power Off	\xFE\x01v\x1A\x00\x91\xFF
Lamp Power On	\xFE\x01v\x1A\x01\x92\xFF
Power Off	\xFE\x01fg\xFF
Power On	\xFE\x01ef\xFF

Appendix B. Update Commands (Serial)

Commands below only work when Device ID is set to 1.

Aspect Ratio	\xFE\x01!\x0B\xC0\xED\xFF
Freeze	\xFE\x01! #E\xFF
Input	\xFE\x0123\xFF
Lamp Power	\xFE\x01gh\xFF
Lamp Usage	\xFE\x01v\x90\x07\xFF
Operation Hours	\xFE\x01bc\xFF
Power	\xFE\x01gh\xFF

Appendix C. Set Commands (Ethernet)

Aspect Ratio 1.67	\xFE\x00 \x0B\xC01.67\xB7\xFF
Aspect Ratio 1.78	\xFE\x00 \x0B\xC01.78\xB9\xFF
Aspect Ratio 1.85	\xFE\x00 \x0B\xC01.85\xB7\xFF
Aspect Ratio 1.88	\xFE\x00 \x0B\xC01.88\xBA\xFF
Aspect Ratio 16:10	\xFE\x00 \x0B\xC016:10\xED\xFF
Aspect Ratio 16:9	\xFE\x00 \x0B\xC016:9\xC5\xFF
Aspect Ratio 2.35	\xFE\x00 \x0B\xC02.35\xB3\xFF
Aspect Ratio 4:3	\xFE\x00 \x0B\xC04:3\x8C\xFF
Aspect Ratio 5:4	\xFE\x00 \x0B\xC05:4\x8E\xFF
Aspect Ratio Custom	\xFE\x00 \x0B\xC0Customf\xFF
Freeze Off	\xFE\x00&#I\xFF
Freeze On	\xFE\x00'#J\xFF
Input 1	\xFE\x001\x012\xFF
Input 4	\xFE\x001\x045\xFF
Lamp Power Off	\xFE\x00v\x1A\x00\x90\xFF
Lamp Power On	\xFE\x00v\x1A\x01\x91\xFF
Power Off	\xFE\x00ff\xFF
Power On	\xFE\x00ee\xFF

Appendix D. Update Commands (Ethernet)

Aspect Ratio	\xFE\x00!\x0B\xC0\xEC\xFF
Freeze	\xFE\x00!#D\xFF
Input	\xFE\x0022\xFF
Lamp Usage	\xFE\x00v\x90\x06\xFF
Operation Hours	\xFE\x00bb\xFF
Power	\xFE\x00gg\xFF