
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: Beamax
Firmware Version: N/A
Model(s): 11299

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.2.0

Version History

Module Version	Date	Notes
1_0_0_0	3/25/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- MotorAddress variable must be set accordingly. Default value is '0'. MotorAddress ranges from 0 to '255'.
Example: `InterfaceName.MotorAddress = '0'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='11299')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='11299')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
MotorMovement	'Down'	'Up'	'Stop'
# MotorMovement example InterfaceName.Set('MotorMovement', 'Down')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
<pre>Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>		
Command	Value	
MotorPosition	0 – 255	
<pre># MotorPosition example InterfaceName.Update('MotorPosition') Value = InterfaceName.ReadStatus('MotorPosition') InterfaceName.SubscribeStatus('MotorPosition', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Captive Screw

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

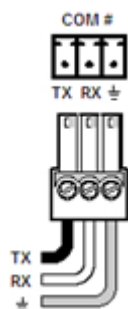

Signal	Main Cable	Signal
TxD		TxD
RxD		RxD
GND		GND

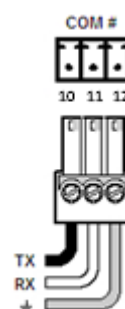

Appendix A. Set Commands

Motor Movement Down	CMD 00 04 04\x0D
Motor Movement Stop	CMD 00 04 03\x0D
Motor Movement Up	CMD 00 04 05\x0D

Appendix B. Update Commands

Motor Position	CMD 00 04 45\x0D
-----------------------	------------------