

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Interactive Whiteboard
Manufacturer: BenQ
Firmware Version: N/A
Model(s): RP6501K, RP8601K, RP7501K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.02.0000-b013	2.2.0

Version History

Module Version	Date	Notes
1_0_0_0	4/1/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to '98, and Broadcast. If DeviceID is set to 'Broadcast', status is unavailable.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RP6501K')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RP6501K')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 4660, Model='RP6501K')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
AspectRatio	'16:9'	'PTP'	
# AspectRatio example InterfaceName.Set('AspectRatio', '16:9')			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value		
AutoImage	'None'		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value		
Blank	'None'		
# Blank example InterfaceName.Set('Blank', None)			
Command	Value	Value	
ButtonandIRControl	'On'	'Off'	
# ButtonandIRControl example InterfaceName.Set('ButtonandIRControl', 'On')			
Command	Value		
Freeze	'None'		
# Freeze example InterfaceName.Set('Freeze', None)			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'DisplayPort'	'Android'
	'OPS'		
# Input example InterfaceName.Set('Input', 'VGA')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'OK'	'Menu'
	'Exit'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value	Value	Value
PowerSaving	'Off'	'Low'	'High'
# PowerSaving example InterfaceName.Set('PowerSaving', 'Off')			
Command	Value		
Volume	0 to 100 in steps of 1		

```
# Volume example  
InterfaceName.Set('Volume', 100)
```

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AspectRatio	'16:9'	'PTP'	
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ButtonandIRControl	'On'	'Off'	
# ButtonandIRControl example InterfaceName.Update('ButtonandIRControl') Value = InterfaceName.ReadStatus('ButtonandIRControl') InterfaceName.SubscribeStatus('ButtonandIRControl', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'DisplayPort'	'Android'
	'OPS'		
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value	Value	Value
PowerSaving	'Off'	'Low'	'High'
# PowerSaving example			

<pre>InterfaceName.Update('PowerSaving') Value = InterfaceName.ReadStatus('PowerSaving') InterfaceName.SubscribeStatus('PowerSaving', None, FeedbackHandler)</pre>	
Command Volume	Value 0 to 100 in steps of 1
<pre># Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

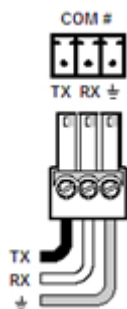

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

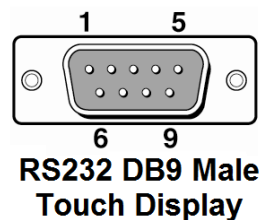

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	4660
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 16:9	801s1000\x0D
Aspect Ratio PTP	801s1002\x0D
Audio Mute Off	801s6000\x0D
Audio Mute On	801s6001\x0D
Auto Image None	801s\x8F000\x0D
Blank None	801s@031\x0D
Button and IR Control Off	801sC000\x0D
Button and IR Control On	801sC001\x0D
Freeze None	801s@032\x0D
Input Android	801s"101\x0D
Input DisplayPort	801s"007\x0D
Input HDMI 1	801s"001\x0D
Input HDMI 2	801s"002\x0D
Input HDMI 3	801s"021\x0D
Input OPS	801s"102\x0D
Input VGA	801s"000\x0D
Menu Navigation Down	801s@011\x0D
Menu Navigation Exit	801s@022\x0D
Menu Navigation Left	801s@012\x0D
Menu Navigation Menu	801s@020\x0D
Menu Navigation OK	801s@014\x0D
Menu Navigation Right	801s@013\x0D
Menu Navigation Up	801s@010\x0D
Power Off	801s!002\x0D
Power On	801s!001\x0D
Power Saving High	801s\xA9002\x0D
Power Saving Low	801s\xA9001\x0D
Power Saving Off	801s\xA9000\x0D
Volume 0	801s5000\x0D
Volume 100	801s5100\x0D

Appendix B. Update Commands

Aspect Ratio	801gw000\x0D
Audio Mute	801gg000\x0D
Button and IR Control	801gC000\x0D
Input	801gj000\x0D
Power	801gl000\x0D
Power Saving	801g\xD9000\x0D
Volume	801gf000\x0D