

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: BenQ
Firmware Version: N/A
Model(s): RP986H

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1.3

Version History

Module Version	Date	Notes
1_0_1_0	9/24/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '98'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RP986H')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RP986H')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 4660, Model='RP986H')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AspectRatio	'Default'	'16:9'	'4:3'
	'Auto'	'Panorama Mode'	'Just Scan'
	'14:9'	'PC Mode'	
# AspectRatio example InterfaceName.Set('AspectRatio', 'Default')			
Command	Value		
AudioMute ¹	None		
# AudioMute example InterfaceName.Set('AudioMute', None)			
Command	Value	Value	
ButtonAndIRControl	'Enable'	'Disable'	
# ButtonAndIRControl example InterfaceName.Set('ButtonAndIRControl', 'Enable')			
Command	Value		
Freeze	None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'HDMI 4'	'Android'
	'OPS'		
# Input example InterfaceName.Set('Input', 'VGA')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'Ok'	'Menu'
	'Exit'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
VideoMute	None		
# VideoMute example InterfaceName.Set('VideoMute', None)			
Command	Value	Value	
Volume	'Up'	'Down'	
# Volume example InterfaceName.Set('Volume', 'Up')			

¹ 'Audio Mute' command toggles between On and Off state.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},  
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Default' 'Auto' '14:9'	Value '16:9' 'Panorama Mode' 'PC Mode'	Value '4:3' 'Just Scan'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMuteStatus	Value 'On'	Value 'Off'	
# AudioMuteStatus example InterfaceName.Update('AudioMuteStatus') Value = InterfaceName.ReadStatus('AudioMuteStatus') InterfaceName.SubscribeStatus('AudioMuteStatus', None, FeedbackHandler)			
Command ButtonAndIRControl	Value 'Enable'	Value 'Disable'	
# ButtonAndIRControl example InterfaceName.Update('ButtonAndIRControl') Value = InterfaceName.ReadStatus('ButtonAndIRControl') InterfaceName.SubscribeStatus('ButtonAndIRControl', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 3' 'OPS'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'Android'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Command	Value
VolumeStatus	0 – 100
<pre># VolumeStatus example InterfaceName.Update('VolumeStatus') Value = InterfaceName.ReadStatus('VolumeStatus') InterfaceName.SubscribeStatus('VolumeStatus', None, FeedbackHandler)</pre>	

Cable and Adapter Requirements

Please contact manufacturer for Cable and Adapter Requirements.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

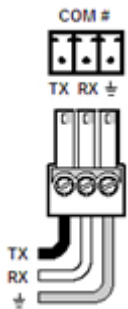

Please contact manufacturer for the Pin Assignments Diagram and Connector Type.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	4660
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 14:9	8\x01s1006\x0D
Aspect Ratio 16:9	8\x01s1001\x0D
Aspect Ratio 4:3	8\x01s1002\x0D
Aspect Ratio Auto	8\x01s1003\x0D
Aspect Ratio Default	8\x01s1000\x0D
Aspect Ratio Just Scan	8\x01s1005\x0D
Aspect Ratio Panorama Mode	8\x01s1004\x0D
Aspect Ratio PC Mode	8\x01s1007\x0D
Audio Mute None	8\x01s6002\x0D
Button And IR Control Disable	8\x01sC000\x0D
Button And IR Control Enable	8\x01sC001\x0D
Freeze None	8\x01s@032\x0D
Input Android	8\x01s"101\x0D
Input HDMI 1	8\x01s"001\x0D
Input HDMI 2	8\x01s"002\x0D
Input HDMI 3	8\x01s"021\x0D
Input HDMI 4	8\x01s"022\x0D
Input OPS	8\x01s"102\x0D
Input VGA	8\x01s"000\x0D
Menu Navigation Down	8\x01s@011\x0D
Menu Navigation Exit	8\x01s@022\x0D
Menu Navigation Left	8\x01s@012\x0D
Menu Navigation Menu	8\x01s@020\x0D
Menu Navigation Ok	8\x01s@014\x0D
Menu Navigation Right	8\x01s@013\x0D
Menu Navigation Up	8\x01s@010\x0D
Power Off	8\x01s!002\x0D
Power On	8\x01s!001\x0D
Video Mute None	8\x01s@031\x0D
Volume Down	8\x01s5200\x0D
Volume Up	8\x01s5300\x0D

Appendix B. Update Commands

Aspect Ratio	8\x01gw000\x0D
Audio Mute Status	8\x01gg000\x0D
Button And IR Control	8\x01gi000\x0D
Input	8\x01gj000\x0D
Power	8\x01gl000\x0D
Volume Status	8\x01gf000\x0D