
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: BenQ
Firmware Version: N/A
Model(s): RP553K, RP653K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.1.0

Version History

Module Version	Date	Notes
1_0_3_0	2/18/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '98' and 'Broadcast'. When DeviceID is set to 'Broadcast' status is not supported by the module.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RP553K')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RP553K')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Default' 'Auto' '14:9'	Value '16:9' 'Panorama Mode' 'PC Mode'	Value '4:3' 'Just Scan'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Default')			
Command ButtonandIRControl	Value 'Enable'	Value 'Disable'	
# ButtonandIRControl example InterfaceName.Set('ButtonandIRControl', 'Enable')			
Command Freeze	Value None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command Input	Value 'VGA' 'HDMI 3' 'OPS'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'Android'
# Input example InterfaceName.Set('Input', 'VGA')			
Command MenuNavigation	Value 'Up' 'Right' 'Exit'	Value 'Down' 'Ok'	Value 'Left' 'Menu'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Mute	Value None		
# Mute example InterfaceName.Set('Mute', None)			
Command Power	Value 'On'	Value 'Off'	Value 'Android Off'
# Power example InterfaceName.Set('Power', 'On')			

Global Scripter Module Communication Sheet

Command	Value	Value
VolumeStep	'Up'	'Down'
# VolumeStep example InterfaceName.Set('VolumeStep', 'Up')		

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Default' 'Auto' '14:9'	Value '16:9' 'Panorama Mode' 'PC Mode'	Value '4:3' 'Just Scan'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ButtonandIRControl	Value 'Enable'	Value 'Disable'	
# ButtonandIRControl examples InterfaceName.Update('ButtonandIRControl') Value = InterfaceName.ReadStatus('ButtonandIRControl') InterfaceName.SubscribeStatus('ButtonandIRControl', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 3' 'OPS'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'Android'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	

Global Scripter Module Communication Sheet

MuteStatus	'On'	'Off'	
# MuteStatus examples InterfaceName.Update('MuteStatus') Value = InterfaceName.ReadStatus('MuteStatus') InterfaceName.SubscribeStatus('MuteStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Power	'On'	'Off'	'Android Off'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value		
VolumeStatus	0 – 100		
# VolumeStatus examples InterfaceName.Update('VolumeStatus') Value = InterfaceName.ReadStatus('VolumeStatus') InterfaceName.SubscribeStatus('VolumeStatus', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

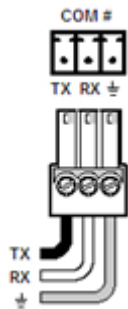

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

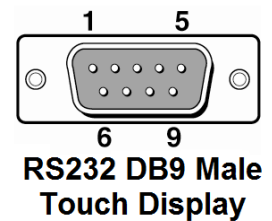

Appendix A. Set Commands (DeviceID 1)

Aspect Ratio 14:9	801s1006\x0D
Aspect Ratio 16:9	801s1001\x0D
Aspect Ratio 4:3	801s1002\x0D
Aspect Ratio Auto	801s1003\x0D
Aspect Ratio Default	801s1000\x0D
Aspect Ratio Just Scan	801s1005\x0D
Aspect Ratio Panorama Mode	801s1004\x0D
Aspect Ratio PC Mode	801s1007\x0D
Button and IR Control Disable	801sC000\x0D
Button and IR Control Enable	801sC001\x0D
Freeze None	801s!003\x0D
Input Android	801s"101\x0D
Input HDMI 1	801s"001\x0D
Input HDMI 2	801s"002\x0D
Input HDMI 3	801s"021\x0D
Input HDMI 4	801s"022\x0D
Input OPS	801s"102\x0D
Input VGA	801s"000\x0D
Menu Navigation Down	801s@011\x0D
Menu Navigation Exit	801s@022\x0D
Menu Navigation Left	801s@012\x0D
Menu Navigation Menu	801s@020\x0D
Menu Navigation Ok	801s@014\x0D
Menu Navigation Right	801s@013\x0D
Menu Navigation Up	801s@010\x0D
Mute None	801s6002\x0D
Power Android Off	801s!002\x0D
Power Off	801s!000\x0D
Power On	801s!001\x0D
Volume Step Down	801s5200\x0D
Volume Step Up	801s5300\x0D

Appendix B. Update Commands (DeviceID 1)

Aspect Ratio	801gw000\x0D
Button and IR Control	801gi000\x0D
Input	801gj000\x0D
Mute Status	88018gg000\x0D
Power	801gl000\x0D
Volume Status	3801gf000\x0D