

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: BenQ
Firmware Version: N/A
Model(s): RP840G, RP552, RP552H, RP653, RP703, RP750, RP750K, RP654K, RP704K, RP860K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.2

Version History

Module Version	Date	Notes
1_2_0_0	2/28/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set to ID of the device. Default value is '1'. DeviceID ranges from '1' to '98' and 'Broadcast'. If DeviceID is set to 'Broadcast', status is unavailable.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RP840G')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RP840G')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 4660, Model='RP840G')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AspectRatio	'16:9'	'4:3'	'Point To Point'
# AspectRatio example InterfaceName.Set('AspectRatio', '16:9')			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value		
AutoImage	None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value	Value	
ButtonAndIRControl	'Enable'	'Disable'	
# ButtonAndIRControl example InterfaceName.Set('ButtonAndIRControl', 'Enable')			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'Display Port'	'CVBS/AV'
	'Android'	'PC'	'VGA 1'
	'VGA 2'	'VGA 3'	'HDMI 4'
# Input example InterfaceName.Set('Input', 'VGA')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'Ok'	'Menu'
	'Exit'		
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			

Global Scripter Module Communication Sheet

Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'16:9'	'4:3'	'Point To Point'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ButtonAndIRControl	'Enable'	'Disable'	
# ButtonAndIRControl examples InterfaceName.Update('ButtonAndIRControl') Value = InterfaceName.ReadStatus('ButtonAndIRControl') InterfaceName.SubscribeStatus('ButtonAndIRControl', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'VGA'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'Display Port'	'CVBS/AV'
	'Android'	'PC'	'VGA 1'
	'VGA 2'	'VGA 3'	

<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>		
Command	Value	Value
Power	'On'	'Off'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command	Value	
Volume	0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

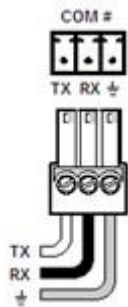

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

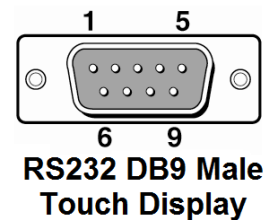

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	4660
Logon Credentials Supported:	No
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 16:9	8\x00\x01s1000\x0D
Aspect Ratio 4:3	8\x00\x01s1001\x0D
Aspect Ratio Point To Point	8\x00\x01s1002\x0D
Audio Mute Off	8\x00\x01s6000\x0D
Audio Mute On	8\x00\x01s6001\x0D
Auto Image None	8\x00\x01s\x8F000\x0D
Button And IR Control Disable	8\x00\x01sC000\x0D
Button And IR Control Enable	8\x00\x01sC001\x0D
Input Android	8\x00\x01s"101\x0D
Input CVBS/AV	8\x00\x01s"003\x0D
Input HDMI 1	8\x00\x01s"001\x0D
Input HDMI 2	8\x00\x01s"002\x0D
Input HDMI 3	8\x00\x01s"021\x0D
Input HDMI 4	8\x00\x01s"022\x0D
Input PC	8\x00\x01s"103\x0D
Input VGA 1	8\x00\x01s"000\x0D
Input VGA 2	8\x00\x01s"031\x0D
Input VGA 3	8\x00\x01s"032\x0D
Menu Navigation Down	8\x00\x01s@011\x0D
Menu Navigation Exit	8\x00\x01s@022\x0D
Menu Navigation Left	8\x00\x01s@012\x0D
Menu Navigation Menu	8\x00\x01s@020\x0D
Menu Navigation Ok	8\x00\x01s@014\x0D
Menu Navigation Right	8\x00\x01s@013\x0D
Menu Navigation Up	8\x00\x01s@010\x0D
Power Off	8\x00\x01s!002\x0D
Power On	8\x00\x01s!001\x0D
Volume 0	8\x00\x01s5000\x0D
Volume 100	8\x00\x01s5100\x0D

Appendix B. Update Commands

Aspect Ratio	8\x00\x01gw000\x0D
Audio Mute	8\x00\x01gg000\x0D
Button And IR Control	8\x00\x01gi000\x0D
Input	8\x00\x01gj000\x0D
Volume	8\x00\x01gf000\x0D