
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Audio Processor
Manufacturer: Biamp
Firmware Version: N/A
Model(s): Voica LSI-16e

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_1_0	7/16/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required for Ethernet control, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are 'admin' and 'admin' respectively.
Example: `InterfaceName.deviceUsername = 'admin'`
`InterfaceName.devicePassword = 'admin'`
- **Update Handshake must be sent to the device with an interval of 14 seconds or less** because the device will declare a bad communication if a matching token is not received within 15 seconds of the last good token sent out by the device.

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Voica LSI-16e')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Voica LSI-16e')
```

EthernetClass

```
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 8050, Model='Voica LSI-16e')
```

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command LocalSilence	Value None
# LocalSilence example InterfaceName.Set('LocalSilence', None)	
Command ResetSystemFault	Value None
# ResetSystemFault example InterfaceName.Set('ResetSystemFault', None)	
Command VirtualInput	Value 'Enable' Value 'Disable'
Qualifier Key 'Input'	Qualifier Value 1 to 500 in steps of 1
# VirtualInput example InterfaceName.Set('VirtualInput', 'Enable', {'Input': 500})	
Command VirtualInputGroup ¹	Value 'Enable' Value 'Disable'
Qualifier Key 'Lowest Input Number'	Qualifier Value 1 to 500 in steps of 1
Qualifier Key 'Highest Input Number'	Qualifier Value 1 to 500 in steps of 1
# VirtualInputGroup example InterfaceName.Set('VirtualInputGroup', 'Enable', {'Lowest Input Number': 500, 'Highest Input Number': 500})	

¹ 'Lowest Input Number' qualifier must have a value lower than the 'Highest Input Number' qualifier for this command to be sent.

Status Available

For all commands except Handshake, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
EmergencyZoneStatus	'Inactive'	'Muted'	'Announcing'
Qualifier Key	Qualifier Value		
'Zone ID'	'String'		
# EmergencyZoneStatus examples InterfaceName.Update('EmergencyZoneStatus', {'Zone ID': 'String'}) Value = InterfaceName.ReadStatus('EmergencyZoneStatus', {'Zone ID': 'String'}) InterfaceName.SubscribeStatus('EmergencyZoneStatus', None, FeedbackHandler)			
Command	Value		
Handshake ¹	None		
# Handshake examples InterfaceName.Update('Handshake')			
Command	Value	Value	Value
VirtualInputType	'Fault'	'Alarm'	'Reset'
	'Reset All'	'Silence All'	
Qualifier Key	Qualifier Value		
'Input'	1 to 500 in steps of 1		
# VirtualInputType examples InterfaceName.Update('VirtualInputType', {'Input': 500}) Value = InterfaceName.ReadStatus('VirtualInputType', {'Input': 500}) InterfaceName.SubscribeStatus('VirtualInputType', None, FeedbackHandler)			

¹ Please read 4th bullet point in the Module Notes section above.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 57600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

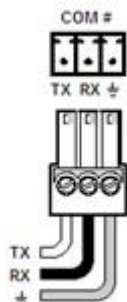

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

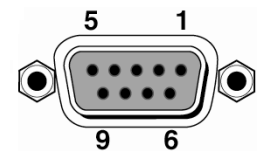

RS232 DB9, Female
Audio Processor

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	8050
Logon Credentials Supported:	Yes
Default Username:	admin
Default Password:	admin
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Local Silence None	F A
Reset System Fault None	R S
Virtual Input Disable Input 1	I 1 0
Virtual Input Enable Input 1	I 1 1
Virtual Input Disable Input 500	I 500 0
Virtual Input Enable Input 500	I 500 1
Virtual Input Group Disable Lowest Input Number 1 Highest Input Number 500	G 1-500 0
Virtual Input Group Enable Lowest Input Number 1 Highest Input Number 500	G 1-500 1

Appendix B. Update Commands

Emergency Zone Status Zone ID 1	Z Z 1
Emergency Zone Status Zone ID 2	Z Z 2
Virtual Input Type Input 500	Q I 500