

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Matrix Switcher
Manufacturer: Biamp
Firmware Version: N/A
Model(s): PMX84

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.03.0000-b006	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_0_0_0	11/2/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

ControlButtonEmulation	'1' – '40'		
['Device Number']	'1' – '4'	'Broadcast'	'1 & 2'
	'1 & 3'	'2 & 3'	'1 & 2 & 3'
	'1 & 4'	'2 & 4'	'3 % 4'
	'1 & 2 & 4'	'1 & 3 & 4'	'2 & 3 & 4'
	'1 & 2 & 3 & 4'		
DoButton	'0' – '199'		
['Device Number']	'1' – '8'		
DoLogic	'NOP'	'Turn Off'	'Turn On'
['Device Number']	'1' – '8'		
['Logic Output Number']	'1' – '16'		
DoMacro	'0' – '49'		
['Device Number']	'1' – '8'		
DoMatrixAction	'NOP'	'Turn Off'	'Turn On'
['Device Number']	'1' – '8'		
['Assignment Switch']	'In 1 - Out 1'	'In 1 - Out 2'	'In 1 - Out 3'
	'In 1 - Out 4'	'In 2 - Out 1'	'In 2 - Out 2'
	'In 2 - Out 3'	'In 2 - Out 4'	'In 3 - Out 1'
	'In 3 - Out 2'	'In 3 - Out 3'	'In 3 - Out 4'
	'In 4 - Out 1'	'In 4 - Out 2'	'In 4 - Out 3'
	'In 4 - Out 4'	'In 5 - Out 1'	'In 5 - Out 2'
	'In 5 - Out 3'	'In 5 - Out 4'	'In 6 - Out 1'
	'In 6 - Out 2'	'In 6 - Out 3'	'In 6 - Out 4'
	'In 7 - Out 1'	'In 7 - Out 2'	'In 7 - Out 3'
	'In 7 - Out 4'	'In 8 - Out 1'	'In 8 - Out 2'
	'In 8 - Out 3'	'In 8 - Out 4'	
LogicInputContacts	'Open'	'Close'	
['Input Contact Number']	'1' – '16'		
PowerUp/ResetEvent	None		
RemotePort	'1' – '40'		
['Port']	'1' – '4'		

Status Available:

ConnectionStatus	'Connected' 'Disconnected'
InputTieStatus	'1' – '4'
['Device Number']	'1' – '8'
['Input']	'1' – '8'
LogicStatus	'On' 'Off'
['Device Number']	'1' – '8'
['Logic Output Number']	'1' – '16'

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 2400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

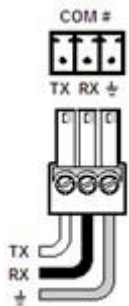

Signal	Main Cable	Pin	Signal
TxD		2	RxD
RxD		3	TxD
GND		5	GND

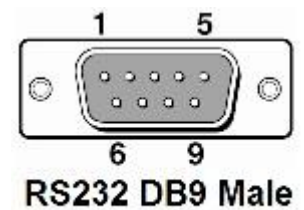

General Notes: