
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: Brahler
Firmware Version: N/A
Model(s): DIGIMIC DCen Central Control Unit

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	10/11/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DIGIMIC DCen Central Control Unit')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DIGIMIC DCen Central Control Unit')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3225, Model='DIGIMIC DCen Central Control Unit')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
MaximumDelegates	0 – 65535		
# MaximumDelegates example InterfaceName.Set('MaximumDelegates', 65535)			
Command	Value		
MaximumVIP	0 – 65535		
# MaximumVIP example InterfaceName.Set('MaximumVIP', 65535)			
Command	Value	Value	Value
Microphone	'On' 'Request Off'	'Off'	'Request On'
Qualifier Key	Qualifier Value		
'Line'	'0' – '3'		
Qualifier Key	Qualifier Value		
'Microphone'	0 to 1024 in steps of 1		
# Microphone example InterfaceName.Set('Microphone', 'On', {'Line': '0', 'Microphone': 1024})			
Command	Value	Value	
MuteMode	'Permanent'	'Temporary'	
# MuteMode example InterfaceName.Set('MuteMode', 'Permanent')			
Command	Value	Value	
MuteState	'On'	'Off'	
# MuteState example InterfaceName.Set('MuteState', 'On')			
Command	Value	Value	
PriorityMode	'On'	'Off'	
# PriorityMode example InterfaceName.Set('PriorityMode', 'On')			
Command	Value	Value	
PriorityState	'On'	'Off'	
# PriorityState example InterfaceName.Set('PriorityState', 'On')			
Command	Value		
Volume	0 to 65535 in steps of 1		
# Volume example InterfaceName.Set('Volume', 65535)			

Status Available

Commands do not support the Update function. All statuses are based on unsolicited responses from device.

Format with Qualifier:

```
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
```

FeedbackHandler will be called when any qualifier gets a new status.

Command	Value		
MaximumDelegates	0 – 65535		
# MaximumDelegates example Value = InterfaceName.ReadStatus('MaximumDelegates') InterfaceName.SubscribeStatus('MaximumDelegates', None, FeedbackHandler)			
Command	Value		
MaximumVIP	0 – 65535		
# MaximumVIP example Value = InterfaceName.ReadStatus('MaximumVIP') InterfaceName.SubscribeStatus('MaximumVIP', None, FeedbackHandler)			
Command	Value	Value	Value
Microphone	'On' 'Mute'	'Off' 'Request Off'	'Request On'
Qualifier Key 'Line'	Qualifier Value '0' – '3'		
Qualifier Key 'Microphone'	Qualifier Value 0 to 1024 in steps of 1		
# Microphone example Value = InterfaceName.ReadStatus('Microphone', {'Line': '0', 'Microphone': 1024}) InterfaceName.SubscribeStatus('Microphone', None, FeedbackHandler)			
Command	Value		
Volume	0 to 65535 in steps of 1		
# Volume example Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements


Notes for the Device

Serial communication


Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

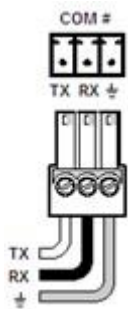

Please contact manufacturer for more information on pin diagram.

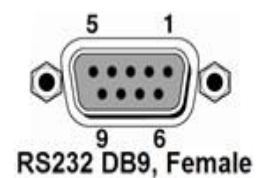

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	3225
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Maximum Delegates 0	\x0AMAXDEL;0000\x0D
Maximum Delegates 65535	\x0AMAXDEL;FFFF\x0D
Maximum VIP 0	\x0AMAXVIP;0000\x0D
Maximum VIP 65535	\x0AMAXVIP;FFFF\x0D
Microphone Off Microphone 0 Line 0	\x0AMIC-OFF;0000;\x0D
Microphone Off Microphone 0 Line 3	\x0AMIC-OFF;3000;\x0D
Microphone Off Microphone 1024 Line 0	\x0AMIC-OFF;0400;\x0D
Microphone Off Microphone 1024 Line 3	\x0AMIC-OFF;3400;\x0D
Microphone On Microphone 0 Line 0	\x0AMIC-ON;0000;\x0D
Microphone On Microphone 0 Line 3	\x0AMIC-ON;3000;\x0D
Microphone On Microphone 1024 Line 0	\x0AMIC-ON;0400;\x0D
Microphone On Microphone 1024 Line 3	\x0AMIC-ON;3400;\x0D
Microphone Request Off Microphone 0 Line 0	\x0AREQ-OFF;0000;\x0D
Microphone Request Off Microphone 0 Line 3	\x0AREQ-OFF;3000;\x0D
Microphone Request Off Microphone 1024 Line 0	\x0AREQ-OFF;0400;\x0D
Microphone Request Off Microphone 1024 Line 3	\x0AREQ-OFF;3400;\x0D
Microphone Request On Microphone 0 Line 0	\x0AREQ-ON;0000;\x0D
Microphone Request On Microphone 0 Line 3	\x0AREQ-ON;3000;\x0D
Microphone Request On Microphone 1024 Line 0	\x0AREQ-ON;0400;\x0D
Microphone Request On Microphone 1024 Line 3	\x0AREQ-ON;3400;\x0D
Mute Mode Permanent	\x0AMUTEMODE;PERM\x0D
Mute Mode Temporary	\x0AMUTEMODE;TEMP\x0D
Mute State Off	\x0AMUTESTATE;OFF\x0D
Mute State On	\x0AMUTESTATE;ON\x0D
Priority Mode Off	\x0APRIOMODE;OFF\x0D
Priority Mode On	\x0APRIOMODE;ON\x0D
Priority State Off	\x0APRIOSTATE;OFF\x0D
Priority State On	\x0APRIOSTATE;ON\x0D
Volume 0	\x0AVOLUME;0000\x0D
Volume 65535	\x0AVOLUME;FFFF\x0D