

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

---

---

## Device Specifications

Device Type: Other  
Manufacturer: BRG Precision Products  
Firmware Version: N/A  
Model(s): CB625-L5

## Tested on the Following Software and Firmware Versions

| IP Link Pro Control Processor Firmware | Global Scriptor Version |
|----------------------------------------|-------------------------|
| 2.06.0002-b002                         | 1.4.1                   |

## Version History

| Module Version | Date       | Notes           |
|----------------|------------|-----------------|
| 1_0_0_0        | 12/27/2017 | Initial Version |

---

## Module Notes

- DeviceID variable must be set accordingly. Default value is '1'. Device ID ranges from '1' to '99' or 'Broadcast'.  
Example: InterfaceName.DeviceID = '1'
- Status is not supported.

## Supported Classes and Examples

|                                                                                               |
|-----------------------------------------------------------------------------------------------|
| <b>SerialClass</b>                                                                            |
| InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CB625-L5')               |
| <b>SerialOverEthernetClass</b>                                                                |
| InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CB625-L5') |
| <b>EthernetClass</b>                                                                          |
| InterfaceName = ModuleName.EthernetClass('192.168.254.254', 16000, Model='CB625-L5')          |

## Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

|                                                                                                                           |                                                 |                                           |                       |
|---------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|-------------------------------------------|-----------------------|
| Command<br>Alarm                                                                                                          | Value<br>'On'                                   | Value<br>'Off'                            | Value<br>'Disable'    |
| # Alarm example<br>InterfaceName.Set('Alarm', 'On')                                                                       |                                                 |                                           |                       |
| Command<br>AlarmDuration                                                                                                  | Value<br>0 to 50 in steps of 1                  |                                           |                       |
| # AlarmDuration example<br>InterfaceName.Set('AlarmDuration', 50)                                                         |                                                 |                                           |                       |
| Command<br>AlarmTime                                                                                                      | Value<br>None                                   |                                           |                       |
| Qualifier Key<br>'Position'                                                                                               | Qualifier Value<br>'1' – '99'                   |                                           |                       |
| Qualifier Key<br>'Seconds'                                                                                                | Qualifier Value<br>0 to 60 in steps of 1        |                                           |                       |
| Qualifier Key<br>'Minutes'                                                                                                | Qualifier Value<br>0 to 60 in steps of 1        |                                           |                       |
| Qualifier Key<br>'Hours'                                                                                                  | Qualifier Value<br>0 to 99 in steps of 1        |                                           |                       |
| # AlarmTime example<br>InterfaceName.Set('AlarmTime', None, {'Position': '1', 'Seconds': 60, 'Minutes': 60, 'Hours': 99}) |                                                 |                                           |                       |
| Command<br>CounterSet                                                                                                     | Value<br>-99999999 – 99999999                   |                                           |                       |
| # CounterSet example<br>InterfaceName.Set('CounterSet', 1E+08)                                                            |                                                 |                                           |                       |
| Command<br>CounterTime                                                                                                    | Value<br>-99999999 to 99999999 in<br>steps of 1 |                                           |                       |
| Qualifier Key<br>'Type'                                                                                                   | Qualifier Value<br>'Start'                      | Qualifier Value<br>'End'                  |                       |
| # CounterTime example<br>InterfaceName.Set('CounterTime', 1E+08, {'Type': 'Start'})                                       |                                                 |                                           |                       |
| Command<br>OperatingMode                                                                                                  | Value<br>'Real Time Clock'<br><br>'Up Counter'  | Value<br>'Up Timer'<br><br>'Down Counter' | Value<br>'Down Timer' |

## Global Scripter Module Communication Sheet

|                                                                                                                           |                                                         |                                               |                                      |
|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|-----------------------------------------------|--------------------------------------|
| # OperatingMode example<br>InterfaceName.Set('OperatingMode', 'Real Time Clock')                                          |                                                         |                                               |                                      |
| Command<br>PresetRecall                                                                                                   | Value<br>None                                           |                                               |                                      |
| # PresetRecall example<br>InterfaceName.Set('PresetRecall', None)                                                         |                                                         |                                               |                                      |
| Command<br>PresetSave                                                                                                     | Value<br>None                                           |                                               |                                      |
| # PresetSave example<br>InterfaceName.Set('PresetSave', None)                                                             |                                                         |                                               |                                      |
| Command<br>TimerControlOperatingMode                                                                                      | Value<br>'Resume real time'                             | Value<br>'Stay in timer mode'                 | Value<br>'Enable split time display' |
|                                                                                                                           | 'Enable alarm schedule switching'                       |                                               |                                      |
| # TimerControlOperatingMode example<br>InterfaceName.Set('TimerControlOperatingMode', 'Resume real time')                 |                                                         |                                               |                                      |
| Command<br>TimerControlTimerCounterDirection                                                                              | Value<br>'Up'                                           | Value<br>'Down'                               |                                      |
| # TimerControlTimerCounterDirection example<br>InterfaceName.Set('TimerControlTimerCounterDirection', 'Up')               |                                                         |                                               |                                      |
| Command<br>TimerTime                                                                                                      | Value<br>None                                           |                                               |                                      |
| Qualifier Key<br>'Type'                                                                                                   | Qualifier Value<br>'Start'                              | Qualifier Value<br>'End'                      |                                      |
| Qualifier Key<br>'Seconds'                                                                                                | Qualifier Value<br>0 to 60 in steps of 1                |                                               |                                      |
| Qualifier Key<br>'Minutes'                                                                                                | Qualifier Value<br>0 to 60 in steps of 1                |                                               |                                      |
| Qualifier Key<br>'Hours'                                                                                                  | Qualifier Value<br>0 to 99 in steps of 1                |                                               |                                      |
| # TimerTime example<br>InterfaceName.Set('TimerTime', None, {'Type': 'Start', 'Seconds': 60, 'Minutes': 60, 'Hours': 99}) |                                                         |                                               |                                      |
| Command<br>TimerCounterControl                                                                                            | Value<br>'Start Timer/Pause<br>Timer/Increment Counter' | Value<br>'Timer Control/Decrement<br>Counter' | Value<br>'Reset'                     |
| # TimerCounterControl example<br>InterfaceName.Set('TimerCounterControl', 'Start Timer/Pause Timer/Increment Counter')    |                                                         |                                               |                                      |

---

## Cable and Adapter Requirements

Please contact manufacturer for Cable and Adapter Requirements

## Notes for the Device

---

### Serial communication

**Port Type:** RS-422

**Baud Rate:** 9600


**Data Bits:** 8

**Parity:** None

**Stop Bits:** One

**Flow Control:** None

### Pin Assignments Diagram

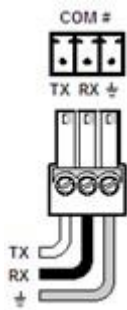

Please contact manufacturer for pin assignments diagram and connector type.

---

---

## Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

|                            |              |
|----------------------------|--------------|
| <b>Port Type:</b>          | Ethernet     |
| <b>Device Listen Port:</b> | 16000        |
| <b>Device Reply Port:</b>  | 16001        |
| <b>Logon Credentials</b>   | No           |
| <b>Supported:</b>          |              |
| <b>Multi-Connection</b>    | Undetermined |
| <b>Capabilities:</b>       |              |
| <b>Port Changeability:</b> | Yes          |

---

---

## Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

## Notes for the Device

**Appendix A. Set Commands**

Command below only work when DeviceID is set to '1'

|                                                                   |                |   |
|-------------------------------------------------------------------|----------------|---|
| <b>Alarm Disable</b>                                              | *!014900       | # |
| <b>Alarm Off</b>                                                  | *!014902       | # |
| <b>Alarm On</b>                                                   | *!014901       | # |
| <b>Alarm Duration 0</b>                                           | *!014800       | # |
| <b>Alarm Duration 50</b>                                          | *!014850       | # |
| <b>Alarm Time None Hours 0 Position 1 Seconds 0 Minutes 0</b>     | *!014101000000 | # |
| <b>Alarm Time None Hours 99 Position 1 Seconds 0 Minutes 0</b>    | *!014101000099 | # |
| <b>Alarm Time None Hours 0 Position 1 Seconds 0 Minutes 60</b>    | *!014101006000 | # |
| <b>Alarm Time None Hours 99 Position 1 Seconds 0 Minutes 60</b>   | *!014101006099 | # |
| <b>Alarm Time None Hours 0 Position 1 Seconds 60 Minutes 0</b>    | *!014101600000 | # |
| <b>Alarm Time None Hours 99 Position 1 Seconds 60 Minutes 0</b>   | *!014101600099 | # |
| <b>Alarm Time None Hours 0 Position 1 Seconds 60 Minutes 60</b>   | *!014101606000 | # |
| <b>Alarm Time None Hours 99 Position 1 Seconds 60 Minutes 60</b>  | *!014101606099 | # |
| <b>Alarm Time None Hours 0 Position 99 Seconds 0 Minutes 0</b>    | *!014199000000 | # |
| <b>Alarm Time None Hours 99 Position 99 Seconds 0 Minutes 0</b>   | *!014199000099 | # |
| <b>Alarm Time None Hours 0 Position 99 Seconds 0 Minutes 60</b>   | *!014199006000 | # |
| <b>Alarm Time None Hours 99 Position 99 Seconds 0 Minutes 60</b>  | *!014199006099 | # |
| <b>Alarm Time None Hours 0 Position 99 Seconds 60 Minutes 0</b>   | *!014199600000 | # |
| <b>Alarm Time None Hours 99 Position 99 Seconds 60 Minutes 0</b>  | *!014199600099 | # |
| <b>Alarm Time None Hours 0 Position 99 Seconds 60 Minutes 60</b>  | *!014199606000 | # |
| <b>Alarm Time None Hours 99 Position 99 Seconds 60 Minutes 60</b> | *!014199606099 | # |

# Global Scripter Module Communication Sheet

Revision: 12/27/2017

|                                                                         |                 |   |
|-------------------------------------------------------------------------|-----------------|---|
| <b>Counter Set -99999999</b>                                            | *!0157-99999999 | # |
| <b>Counter Set 99999999</b>                                             | *!0157099999999 | # |
| <b>Counter Time -99999999 Type End</b>                                  | *!0155-99999999 | # |
| <b>Counter Time 99999999 Type End</b>                                   | *!0155099999999 | # |
| <b>Counter Time -99999999 Type Start</b>                                | *!0156-99999999 | # |
| <b>Counter Time 99999999 Type Start</b>                                 | *!0156099999999 | # |
| <b>Operating Mode Down Counter</b>                                      | *!01105         | # |
| <b>Operating Mode Down Timer</b>                                        | *!01103         | # |
| <b>Operating Mode Real Time Clock</b>                                   | *!01101         | # |
| <b>Operating Mode Up Counter</b>                                        | *!01104         | # |
| <b>Operating Mode Up Timer</b>                                          | *!01102         | # |
| <b>Preset Recall None</b>                                               | *!0113          | # |
| <b>Preset Save None</b>                                                 | *!0112          | # |
| <b>Timer Control Operating Mode Enable alarm<br/>schedule switching</b> | *!01654         | # |
| <b>Timer Control Operating Mode Enable split time<br/>display</b>       | *!01653         | # |
| <b>Timer Control Operating Mode Resume real time</b>                    | *!01651         | # |
| <b>Timer Control Operating Mode Stay in timer mode</b>                  | *!01652         | # |
| <b>Timer Control Timer/Counter Direction Down</b>                       | *!01661         | # |
| <b>Timer Control Timer/Counter Direction Up</b>                         | *!01660         | # |
| <b>Timer Time None Hours 0 Seconds 0 Minutes 0 Type<br/>End</b>         | *!0152000000    | # |
| <b>Timer Time None Hours 99 Seconds 0 Minutes 0 Type<br/>End</b>        | *!0152000099    | # |
| <b>Timer Time None Hours 0 Seconds 0 Minutes 60 Type<br/>End</b>        | *!0152006000    | # |
| <b>Timer Time None Hours 99 Seconds 0 Minutes 60<br/>Type End</b>       | *!0152006099    | # |
| <b>Timer Time None Hours 0 Seconds 60 Minutes 0 Type<br/>End</b>        | *!0152600000    | # |
| <b>Timer Time None Hours 99 Seconds 60 Minutes 0<br/>Type End</b>       | *!0152600099    | # |
| <b>Timer Time None Hours 0 Seconds 60 Minutes 60<br/>Type End</b>       | *!0152606000    | # |
| <b>Timer Time None Hours 99 Seconds 60 Minutes 60<br/>Type End</b>      | *!0152606099    | # |
| <b>Timer Time None Hours 0 Seconds 0 Minutes 0 Type<br/>Start</b>       | *!0153000000    | # |



## Global Scripter Module Communication Sheet

Revision: 12/27/2017

|                                                                            |              |   |
|----------------------------------------------------------------------------|--------------|---|
| <b>Timer Time None Hours 99 Seconds 0 Minutes 0 Type Start</b>             | *!0153000099 | # |
| <b>Timer Time None Hours 0 Seconds 0 Minutes 60 Type Start</b>             | *!0153006000 | # |
| <b>Timer Time None Hours 99 Seconds 0 Minutes 60 Type Start</b>            | *!0153006099 | # |
| <b>Timer Time None Hours 0 Seconds 60 Minutes 0 Type Start</b>             | *!0153600000 | # |
| <b>Timer Time None Hours 99 Seconds 60 Minutes 0 Type Start</b>            | *!0153600099 | # |
| <b>Timer Time None Hours 0 Seconds 60 Minutes 60 Type Start</b>            | *!0153606000 | # |
| <b>Timer Time None Hours 99 Seconds 60 Minutes 60 Type Start</b>           | *!0153606099 | # |
| <b>Timer/Counter Control Reset</b>                                         | *!0163       | # |
| <b>Timer/Counter Control Start Timer/Pause<br/>Timer/Increment Counter</b> | *!0161       | # |
| <b>Timer/Counter Control Timer Control/Decrement Counter</b>               | *!0162       | # |