

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Matrix Switcher
Manufacturer: Bridge
Firmware Version: N/A
Model(s): RS 8x8, RS 8x4

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	12/21/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- In order to obtain InputTieStatus and OutputTieStatus you must use the MatrixStatus command.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RS 8x8')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RS 8x8')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5000, Model='RS 8x8')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command MatrixTieCommand	Value 'String'
Qualifier Key 'Input'	Qualifier Value '1' – '8'
Qualifier Key 'Output'	Qualifier Value '1' – '8'
# MatrixTieCommand example InterfaceName.Set('MatrixTieCommand', 'String', {'Input': '1', 'Output': '1'})	
Command PresetRecall	Value '1' – '4'
# PresetRecall example InterfaceName.Set('PresetRecall', '1')	
Command PresetSave	Value '1' – '4'
# PresetSave example InterfaceName.Set('PresetSave', '1')	

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, InputTieStatus and OutputTieStatus do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
InputTieStatus	'Tied'	'Untied'
Qualifier Key	Qualifier Value	
'Input'	'1' – '8'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '8'	
# InputTieStatus examples Value = InterfaceName.ReadStatus('InputTieStatus', {'Input': '1', 'Output': '1'}) InterfaceName.SubscribeStatus('InputTieStatus', None, FeedbackHandler)		
Command	Value	
MatrixStatus	None	
# MatrixStatus example InterfaceName.Update('MatrixStatus')		
Command	Value	
OutputTieStatus	'1' – '8'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '8'	
# OutputTieStatus examples Value = InterfaceName.ReadStatus('OutputTieStatus', {'Output': '1'}) InterfaceName.SubscribeStatus('OutputTieStatus', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to RJ-45 Cable


Notes for the Device

Serial communication

Port Type: RS-422
Baud Rate: 38400
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

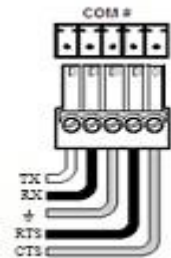

Please refer to manufacturer for the pin diagram details.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	5000
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Matrix Tie Command None Input 1 Output 1	!03010000000000*4B?
Matrix Tie Command None Input 1 Output 8	!03010000000700*44?
Matrix Tie Command None Input 8 Output 1	!03010000000007*44?
Matrix Tie Command None Input 8 Output 8	!03010000000707*4D?
Matrix Tie Command None Input 1 Output 4	!03010000000300*48?
Matrix Tie Command None Input 8 Output 4	!03010000000307*51?
Preset Recall 1	!03010400000000*47?
Preset Recall 4	!03010400000300*54?
Preset Save 1	!03010500000000*46?
Preset Save 4	!03010500000300*53?

Appendix B. Update Commands

Matrix Status	!03010300000000*58?
----------------------	---------------------